
Dozer
96 Inch

Bobcat®

Service Manual

(96 Inch) S/N 224400101 & Above

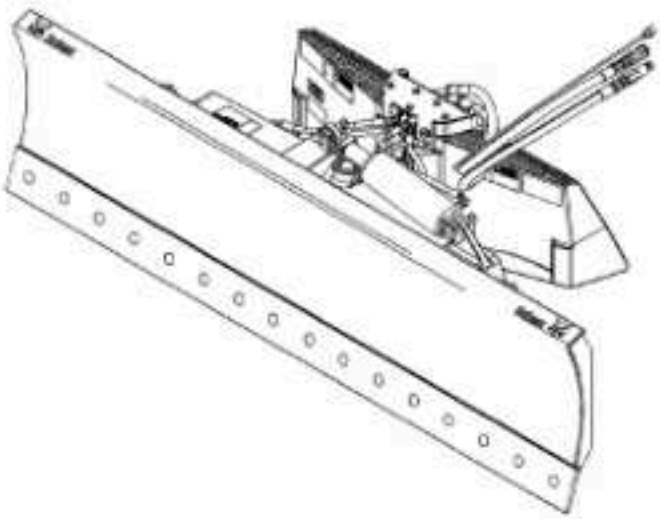

Ingersoll Rand
Compact Vehicle Technologies

6903383 (1-06)

Printed in U.S.A.

© Bobcat Company 2006

MidWestTech | Bobcat 96 inch Dozer Service Manual | Publication 6903383_1_06

Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

ACD (ATTACHMENT CONTROL DEVICE) 30-10-1
ATTACHMENT DELIVERY REPORT III
CUTTING EDGE 30-40-1
ELECTRICAL SCHEMATIC-7 PIN CONNECTOR SPEC-20-1
ELECTRICAL SCHEMATIC-7 PIN CONNECTOR
WITH 14 PIN ADAPTER HARNESS SPEC-20-1
HYDRAULIC CONTROL VALVE 20-10-1
HYDRAULIC CYLINDER 20-20-1
HYDRAULIC SCHEMATIC SPEC-30-1
INSPECTION 10-20-1
IDENTIFICATION IV
MOLDBOARD 30-20-1
MOUNTING FRAME AND ROTATING SECTION 30-30-1
LUBRICATION 10-40-1
SERIAL NUMBER LOCATION III
SPECIFICATIONS SPEC-10-1
TROUBLESHOOTING 10-10-1

MidWestTech | Bobcat 96 inch Dozer Service Manual | Publication 6903383_1_06 Order the manual at mid-west-tech.com >

CONTENTS

ATTACHMENT DELIVERY REPORT III

IDENTIFICATION AND MACHINE SIGNS (DECALS) IV

SERIAL NUMBER LOCATION III

SAFETY AND MAINTENANCE. 10-01

HYDRAULIC SYSTEM 20-01

MAIN FRAME 30-01

SPECIFICATIONS AND SCHEMATICS SPEC-01

CALIFORNIA

PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

MidWestTech | Bobcat 96 inch Dozer Service Manual | Publication 6903383_1_06

Order the manual at mid-west-tech.com >


PROBLEM	CAUSE	CORRECTION
Dozer does not mount properly on the Bob-Tach.	Bob-Tach wedges are not fully retracted before installation.	Retract Bob-Tach wedges before installation.
	Mud, dirt or stones are lodged between the Bob-Tach and the Dozer mount.	Remove debris between Bob-Tach and Dozer mount.
Dozer does not rotate or oscillate.	No hydraulic flow.	Activate loader front auxiliary hydraulics.
		Check quick couplers connection. Check for damaged hose ends and fittings.
	Electrical harness not installed.	Install electrical harness from the Dozer to the loader.
	No electrical current flow through harness.	Check Dozer electrical harness for damage to connector or harness.

MidWestTech | Bobcat 96 inch Dozer Service Manual | Publication 6903383_1_06

Order the manual at mid-west-tech.com >

SPECIFICATIONS


- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

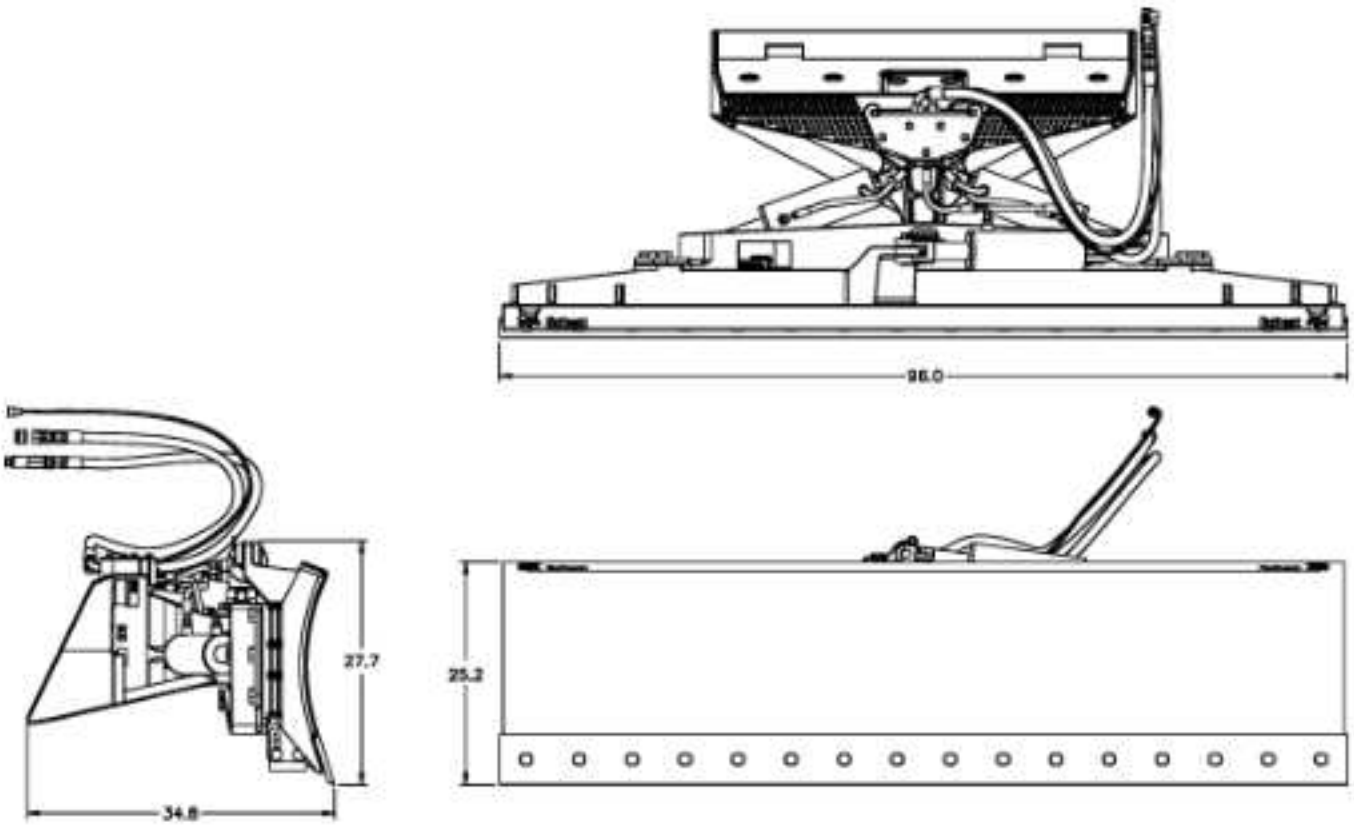

Dozer	
Description	**96 Inch**
Operating Weight	1580 lb.
Shipping Weight	1630 lb.
Cutting Width	96"
Cutting Width Fully Angled	83.5"
Moldboard Height	25.2"
Height	27.7"
Length	34.8"
Oscillation	+/- 10 deg
Angle	+/- 30 deg
Cutting Edge (reversible)	0.63" x 6"

MidWestTech | Bobcat 96 inch Dozer Service Manual | Publication 6903383_1_06

Order the manual at mid-west-tech.com >

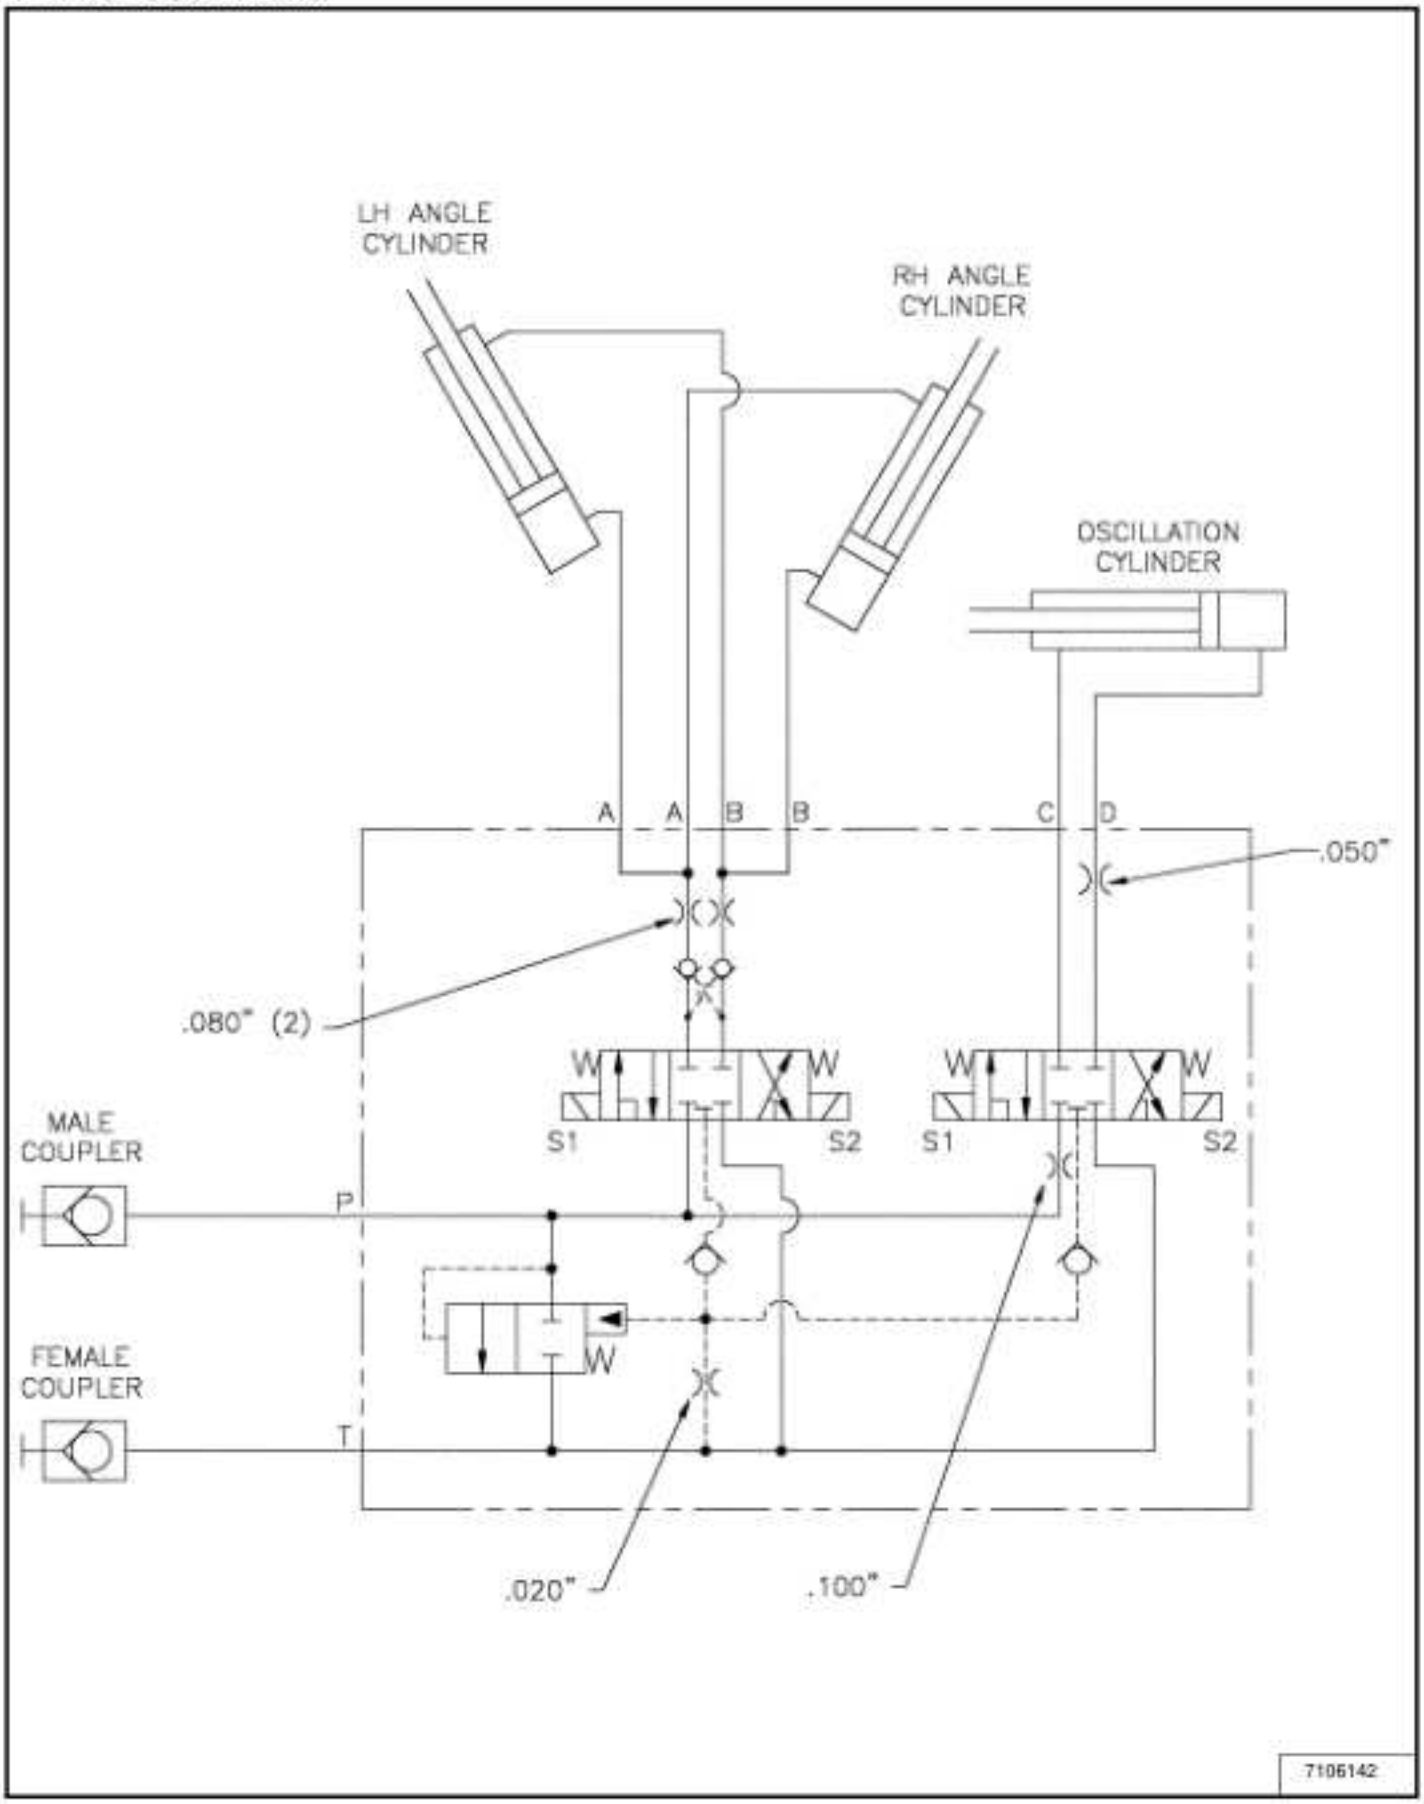

MidWestTech | Bobcat 96 inch Dozer Service Manual | Publication 6903383_1_06

Order the manual at mid-west-tech.com >