
320
320L

Bobcat®

Service Manual

S/N 224511001 & Above

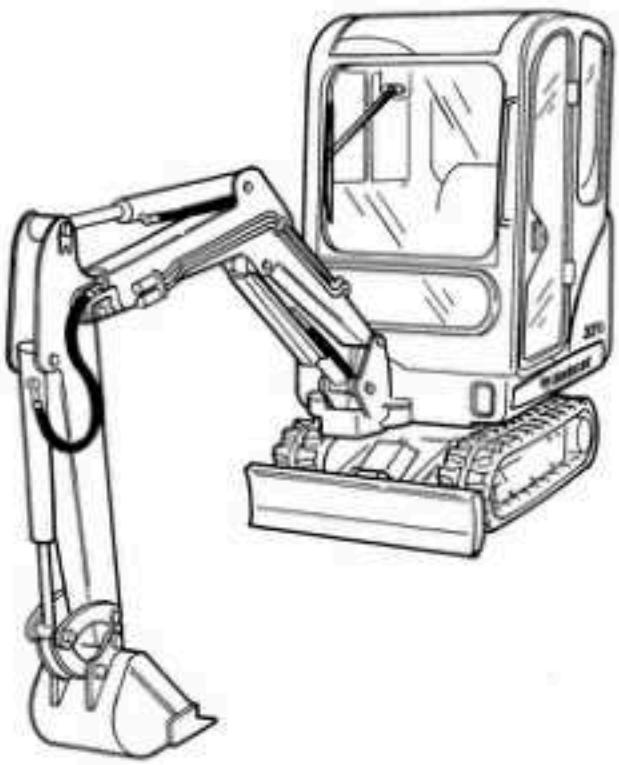

6903818 (11-06)

Printed in U.S.A.

©Bobcat Company 2006

MidWestTech | Bobcat 320, 320L Excavator Service Manual | Publication 6903818_11_06

Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

AIR CLEANER 60-01
AIRCLEANER SERVICE 10-01
ALTERNATOR 50-01
ALTERNATOR BELT 10-01
ARM 40-01
ARM CYLINDER 20-01

BATTERY 50-01
BLADE 30-01
BLADE CONTROL 40-01
BLADE CYLINDER 20-01
BLADE EXTENSION TRAY 40-01
BLADE/TRACK EXPANSION SOLENOID BLOCK 20-01
BOOM 40-01
BOOM CYLINDER 20-01
BOOM SWING CYLINDER 20-01
BUCKET 40-01
BUCKET CYLINDER 20-01

CAB 40-01
CONTROL CONSOLE LOCKOUTS 10-01
CONTROL LINKAGE ASSEMBLY 40-01
CONTROL PATTERN SELECTOR VALVE 20-01
CONVERSIONS SPEC-01
CROSSPORT RELIEF VALVES 20-01

ELECTRICAL SYSTEM 50-01
ENGINE 60-01
ENGINE COMPONENTS AND TESTING 60-01
ENGINE COOLING SYSTEM 10-01
ENGINE FLYWHEEL 60-01
ENGINE LUBRICATION SYSTEM 10-01
ENGINE SPECIFICATIONS SPEC-01
ENGINE SPEED CONTROL 40-01

FLOORMAT AND FLOORPLATES 40-01
FUEL, COOLANT AND LUBRICANTS SPEC-01
FUEL LEVEL SENDER 50-01
FUEL SYSTEM 10-01
FUEL TANK 40-01

HEATER AIR FILTERS 10-01
HEATER 70-01
HORN 40-01
HYDRAULIC CONNECTION SPECIFICATIONS SPEC-01
HYDRAULIC CONTROL VALVE 20-01
HYDRAULIC FILTER MOUNT 20-01
HYDRAULIC FLUID SPECIFICATIONS SPEC-01
HYDRAULIC PUMP 20-01
HYDRAULIC RESERVOIR 20-01
HYDRAULIC SYSTEM 10-01
HYDRAULIC SYSTEM INFORMATION 20-01

LEFT CONSOLE 40-01
LEFT CONTROL LEVER (JOYSTICK) 20-01
LEFT PEDAL 40-01
LIFTING AND BLOCKING THE EXCAVATOR 10-01
LIFTING THE EXCAVATOR 10-01
LIGHTS 50-01
LUBRICATION OF THE HYD. EXCAVATOR 10-01

MAIN RELIEF VALVE 20-01
MANIFOLD ASSEMBLY/ACCUMULATOR 20-01
MICROSWITCH 50-01

OIL COOLER 20-01
OPERATOR CAB (ROPS/TOPS) 10-01

PORT RELIEF VALVES 20-01
PRESSURE REDUCING VALVE 20-01

RADIATOR 60-01
RECONDITIONING THE ENGINE 60-01
RIGHT CONSOLE 40-01
RIGHT CONTROL LEVER (JOYSTICK) 20-01
RIGHT PEDAL AND LINKAGE 40-01
ROPS CANOPY 40-01

SEAT AND SEAT MOUNT 40-01
SEAT BELT 10-01
SERVICE SCHEDULE 10-01
SPARK ARRESTOR MUFFLER ..... 10-01 & 60-01
SPECIFICATIONS SPEC-01
STARTER 50-01
SWING CIRCLE GEAR 30-01
SWING FRAME 40-01
SLEW LOCK 40-01
SWING MOTOR 20-01
SWIVEL JOINT 20-01

TAILGATE 40-01
TORQUE SPECIFICATIONS SPEC-01
TRACK DAMAGE IDENTIFICATION 30-01
TRACK FRAME 30-01
TRACK IDLER 30-01
TRACK FRAME EXPANSION CYLINDER 20-01
TRACK ROLLER 30-01
TRACKS 30-01
TRANSPORTING THE EXCAVATOR 10-01
TRAVEL CONTROLS 40-01
TRAVEL MOTOR ..... 10-01 & 20-01
TROUBLESHOOTING 60-01
TWO SPEED SWITCH 50-01
TWO-SPEED SWITCH - PILOT 50-01

UPPERSTRUCTURE 40-01
UPPERSTRUCTURE SLEW LOCK 10-01

MidWestTech | Bobcat 320, 320L Excavator Service Manual | Publication 6903818_11_06 Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY INSTRUCTIONS V

SERIAL NUMBER LOCATIONS IX

DELIVERY REPORT X

BOBCAT EXCAVATOR IDENTIFICATION XI

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

UNDERCARRIAGE 30-01

UPPERSTRUCTURE & SWING SECTION 40-01

ELECTRICAL SYSTEM AND ANALYSIS 50-01

ENGINE SERVICE 60-01


HEATER 70-01

SPECIFICATIONS SPEC-01

MidWestTech | Bobcat 320, 320L Excavator Service Manual | Publication 6903818_11_06 Order the manual at mid-west-tech.com >


Front Window Removal And Installation

Figure 40-30-13

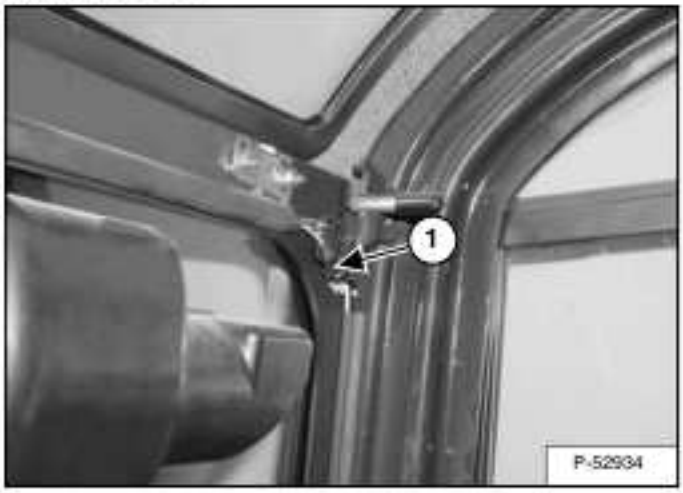


Disconnect the wire harness (Item 1) **[Figure 40-30-13]**.

Figure 40-30-14

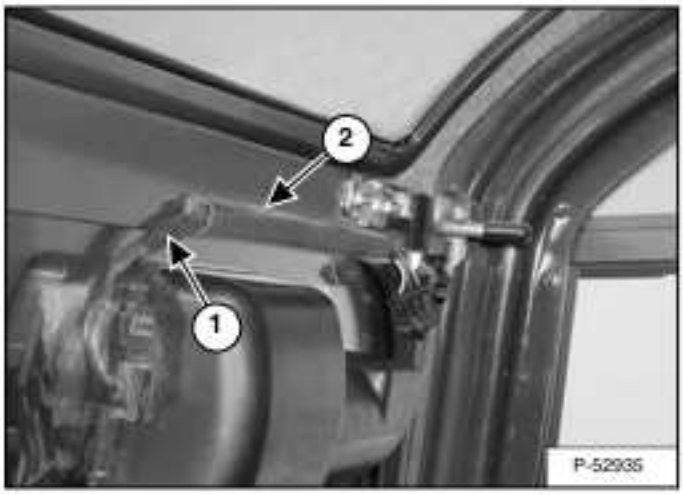


Remove the wire harness (Item 1) from the channel (Item 2) **[Figure 40-30-14]**.

Figure 40-30-15

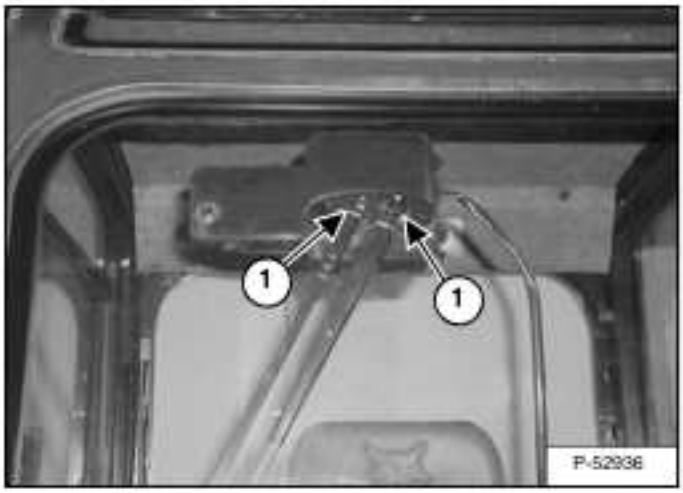

Remove the nuts (Item 1) **[Figure 40-30-15]**.

Figure 40-30-16

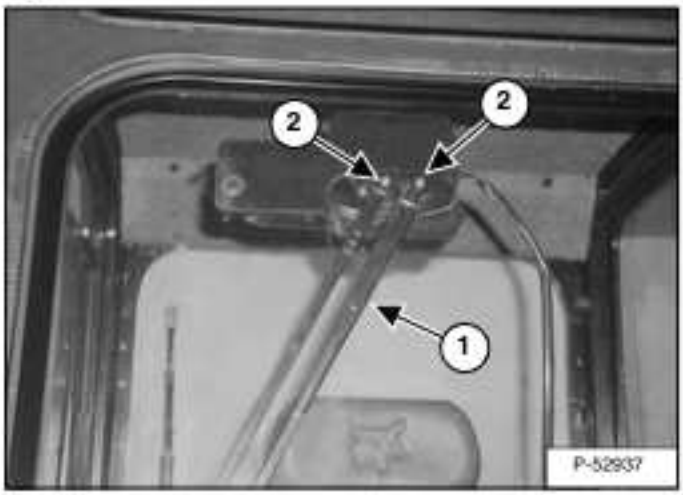

Remove the wiper assembly (Item 1) from the pivot mounts (Item 2) **[Figure 40-30-16]**.

MidWestTech | Bobcat 320, 320L Excavator Service Manual | Publication 6903818_11_06 Order the manual at mid-west-tech.com >

SLEW LOCK

Removal And Installation

Remove the seat and seat mount. (See Removal And Installation on Page 40-40-1.)

Remove the blade extension tray. (See Removal And Installation (320 Only) on Page 40-150-1.)


Remove the battery. (See Removing And Installing The Battery on Page 50-20-2.)

Figure 40-90-1



Remove the lever knob (Item 1) from the slew lock lever (Item 2) **[Figure 40-90-1]**.

Figure 40-90-2

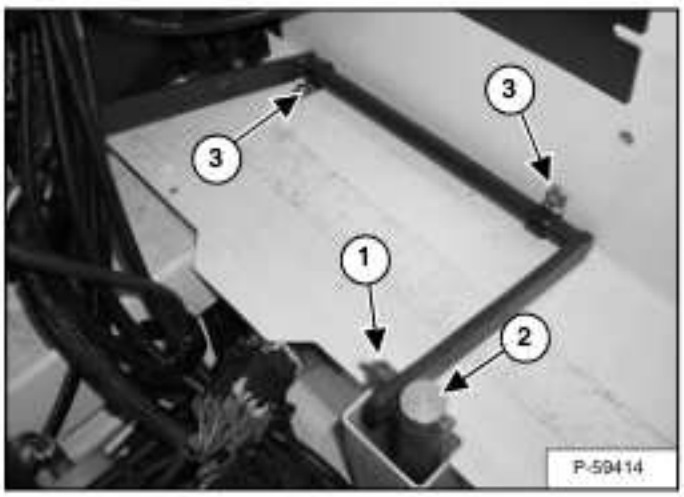

Remove the nuts and bolt (Item 1) from the slew lock lever and pin (Item 2) **[Figure 40-90-2]**. Remove the slew lock pin.

Remove the bolts (Item 3) **[Figure 40-90-2]** from the lever.

Remove the lever.

MidWestTech | Bobcat 320, 320L Excavator Service Manual | Publication 6903818_11_06 Order the manual at mid-west-tech.com >

Performance

Operating weight (w/ 20 inch Bucket)	w/ Canopy 3484 lb. (1580 kg) w/ Cab 3694 lb. (1675 kg)
Travel Speed	(320/320L) Low .97 mph (1,56 km/hr.) (320 Only) High 1.89 mph (3,04 km/hr.)

Controls

Steering	Two hand levers or foot pedals
Hydraulics	Two hand operated levers (joysticks) control boom, bucket, arm and upperstructure slew. One hand operated lever control blade.
Brakes Travel Service & Parking Swing Service Holding	 Hydraulic lock in motor circuit Hydraulic lock on motor Locking Pin

Engine

Make/Model	Kubota D722-E2B
Fuel/Cooling	Diesel/Liquid (Antifreeze mixture)
Horsepower (SAE Net)	15.7 HP (11,7 kW) @ 3000 RPM
Number Of Cylinders	Three
Lubrication	Pressure System with Filter
Air Cleaner	Dry replaceable cartridge
Maximum Governed Speed	3150 RPM
Displacement	43.9 cu.in. (0,72 L)
Bore x Stroke	2.64 in. x 2.68 in. (67 mm x 68 mm)

MidWestTech | Bobcat 320, 320L Excavator Service Manual | Publication 6903818_11_06 Order the manual at mid-west-tech.com >