
B-250

Bobcat®

Operation & Maintenance Manual

S/N 572911001 & Above
B Series

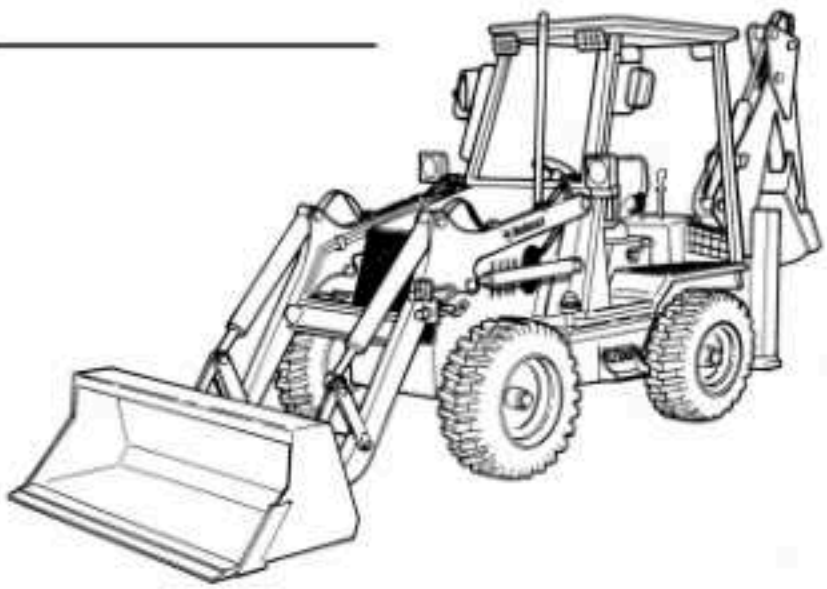

An Ingersoll Rand business
Printed in U.S.A.

6903856 (1-05) Revised (5-05) (1)

©Bobcat Company 2005

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY XI

OPERATING INSTRUCTIONS OI-1

PREVENTIVE MAINTENANCE PM-1

MACHINE SIGN TRANSLATIONS MST-1

SPECIFICATIONS SPEC-1

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat Loader Backhoe in the spaces below. Always use these numbers when referring to your Bobcat Loader Backhoe.

CALIFORNIA
PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

Loader Backhoe Serial Number _____

_____

Engine Serial Number _____

_____

NOTES:

_____

_____

_____

YOUR Bobcat® DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat Loader Backhoe. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR LOADER BACKHOE. If you have any questions, see your Bobcat dealer.

This manual may illustrate loader backhoes with additional options and accessories not installed on your loader backhoe.

REGULAR MAINTENANCE ITEMS V

MOTOR OIL V

SERIAL NUMBER LOCATION VII

LOADER BACKHOE SERIAL NUMBER. VII

ENGINE SERIAL NUMBER VII

DELIVERY REPORT. VII

LOADER BACKHOE IDENTIFICATION VIII

FEATURES, ACCESSORIES AND ATTACHMENTS IX

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

REGULAR MAINTENANCE ITEMS

	ENGINE OIL FILTER 6657635		HYDRAULIC FILTER 6961187
	FUEL FILTER 6667352		BATTERY 6961224
	FUEL FILTER (In- Line) 6633977		FLUID, Hydraulic/Hydrostatic 6903117 - (2.5 gal.) 6903118 - (5 gal.) 6903119 - (55 gal.)
	AIR CLEANER FILTER (Primary) 6969871		BELT, Alternator/Fan 6967361
	AIR CLEANER FILTER (Secondary) 66969872		PROPYLENE GLYCOL ANTI-FREEZE, Premixed - 6724094 Concentrate - 6724354
			PROPYLENE GLYCOL ANTI-FREEZE, Concentrate 6724354

MOTOR OIL

6903105 SAE 15W40 CE/SG (12 QTS.)	6903106 SAE 15W40 CE/SG (1 GAL.)	6903113 SAE 15W40 CE/SG (2.5 GAL.)
6903107 SAE 10W30 CE/SG (12 QTS.)	6903108 SAE 10W30 CE/SG (1 GAL.)	6903112 SAE 10W30 CE/SG (2.5 GAL.)
6903109 SAE 30W CE/SG (12 QTS.)	6903110 SAE 30W CS/SG (1 GAL.)	6903111 SAE 30W CS/SG (2.5 GAL.)

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

BACKHOE HYDRAULIC CONTROLS

Backhoe Control Levers

Learn the function of the control levers before you start the engine to begin operation **[Figure OI-32]**.

LEVER NO. 1 **[Figure OI-32]** - Boom and Swing.

To lower the boom, push the lever forward (Item 2) **[Figure OI-32]**.


To raise the boom, pull the lever backward (Item 3) **[Figure OI-32]**.

To swing the boom to the left, move the lever to the left (Item 4) **[Figure OI-32]**.

To swing the boom to the right, move the lever to the right (Item 5) **[Figure OI-32]**.

NOTE: If you release the boom and swing control lever, the lever will return to the neutral position.

Figure OI-32

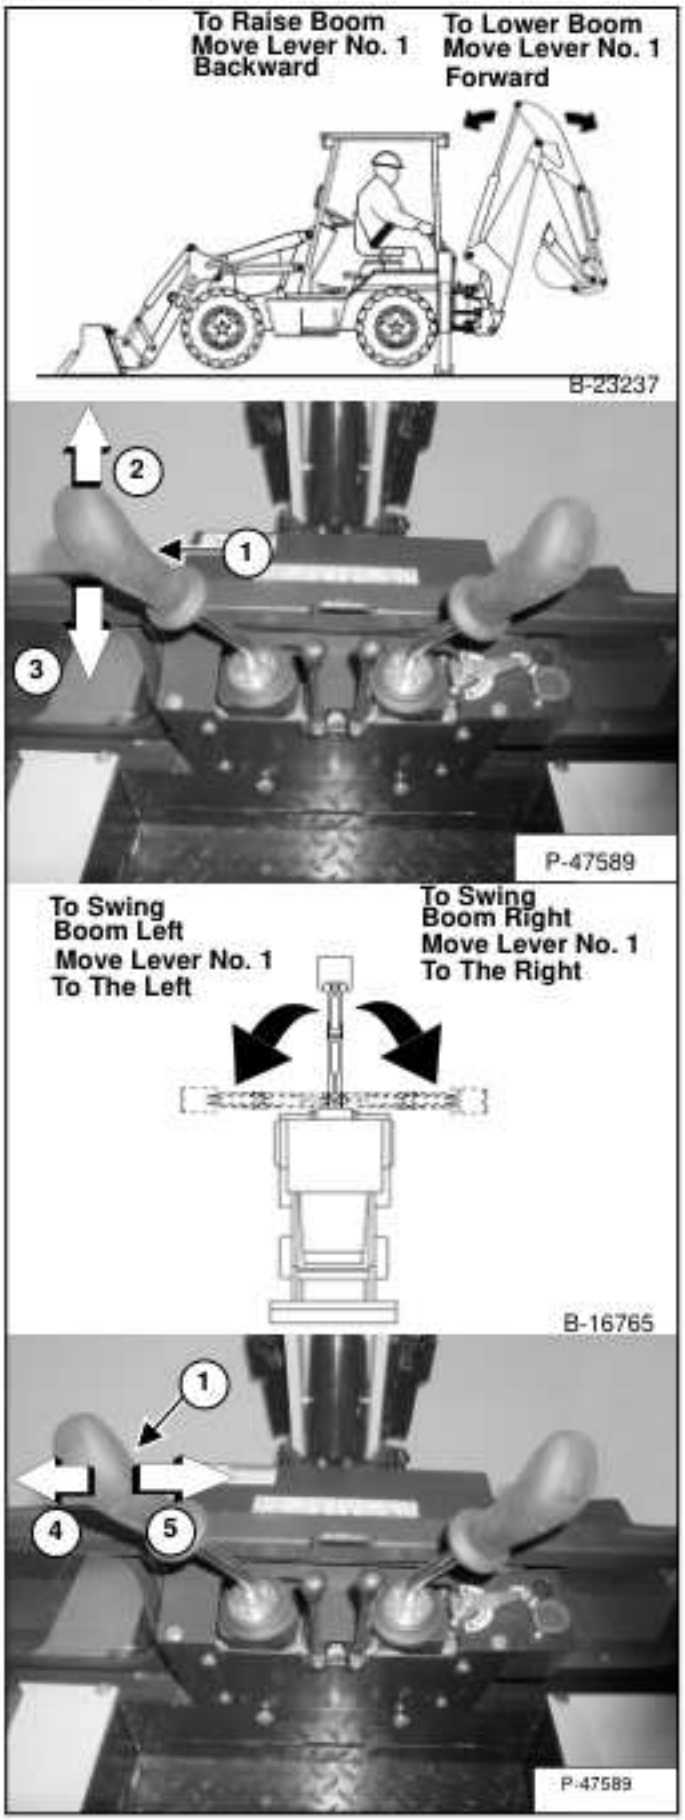

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

LOADER BACKHOE SPECIFICATIONS (CONT'D)

Loader Performance

*Loader Rated Operating Capacity (Per ISO 14397)	2265 lbs (1027 kg)
Loader Tipping Load (ISO)	4715 lbs (2138 kg)
Operating Weight	6770 lbs. (3071 kg)
Travel Speed	4.0 MPH (6,4 km/hr)
Bucket Capacity (Loader)	13.1 ft^3 (0.37 m^3)
Loader Breakout	4250 lbs. (1928 kg)

*Determined with equipment shown (backhoe in the center transport position).

Backhoe Performance

Std. Backhoe Bucket Width	16 in. (400 mm)
Diggingforce Bucket Dipper	 5340 lbs. (2422 kg) 3153 lbs. (1430 kg)

Controls

Hydraulics	Hand Operated Lever
Loader Auxiliary Hydraulics	Hand Operated Lever
Backhoe Auxiliary Hydraulics	Button Operated
Parking Brake	Hand Lever activated and button activated parking brake. Button activated system is a spring applied pressure release (SAPR) system.
Travel Control Pedal	Foot Operated Lever

Engine

Make/Model	Kubota D1105 Turbo-charged (Tier II)
Fuel/Cooling	Diesel/Liquid (Antifreeze Mixture)
Horsepower (SAE Net)	31.5 HP (23,4 kW) @3000 RPM
Number Of Cylinders	Three
Displacement	68.53 ci (1,123 L)
Lubrication	Pressure System with Filter
Air Cleaner	Dry replaceable cartridge
Equipped with spark arrestor exhaust system	

Hydraulic System

Hydraulic Pump	Gear Driven
Hydraulic Cooling	Cooler/Fan

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat Loader Backhoe and attachment must be in good operating condition before use.

Check all of the items on the Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient operation. Safety videos are also available.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity (R.O.C.) of the loader or the Rated Lift Capacity of the backhoe. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the **Before Operation** Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses or hearing protection are required for some work. See your Bobcat dealer about available Safety Equipment.

MidWestTech | Bobcat B-250 Backhoe Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >