
Bobcat®

Operation & Maintenance Manual
Three-Point Hitch Adapter

(Hitch 3 Point) S/N 871700101 & Above

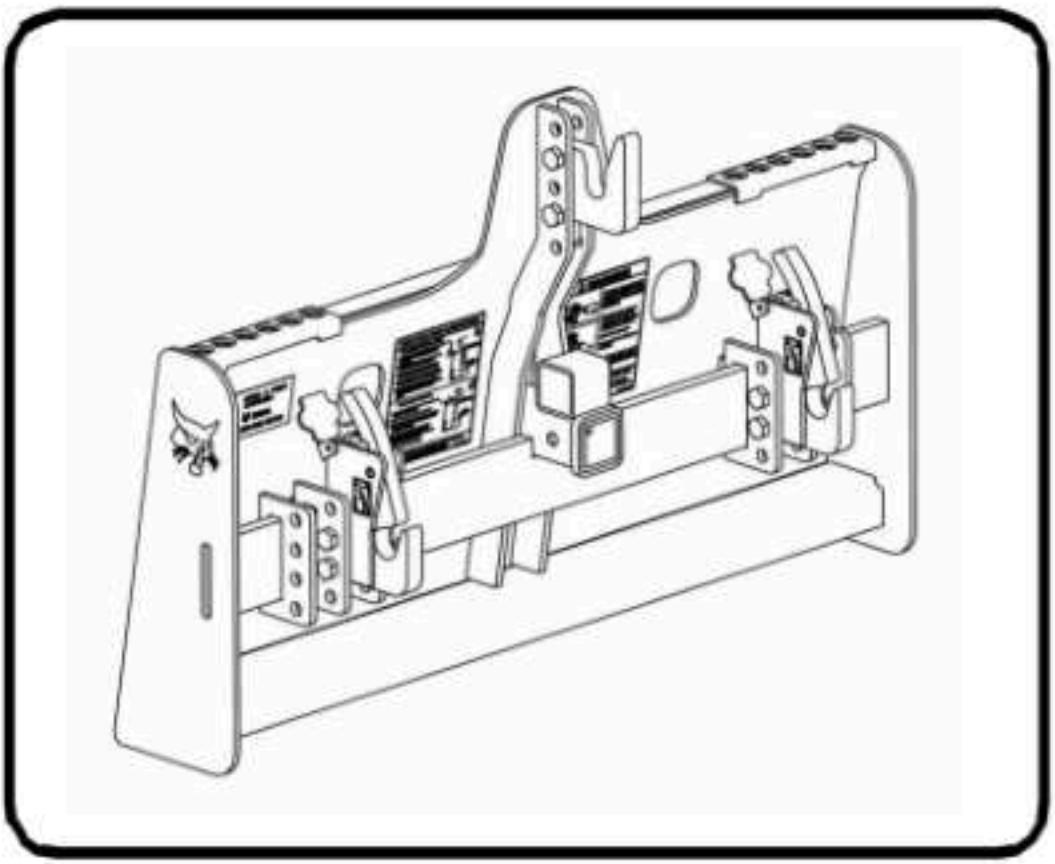

6904285 (1-11) Revised (3-11) (4)

Printed in U.S.A.

© Bobcat Company 2011

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 3

SAFETY & TRAINING RESOURCES 11

OPERATING INSTRUCTIONS 19

PREVENTIVE MAINTENANCE 61

MACHINE SIGN TRANSLATIONS 67

SPECIFICATIONS 77

WARRANTY 81

ALPHABETICAL INDEX 85

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat three-point hitch adapter in the spaces below. Always use these numbers when referring to your Bobcat three-point hitch adapter.

Three-Point Hitch Adapter Serial Number _____

NOTES:

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat three-point hitch adapter. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT THREE-POINT HITCH ADAPTER. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat three-point hitch adapter.

BOBCAT COMPANY IS IS0 9001 CERTIFIED 5

SERIAL NUMBER LOCATION 7
Attachment Serial Number 7

DELIVERY REPORT 7

ATTACHMENT IDENTIFICATION 8

FEATURES AND ACCESSORIES 9
Standard Items 9

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >

Operation With The Loader

Implement Operation

The adapter is used for mounting various implements. Always read and understand the implement's Operation & Maintenance Manual before using any implements.

Figure 49



IMPLEMENT EXAMPLE: CATEGORY I THREE-POINT HITCH DISK

P-68770

An assortment of implements are available for use with the three-point hitch **[Figure 49]**.

Use the machine lift and tilt functions to control the implement position. Also, the height of the three-point hitch hooks can determine the implement position. For the procedure on adjusting hooks, (See Positioning The Hooks For Category I Or II on Page 22.)

⚠ WARNING

AVOID INJURY OR DEATH

When operating the machine:

- **Keep the seat belt fastened snugly.**
- **The seat bar must be lowered.**
- **Keep your feet on the pedal controls or footrests and hands on the controls.**

W-2261-0909

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >

SERVICE SCHEDULE

Chart

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat three-point hitch adapter.

⚠ WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199


SERVICE SCHEDULE		HOURS
ITEM	SERVICE REQUIRED	10
General Items	Inspect the Bob-Tach mounting frame.	
	Inspect lower and upper three-point hooks.	
	Inspect hitch receiver for any damage.	
Three-Point Hooks	Ensure that both spring loaded latches move freely.	
	Check mounting hardware for proper torque 190 N•m (140 ft-lb).	
	Check for cracked welds or damaged parts.	
Decals	Check for damaged or missing decals. Replace if necessary.	

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >

THREE-POINT HITCH ADAPTER SPECIFICATIONS

Dimensions

- All dimensions are shown in millimeters. Respective imperial dimensions are given in inches enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

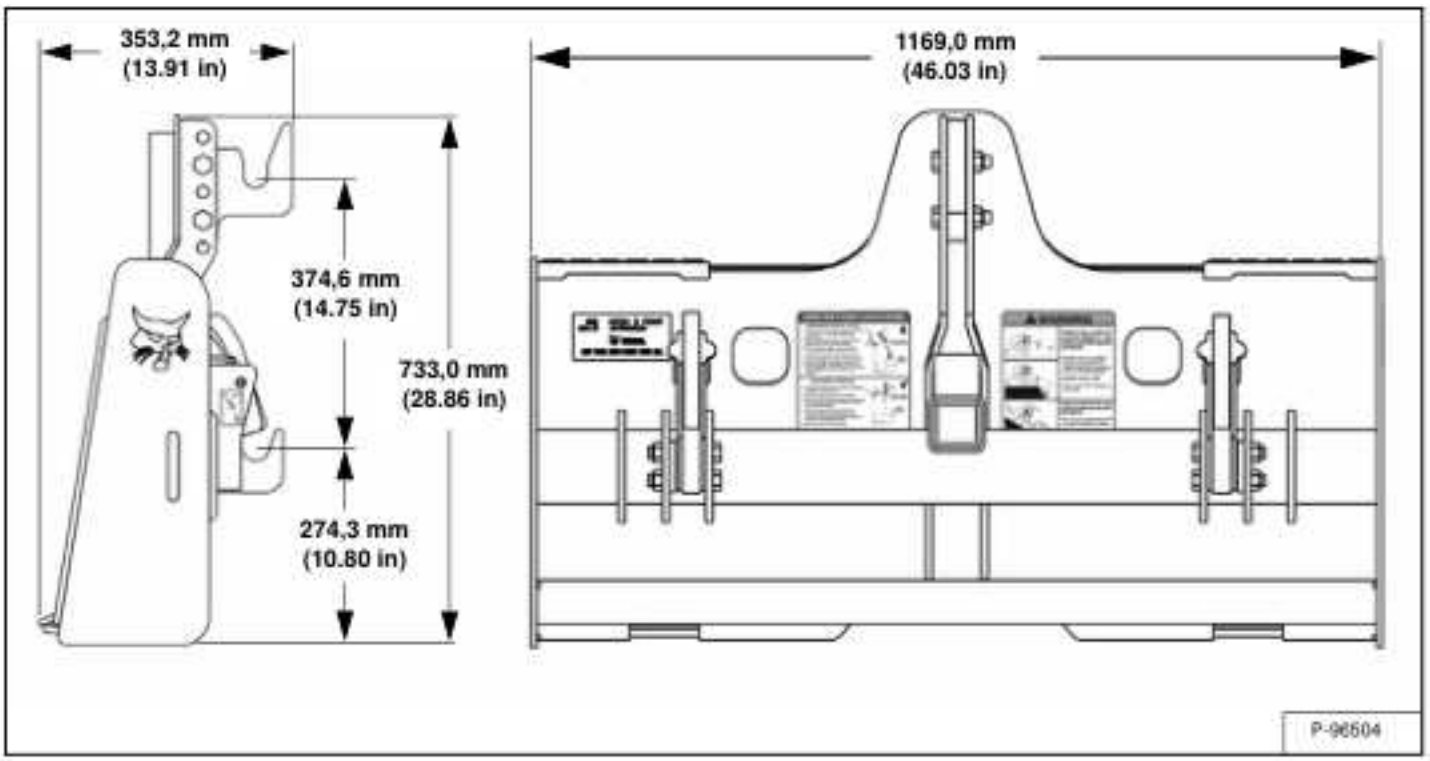

Performance

Three-Point Hitch Adapter Weight	123,2 kg (272 lb)
Three-Point Hitch Mounting Frame	*Mounts to most standard category "1" and category "2" Three-Point Hitch attachments.

* Do Not Exceed the Rated Operating Capacity (ROC) of the machine.

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8 - 10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the attachment.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Call Before You Dig* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection, Special Applications Kits or a Front Window Guard are required for some work. See your Bobcat dealer about Bobcat Safety equipment for your machine.

SI ATT-0509

MidWestTech | Bobcat Three-Point Hitch Adapter Three-Point Hitch Adapter Operation & Ma... Order the manual at mid-west-tech.com >