
Bobcat®

Operation & Maintenance Manual
335 Compact Excavator

S/N A16U11001 & Above

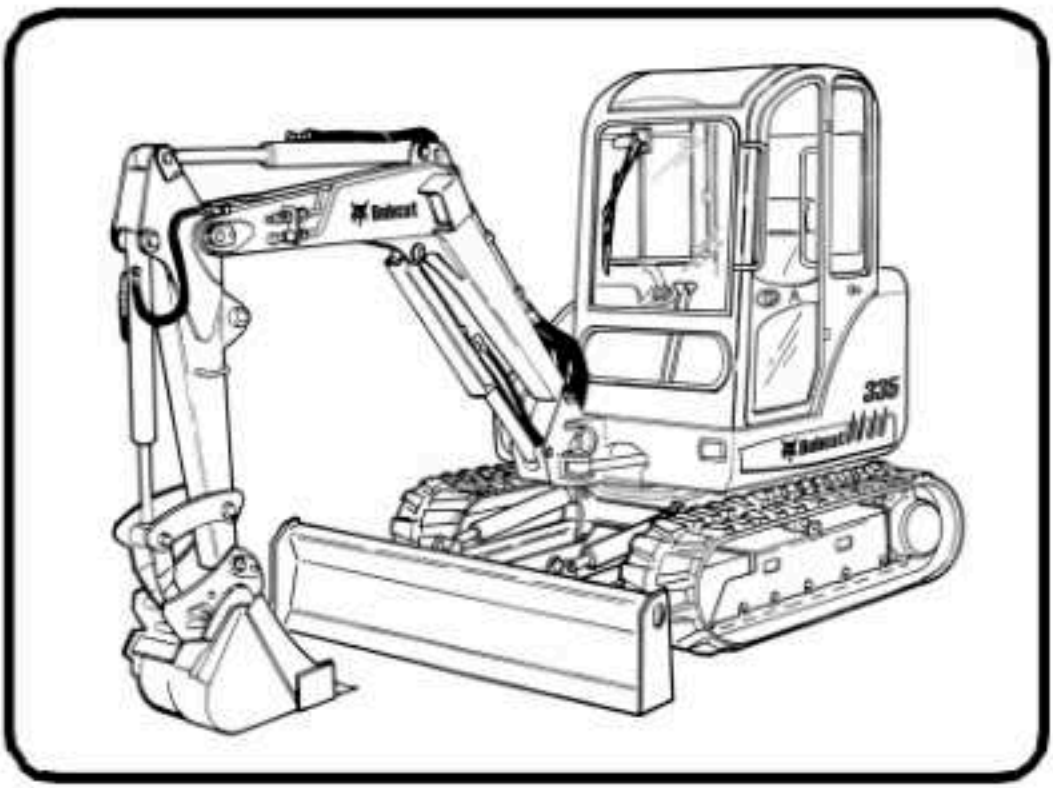

6904774 (11-06) Revised (7-07) (4)

Printed in U.S.A.

© Bobcat Company 2007

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY & TRAINING RESOURCES XI

OPERATING INSTRUCTIONS OI-1

PREVENTIVE MAINTENANCE PM-1

SYSTEM SETUP AND ANALYSIS SA-1

MACHINE SIGN TRANSLATIONS MST-1

SPECIFICATIONS SPEC-1

WARRANTY WARRANTY-1

ALPHABETICAL INDEX INDEX-1

REFERENCE INFORMATION

Write the correct information for YOUR excavator in the spaces below. Always use these numbers when referring to your Bobcat Excavator.

Bobcat Excavator Serial Number _____

Engine Serial Number _____

_____

_____

NOTES _____

_____

_____

_____

YOUR BOBCAT EXCAVATOR DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Dréve Richelle 167
B-1410 WATERLOO
Belgium

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat Excavator. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR MACHINE. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED V

DELIVERY REPORT VIII

EXCAVATOR IDENTIFICATION IX

FEATURES, ACCESSORIES AND ATTACHMENTS X
- Attachments X
- Buckets Available X
- Falling Object Guards (FOGS) XI
- Options and Accessories X
- Special Applications Kit XI
- Special Applications Kit Inspection And Maintenance XI
- Standard Items X

REGULAR MAINTENANCE ITEMS V

SERIAL NUMBER LOCATIONS VIII
- Engine Serial Number VIII
- Excavator Serial Number VIII

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED

ISO 9001:2000 is an international standard that controls the processes and procedures which we use to design, develop, manufacture and distribute Bobcat products.

British Standards Institute (**BSI**) is the Certified Registrar Bobcat Company chose to assess the Company's compliance with the ISO 9001:2000 standard. The BSI registration certifies that Bobcat's manufacturing facilities in Gwinner and Bismarck, North Dakota (North America), Pontchateau (France), Dobris (Czech Republic) and the Bobcat corporate offices (Gwinner, Bismarck & West Fargo) in North Dakota are in compliance with ISO 9001:2000. Only certified assessors, like BSI, can grant registrations.

ISO 9001:2000 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

CALIFORNIA
PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REGULAR MAINTENANCE ITEMS

 ENGINE OIL FILTER (6 Pack) 6675517	 BATTERY 6670251
 FUEL FILTER 6667352	 FLUID, Hydraulic / Hydrostatic 6903117 - (2.5 Gal.) 6903118 - (5 Gal.) 6903119 - (55 Gal.)
 AIR FILTER, Outer 6666333	 RADIATOR CAP 6646678
 AIR FILTER, Inner 6663334	 PROPYLENE GLYCOL ANTI-FREEZE, Premixed [-34° F (-37°C)] 6724094
 PRIMARY HYDRAULIC FILTER 6661248 CASE DRAIN HYDRAULIC FILTER 6516722	 PROPYLENE GLYCOL ANTI-FREEZE, Concentrate 6724354
MOTOR OIL 6903105 . . . . SAE 15W/40 CE/SG (12 qt.) 6903106 . . . . SAE 15W/40 CE/SG (1 Gal.) 6903113 . . . . . SAE 15W/40 CE/SG (2.5 Gal.) 6903107 . . . . SAE 10W/30 CE/SG (12 qt.) 6903108 . . . . SAE 10W/30 CE/SG (1 Gal.) 6903112 . . . . . SAE 10W/30 CE/SG (2.5 Gal.)	6903109 . . . . . SAE 30W CE/SG (12 qt.) 6903110 . . . . . SAE 30W CE/SG (1 Gal.) 6903111 . . . . . SAE 30W CE/SG (2.5 Gal.)


NOTE: Always verify Part Numbers with your Bobcat dealer.

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

ISO Control Pattern

Left Control Lever (Joystick)

Figure OI-35

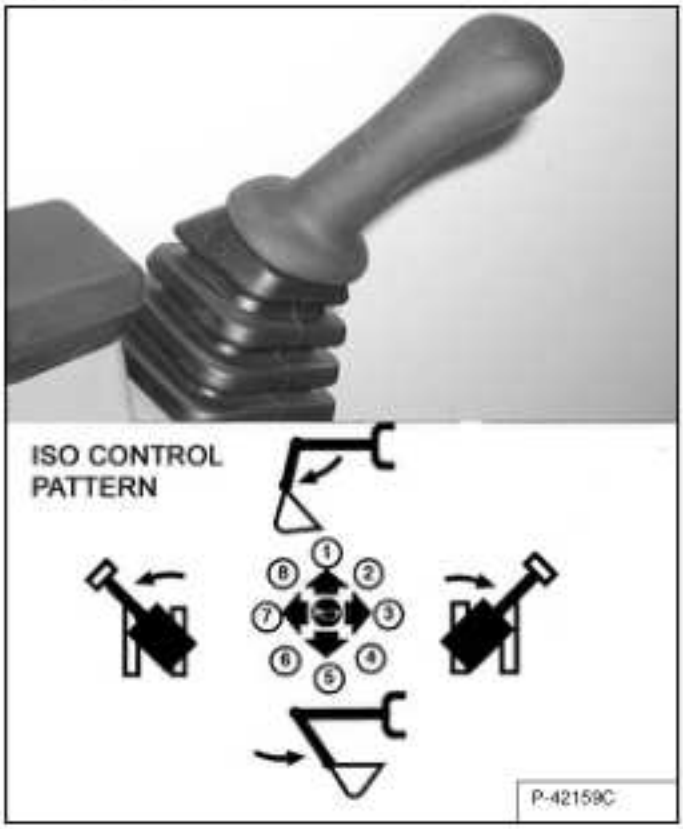

The left lever (joystick) is used to operate the arm and slew the upperstructure **[Figure OI-33]**.

1. Arm out.
2. Arm out and slew right.
3. Slew right.
4. Arm in and slew right.
5. Arm in.
6. Arm in and slew left.
7. Slew left.
8. Arm out and slew left.


IMPORTANT

Before slewing the upperstructure, make sure the slew lock is disengaged.

I-2051-0905

Right Control Lever (Joystick)

Figure OI-36

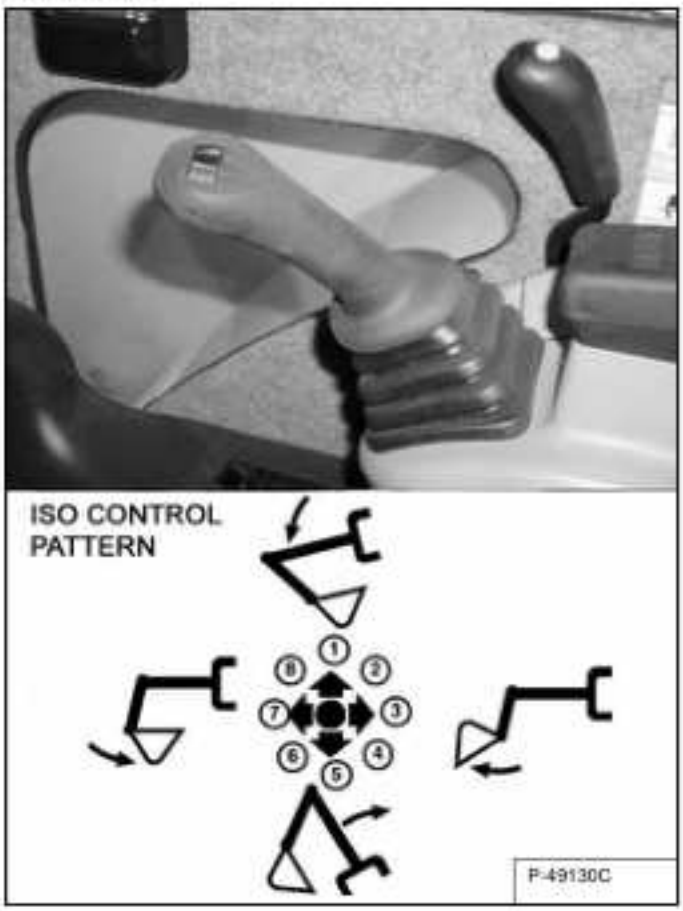

The right lever (joystick) is used to operate the boom and bucket **[Figure OI-34]**.

1. Boom lower.
2. Boom lower and bucket dump.
3. Bucket dump.
4. Boom raise and bucket dump.
5. Boom raise.
6. Boom raise and bucket curl.
7. Bucket curl.
8. Boom lower and bucket curl.

⚠ WARNING

AVOID INJURY OR DEATH

Before leaving the machine:

- **Lower the work equipment to the ground.**
- **Lower the blade to the ground.**
- **Stop the engine & remove the key.**

W-2196-0585

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >


Replacing Filter Elements (Cont'd)

Inner Filter

Only replace the inner filter under the following conditions:

- Replace the inner filter every *third* time the outer filter is replaced.
- After the outer filter has been replaced, press the button (Item 3) **[Figure PM-16]** on the end of the condition indicator and start the engine. Run at full RPM, then reduce engine speed and stop the engine. If the red ring shows in the condition indicator, replace the inner filter.

Figure PM-17

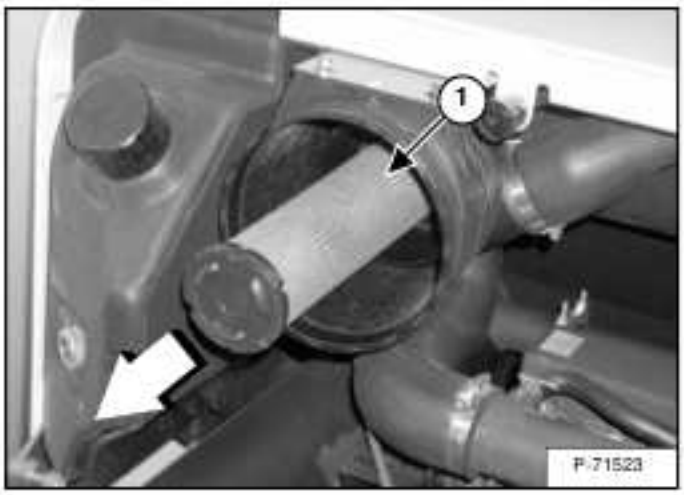

Remove the dust cup, outer filter and inner filter (Item 1) **[Figure PM-17]**.

NOTE: Make sure all sealing surfaces are free of dirt and debris. DO NOT use compressed air.

Install the new inner filter (Item 1) **[Figure PM-17]**.

Install the outer filter and the dust cup.

Press the button on the condition indicator to reset the condition indicator's red ring.


MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

EXCAVATOR SPECIFICATIONS (CONT'D)

Excavator With Optional Angle Blade Dimensions

For all dimension not shown below, (See (335) EXCAVATOR SPECIFICATIONS on Page SPEC-3)

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specification conform to SAE or ISO standards and are subject to change without notice.

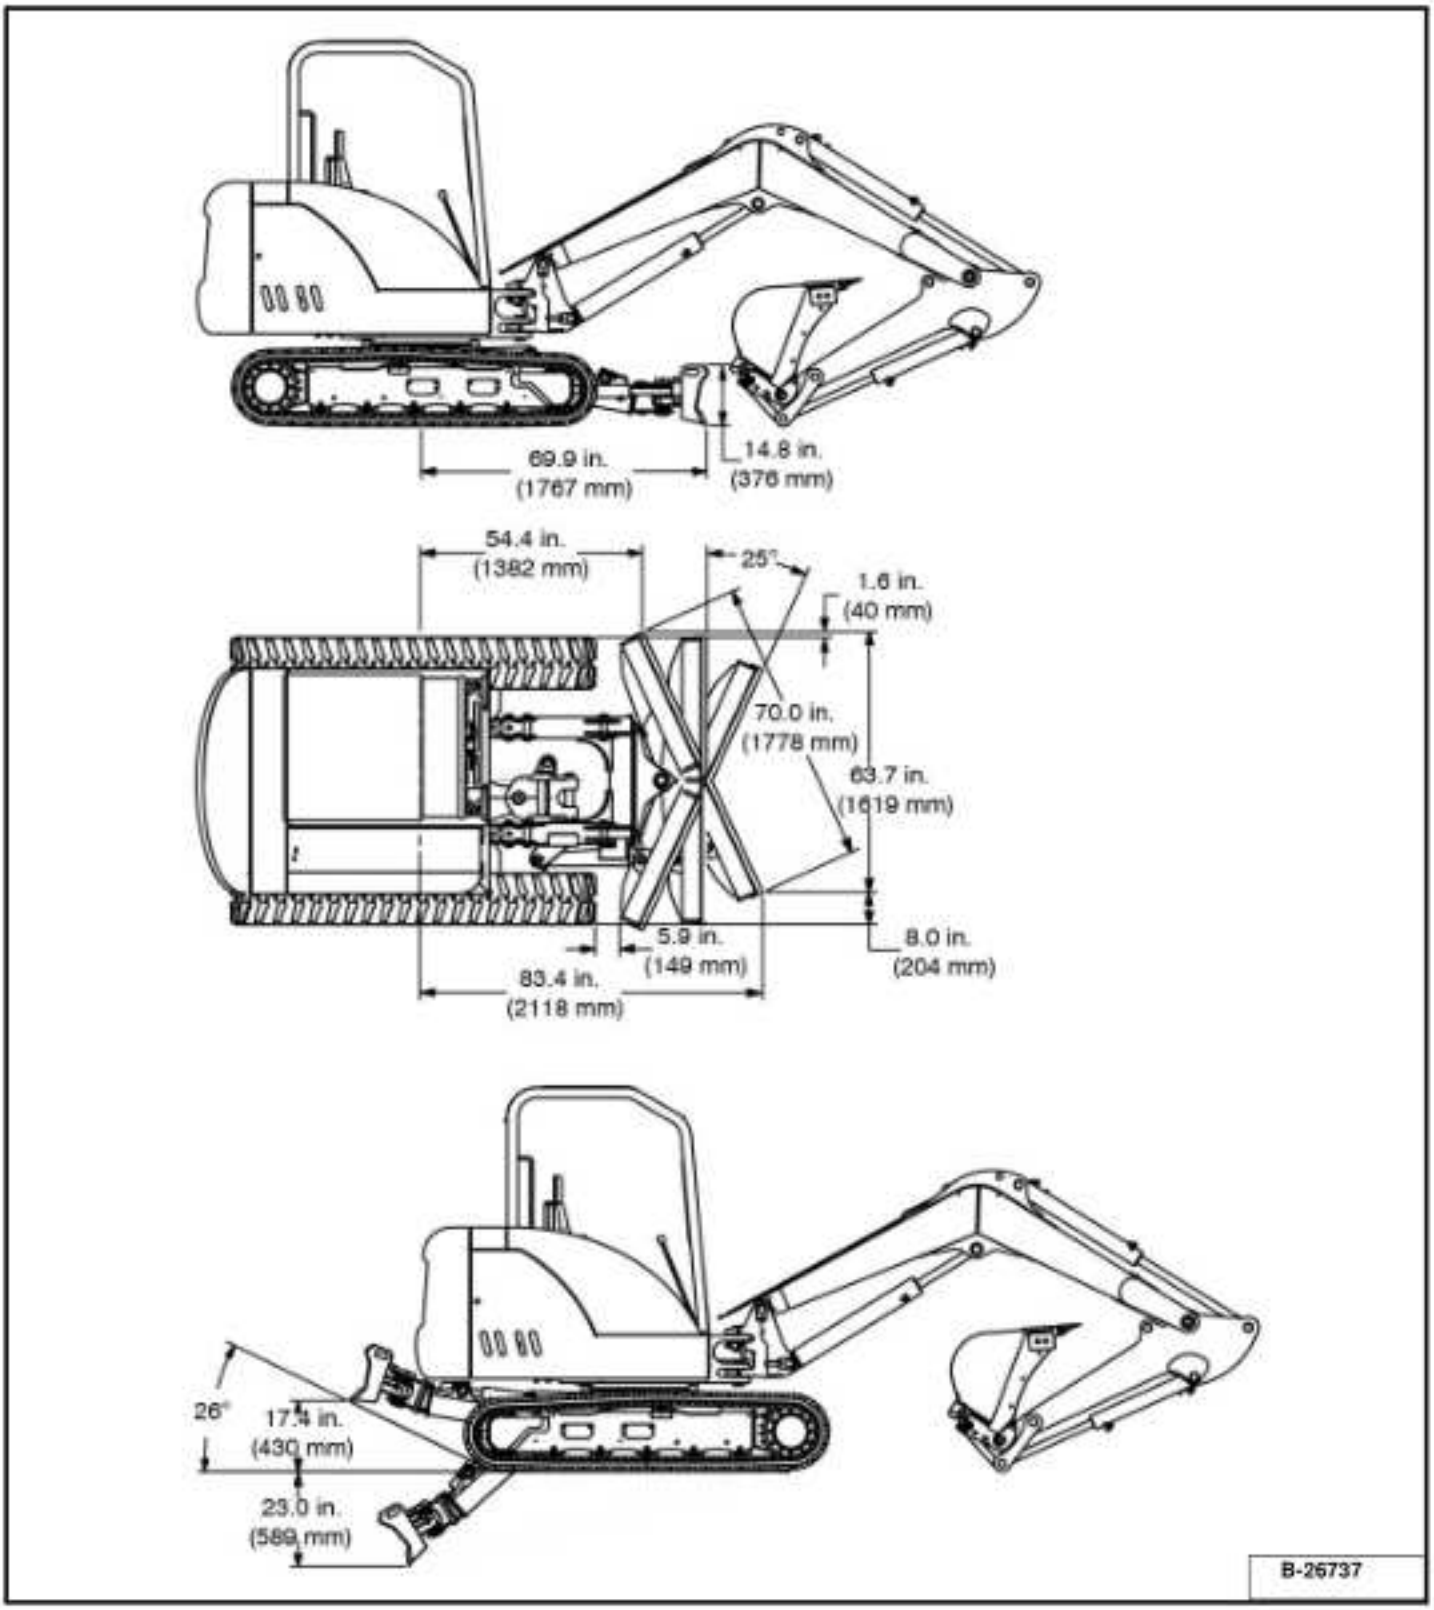

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

The Bobcat Excavator and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Lift Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the **Before Operation** Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI EXC-0206

MidWestTech | Bobcat 335 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >