
Bobcat®

Service Manual
425 Compact Excavator

S/N A1HW11001 & Above

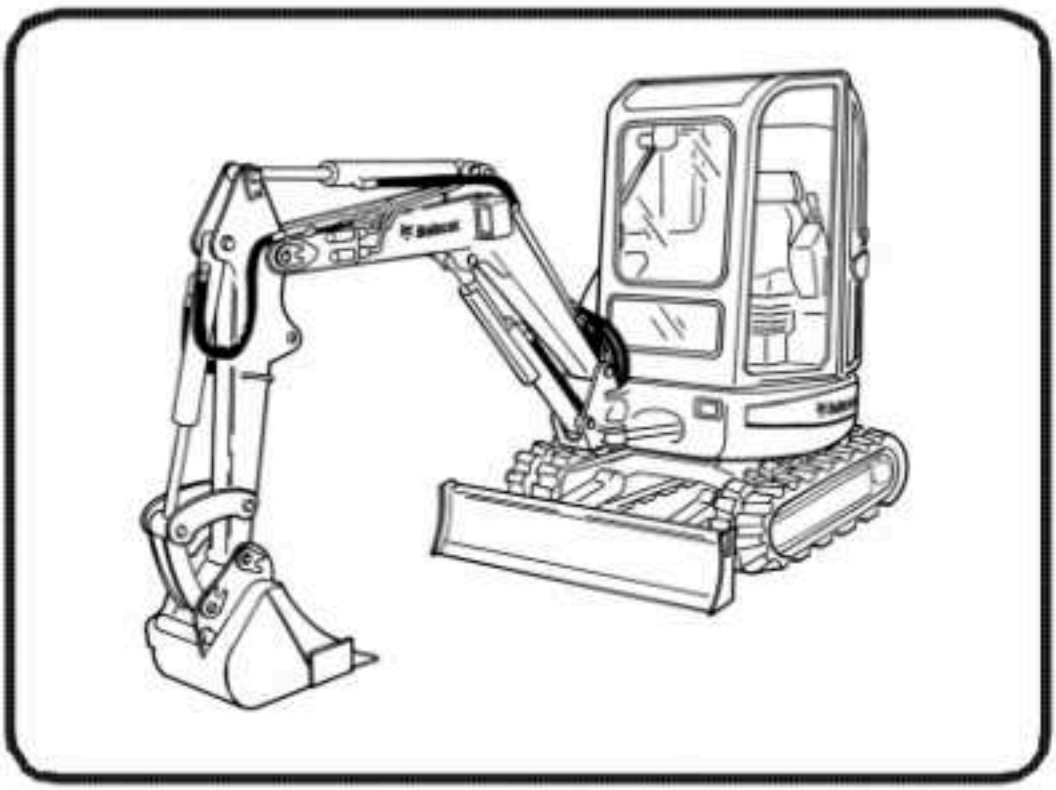

Ingersoll Rand

6904866 (11-06)

Printed in U.S.A.

© Bobcat Company 2006

MidWestTech | Bobcat 425 Compact Excavator Service Manual | Publication 6904866_11_... Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

AIR CLEANER 60-01
AIR CLEANER SERVICE 10-01
ALTERNATOR 50-01
ALTERNATOR BELT 10-01
ARM 40-01
ARM CYLINDER 20-01

BATTERY 50-01
BLADE 30-01
BLADE CONTROL 40-01
BLADE CYLINDER 20-01
BLOWER FAN 70-01
BOOM 40-01
BOOM CYLINDER 20-01
BOOM SWING CYLINDER 20-01
BOOM SWING PEDAL 40-01
BUCKET 40-01
BUCKET CYLINDER 20-01

CAB 40-01
CAMSHAFT AND TIMING GEARS 60-01
CANOPY 40-01
CASE DRAIN FILTER 20-01
CONVERSIONS SPEC-01
CONTROL PATTERN SELECTOR VALVE 20-01
COUNTERWEIGHT 40-01
CRANKSHAFT AND PISTONS 60-01
CROSSPORT RELIEF VALVES 20-01
CYLINDER HEAD 60-01

DIAGNOSTICS SERVICE CODES 50-01
DIRECT TO TANK VALVE 20-01

ELECTRICAL SYSTEM INFORMATION 50-01
ENGINE COOLING SYSTEM 10-01, 60-01
ENGINE INFORMATION 60-01
ENGINE LUBRICATION SYSTEM 10-01
ENGINE SPEED CONTROL 60-01
EXCAVATOR SPECIFICATIONS SPEC-01
EXCAVATOR STORAGE AND RETURN TO SERVICE 10-01

FLOOR MAT AND FLOOR PANELS 40-01
FLYWHEEL AND HOUSING 60-01
FUEL LEVEL SENDER 50-01
FUEL SYSTEM 10-01, 60-01
FUEL TANK 40-01

HEATER COIL 70-01
HEATER SYSTEM 70-01
HEATER UNIT 70-01
HEATER VALVE 70-01
HORN 40-01
HYDRAULIC CONTROL VALVE 20-01
HYDRAULIC CONNECTION SPECS SPEC-01
HYDRAULIC FLUID SPECIFICATIONS SPEC-01
HYDRAULIC FILTER 20-01
HYDRAULIC PUMP 20-01
HYDRAULIC RESERVOIR 20-01
HYDRAULIC SYSTEM 10-01
HYDRAULIC SYSTEM INFORMATION 20-01

LEFT CONTROL LEVER (JOYSTICK) 20-01
LEFT CONSOLE 40-01
LEFT SIDE COVER 40-01
LIFTING AND BLOCKING THE EXCAVATOR 10-01
LIFTING THE EXCAVATOR 10-01
LIGHTS 50-01
LUBRICATION SYSTEM 60-01
LUBRICATING THE EXCAVATOR 10-01

MAGNETIC LOCKOUT SENSOR 50-01
MAIN RELIEF VALVE 20-01
MANIFOLD ASSEMBLY / ACCUMULATOR 20-01

NON-PRESSURIZED ACCUMULATOR 20-01

OIL COOLER 20-01
OPERATOR CAB (ROPS/TOPS) 10-01

PIVOT PINS 10-01
PORT RELIEF VALVES 20-01
PRESSURE REDUCING VALVE 20-01

REGULAR MAINTENANCE 70-01
RIGHT CONTROL LEVER (JOYSTICK) 20-01
RIGHT CONSOLE 40-01
RIGHT SIDE COVER 10-01, 40-01

Continued On Next Page

MidWestTech | Bobcat 425 Compact Excavator Service Manual | Publication 6904866_11_... Order the manual at mid-west-tech.com >

SEAT AND SEAT MOUNT 40-01
SEAT BELT 10-01
SERVICE SCHEDULE 10-01
SPARK ARRESTOR MUFFLER 10-01, 60-01
STARTER 50-01
STOPPING THE ENGINE AND LEAVING THE EXCAVATOR 10-01
SWING CIRCLE GEAR 30-01
SWING FRAME 40-01
SWING MOTOR 20-01
SWING MOTOR DRIVE CARRIER 20-01
SWIVEL JOINT 20-01

TAILGATE 10-01, 40-01
TORQUE SPECIFICATIONS FOR BOLTS SPEC-01
TRACK FRAME COMPONENTS 30-01
TRANSPORTING THE EXCAVATOR ON A TRAILER 10-01
TRAVEL LEVER / PEDALS 40-01
TRAVEL MOTOR 10-01, 20-01
TROUBLESHOOTING 70-01

UPPERSTRUCTURE 40-01
UPPERSTRUCTURE SLEW LOCK 10-01, 40-01

X-CHANGE 40-01

MidWestTech | Bobcat 425 Compact Excavator Service Manual | Publication 6904866_11_... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY INSTRUCTIONS V

SERIAL NUMBER LOCATIONS IX

DELIVERY REPORT X

EXCAVATOR IDENTIFICATION XI

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

UNDERCARRIAGE 30-01

UPPERSTRUCTURE & SWING SECTION 40-01

ELECTRICAL SYSTEM AND ANALYSIS 50-01

ENGINE SERVICE 60-01

HEATER 70-01

SPECIFICATIONS SPEC-01

MidWestTech | Bobcat 425 Compact Excavator Service Manual | Publication 6904866_11_... Order the manual at mid-west-tech.com >

WIRING SCHEMATIC
425 (S/N A1HW11001 AND ABOVE)

(PRINTED NOVEMBER 2006)
V-6853

CONTROL MODULE CONNECTORS J1-J5

RIGHT HAND CONSOLE HARNESS 7130798

LH CONSOLE HARNESS 7130797

CAB HARNESS 7102833 (IF EQUIPPED)

ENGINE HARNESS 7130796

V-6853 (10-23-06)

Order the manual at mid-west-tech.com >