
Bobcat®

Service Manual
Forestry Cutter

(FRST CTTR FRC50) S/N ADTN00101 & Above
(FRST CTTR FRC50) S/N ANR600101 & Above
(Forestry Cutter) S/N A6ZB00101 & Above
(FRST CTTR FRC60) S/N ANR500101 & Above

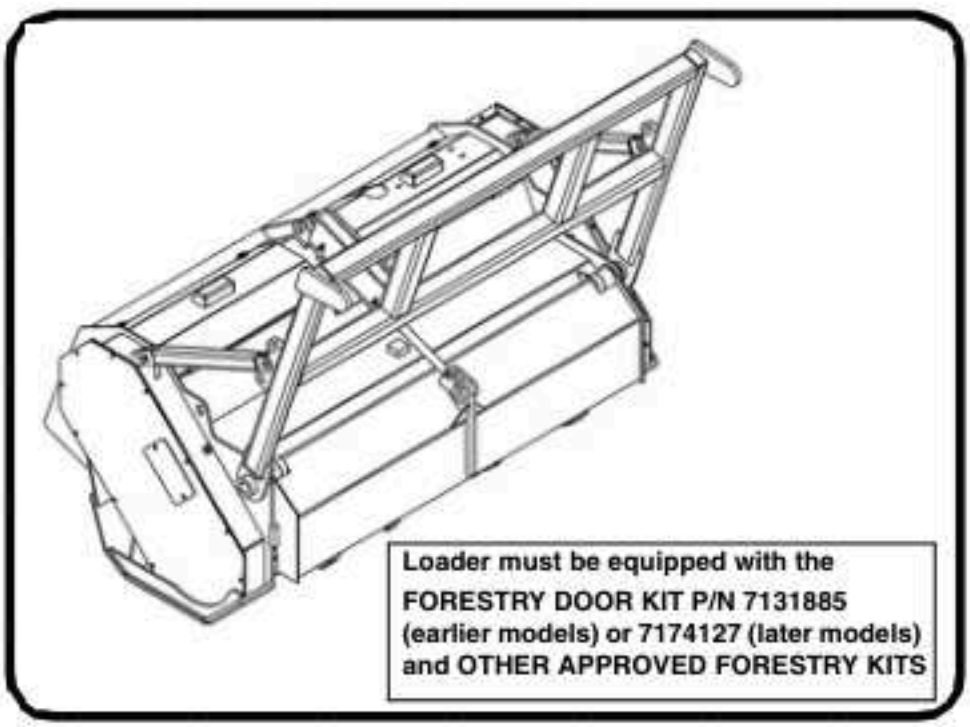

6904962 (7-10)

Printed in U.S.A.

© Bobcat Company 2010

MidWestTech | Bobcat FRC50, FRC60 Forestry Cutter Attachment Service Manual | Public... Order the manual at mid-west-tech.com >

CONTENTS

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

MAINFRAME 30-01

SPECIFICATIONS SPEC-01

ALPHABETICAL INDEX INDEX-01

MidWestTech | Bobcat FRC50, FRC60 Forestry Cutter Attachment Service Manual | Public... Order the manual at mid-west-tech.com >

SERIAL NUMBER LOCATION 1-7

MANUAL STORAGE 1-7

FORESTRY DOOR SERIAL NUMBER 1-7

DELIVERY REPORT 1-7

ATTACHMENT IDENTIFICATION 1-8
Forestry Cutter 1-8
Forestry Kit Equipment (Earlier Models) 1-9
Forestry Kit Equipment (Later Models) 1-10

MidWestTech | Bobcat FRC50, FRC60 Forestry Cutter Attachment Service Manual | Public... Order the manual at mid-west-tech.com >

TROUBLESHOOTING

Chart

⚠ WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

If the attachment is not working correctly, check the hydraulic system of the machine thoroughly before making any repairs on the attachment. Attachment problems can be affected by a hydraulic system that is not operating to specifications. Connect a flow meter to the machine to check the hydraulic pump output, relief valve setting and tube lines to check flow and pressure. (See the machine's Service Manual for the correct procedure to connect the flow meter.)

Use the following troubleshooting chart to locate and correct problems which most often occur with the attachment.


PROBLEM	CAUSE	CORRECTION
Rotor will not turn.	Forestry door open.	Close forestry door.
	Wire harness disconnected.	Install wire harness.
	Quick couplers disconnected.	Install quick couplers.
	Auxiliary Hydraulics not engaged.	Engage auxiliary hydraulics.
	Unapproved door installed.	Install approved door.
	Rotor is jammed or plugged.	Unplug rotor.
Auxiliary Hydraulics will not start.	Forestry door open.	Close forestry door.
	Unapproved door installed.	Install approved door.
Forestry cutter performs poorly.	Material engagement speed to fast.	Engage material at a slower speed.

MidWestTech | Bobcat FRC50, FRC60 Forestry Cutter Attachment Service Manual | Public... Order the manual at mid-west-tech.com >

FORESTRY CUTTER ATTACHMENT SPECIFICATIONS (CONT'D)

Dimensions (S/N ANR600101 & Above, S/N ANR500101 & Above)

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

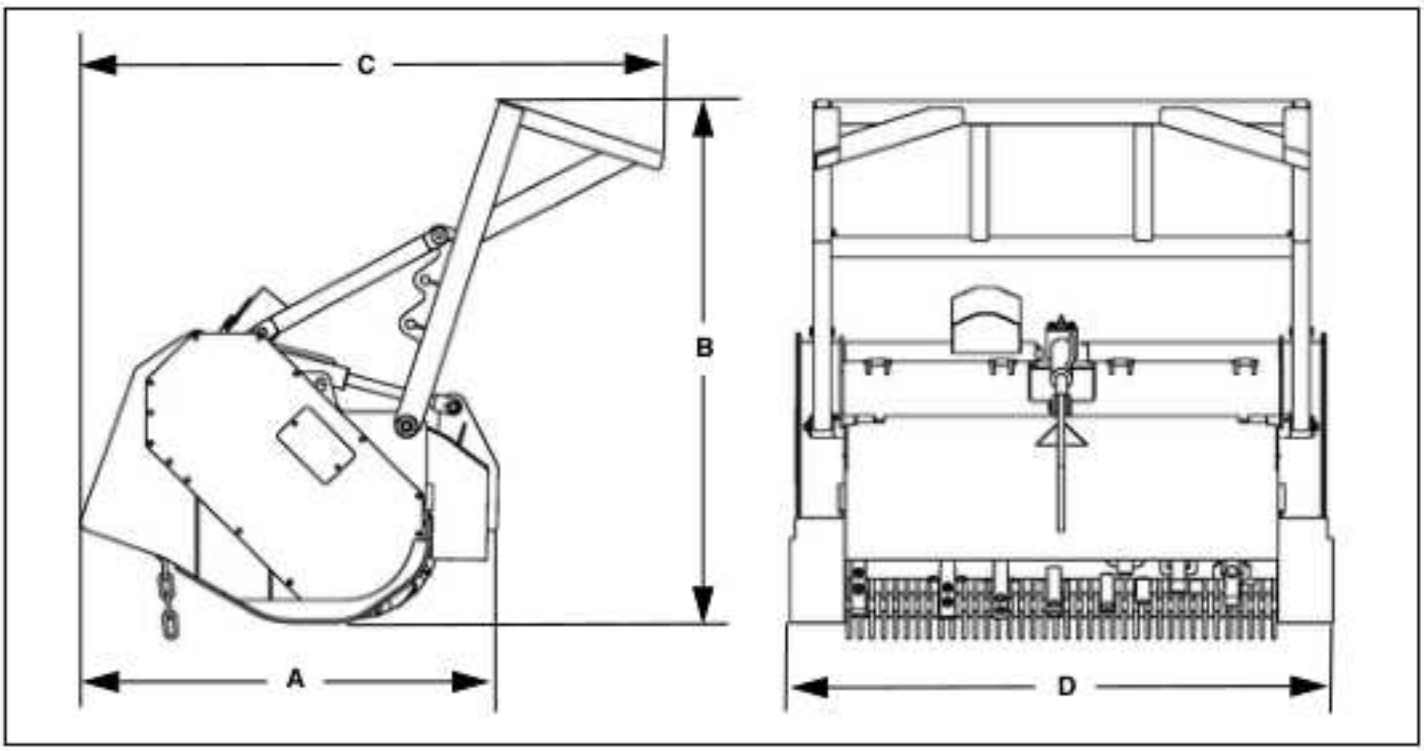

DESCRIPTION	FRST CTTR FRC50 (S/N ANR600101 & ABOVE)	FRST CTTR FRC60 (S/N ANR500101 & ABOVE)
Approx. Length (A)	47.72 in. (1212 mm)	47.72 in. (1212 mm)
Approx. Height (B)	59.87 in. (1520,6 mm)	59.87 in. (1520,6 mm)
Approx. Length W/Push Bar (C)	66.85 in. (1698 mm)	66.85 in. (1698 mm)
Approx. Width (D)	62.13 in. (1578 mm)	73.25 in. (1861 mm)

MidWestTech | Bobcat FRC50, FRC60 Forestry Cutter Attachment Service Manual | Public... Order the manual at mid-west-tech.com >