
Bobcat®

Service Manual
CT225 & CT230 Compact Tractor

S/N A59B11001 & Above
S/N A59C11001 & Above

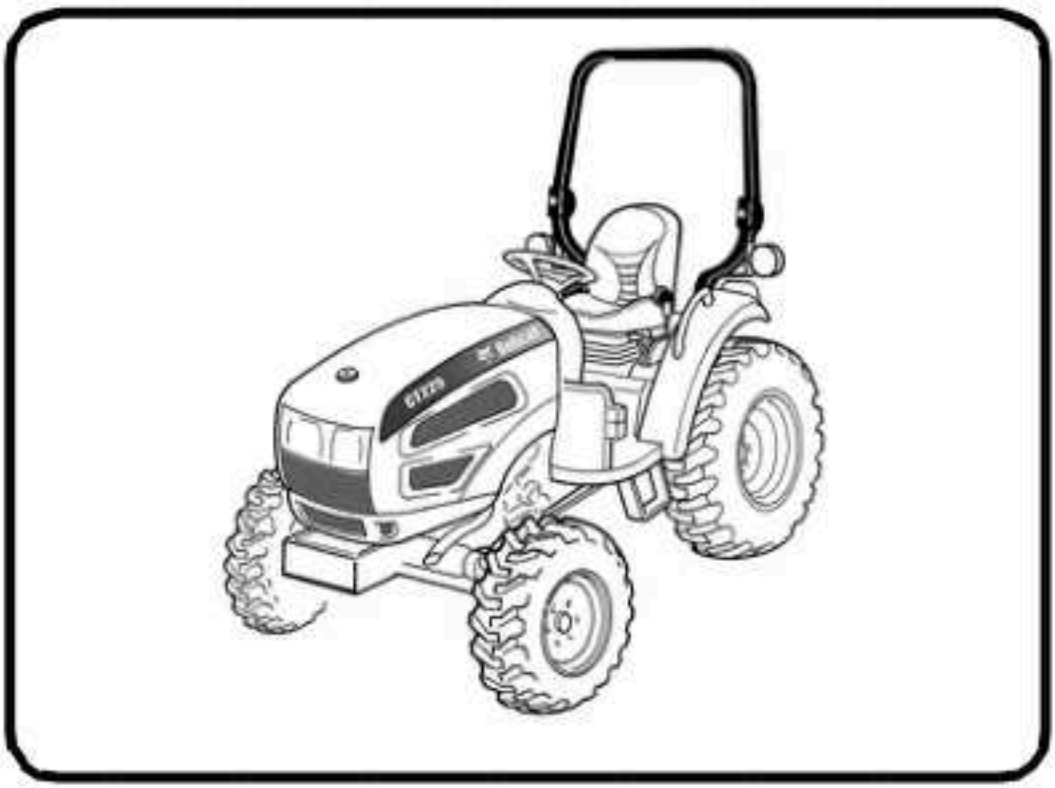

6986526 (12-09)

Printed in U.S.A.

© Bobcat Company 2009

MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

AIR CLEANER 70-01
AIR CLEANER SERVICE 10-01
ALTERNATOR 60-01
ALTERNATOR BELT 10-01
AUXILIARY CONTROL VALVE 20-01
AXLE AND DIFFERENTIAL 40-01
AXLE CASE 40-01
AXLE TOE IN 10-01

BATTERY 60-01
BRAKE CASE 40-01
BRAKE PEDAL ASSEMBLY 40-01
BRAKE SYSTEM 10-01

CAMSHAFT AND TIMING GEARS 70-01
CLUTCH ASSEMBLY 70-01
CLUTCH HOUSING 70-01
CLUTCH SYSTEM 10-01
COMPACT TRACTOR STORAGE AND RETURN TO SERVICE 10-01
CONSOLE COVER 50-01
CONVERSIONS SPEC-01
CRANKSHAFT AND PISTONS 70-01
CRUISE CONTROL 60-01
CYLINDER HEAD 70-01

DRIVE SHAFT 50-01
DRAW BAR 50-01
DRAW BAR ASSEMBLY 50-01

ELECTRICAL SYSTEM INFORMATION 60-01
ENGINE COOLING SYSTEM 10-01, 70-01
ENGINE COVER 10-01, 50-01
ENGINE INFORMATION 70-01
ENGINE LUBRICATION SYSTEM 10-01
ENGINE SIDE COVER 50-01
ENGINE SPEED CONTROL 70-01

FAN 70-01
FENDER 50-01
FENDER ASSEMBLY 50-01
FIREWALL 50-01
FLOOR PLATE 50-01
FLOORMAT 50-01
FLYWHEEL AND HOUSING 70-01
FUEL, COOLANT AND LUBRICANTS (ALL MODELS) SPEC-01
FUEL LEVEL SENDER 60-01
FUEL SYSTEM 10-01, 70-01
FUEL TANK 50-01
FRONT AXLE 10-01, 40-01

HYDRAULIC FILTER 20-01
HYDRAULIC FLUID SPEC-01
HYDRAULIC PUMP 20-01
HYDRAULIC SYSTEM INFORMATION 20-01
HYDRAULIC /HYDROSTATIC/ TRANSMISSION SYSTEM 10-01
HYDROSTATIC PUMP 30-01
HYDROSTATIC PUMP TESTING 30-01
HYDROSTATIC SYSTEM INFORMATION 30-01
HYDROSTATIC TRANSMISSION CASE 50-01
HOOD LIGHTS 60-01
HORN 60-01

INSTRUMENT PANEL 60-01

LUBRICATING THE COMPACT TRACTOR 10-01
LUBRICATION SYSTEM 70-01

MAIN RELIEF VALVE 20-01
MID PTO CONTROL 50-01
MLS VALVE 20-01

OIL COOLER 20-01
OPERATOR SEAT 50-01

PARKING BRAKE SYSTEM 10-01
PIVOT PINS 10-01
PTO SAFETY SHIELD 50-01
PTO SWITCHES 60-01

REAR LIGHTS 60-01
REAR PTO CONTROL 50-01
RIGHT JOYSTICK (IF EQUIPPED) 20-01
RIGHT JOYSTICK VALVE (IF EQUIPPED) 20-01
ROPS 50-01
ROCK SHAFT 20-01

SAFETY INTERLOCK SYSTEM - NEUTRAL START 10-01
SAFETY INTERLOCK SYSTEM - OPERATING 10-01
SEAT BELT 10-01
SEAT SENSOR 60-01
SEPERATING THE TRACTOR 40-01
SERVICE BRAKE 40-01
SERVICE SCHEDULE 10-01
SPARK ARRESTOR MUFFLER 10-01, 70-01
SPECIFICATIONS SPEC-01
SPLASH BOARD 50-01
STARTER 60-01
STEERING AXLE ADJUSTMENT 40-01
STEERING CYLINDER 20-01
STEERING VALVE 20-01
SUPPORTING THE COMPACT TRACTOR ON JACKSTANDS 10-01

Continued On Next Page

MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >

THREE POINT CYLINDER 20-01
THREE POINT CYLINDER CONTROL.....20-01
THREE POINT HITCH LOWER LINK 50-01
THREE POINT HITCH HOUSING.....20-01
TIRE MAINTENANCE 10-01
TOWING THE COMPACT TRACTOR.....10-01
TORQUE SPECIFICATIONS FOR BOLTS..... SPEC-01
TRANSMISSION 40-01
TRANSPORTING THE COMPACT TRACTOR ON A TRAILER.....10-01
TRAVEL CONTROL PEDAL.....10-01
TRAVEL PEDAL 30-01
TROUBLESHOOTING.....40-01

MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD II

SAFETY INSTRUCTIONS V

FIRE PREVENTION VIII

SERIAL NUMBER LOCATIONS X

DELIVERY REPORT XI

COMPACT TRACTOR IDENTIFICATION XII

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL LOADER AND REAR BALLAST) XIII

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL THREE-POINT IMPLEMENT AND FRONT BALLAST) XIV

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

HYDROSTATIC SYSTEM 30-01

DRIVE SYSTEM 40-01

MAINFRAME 50-01

ELECTRICAL SYSTEM 60-01


ENGINE SERVICE 70-01

SPECIFICATIONS SPEC-01

MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >


Removal And Installation (Cont'd)

Figure 50-120-5

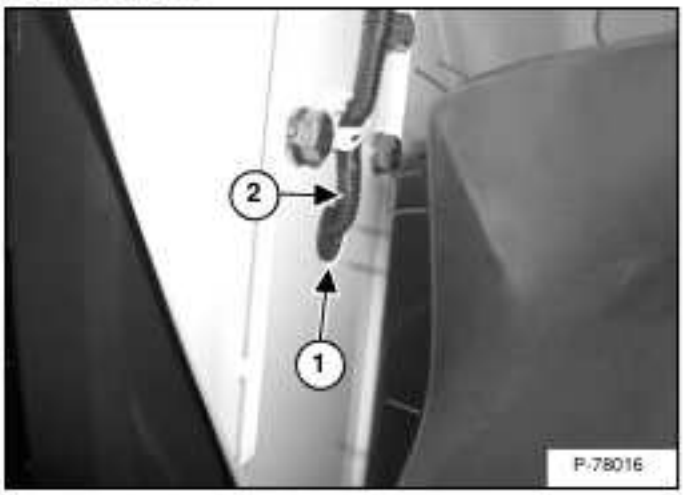


Remove the grommet (Item 1) and feed the wire harness (Item 2) **[Figure 50-120-5]** through the fender.

Figure 50-120-6

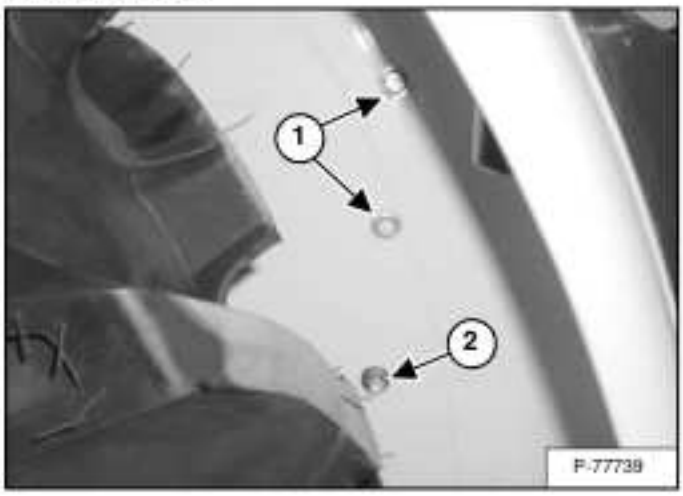

Remove the two bolts (Item 1) and nut (Item 2) **[Figure 50-120-6]**.

Figure 50-120-7

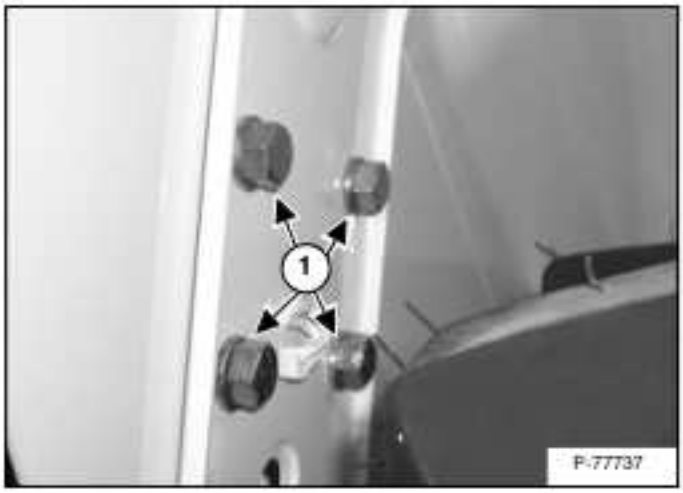


Remove the four fender mount bolts (Item 1) **[Figure 50-120-7]**.

Remove the fender.

MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >

Troubleshooting (CT 225 & CT 230) (Cont'd)

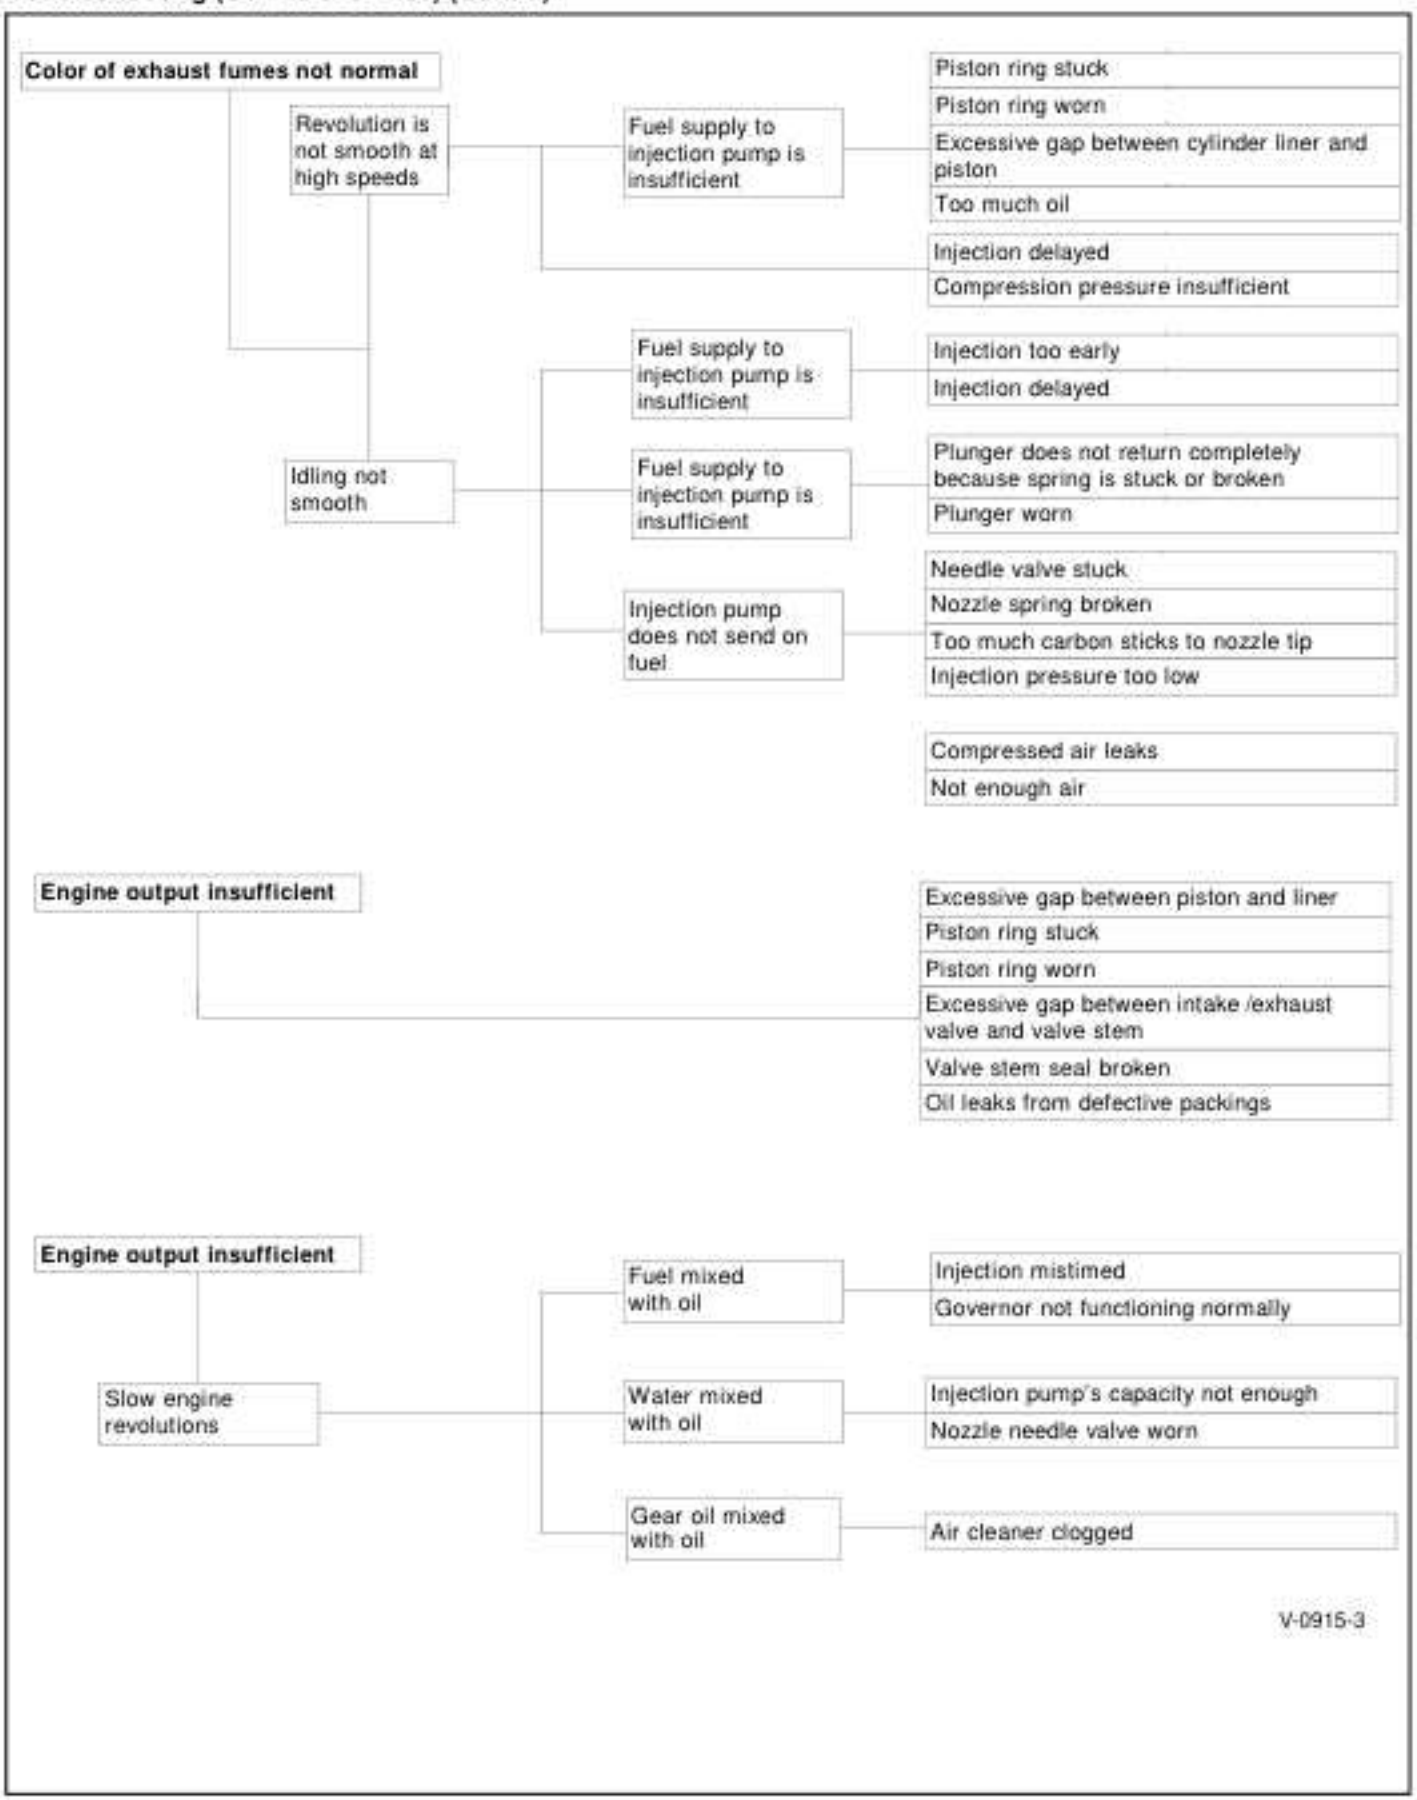


MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >


CT225 SPECIFICATIONS

Dimensions (Standard Machine)

- Dimensions are given for a compact tractor equipped with standard tires. All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specification conform to SAE, ANSI or ISO standards and are subject to change without notice.

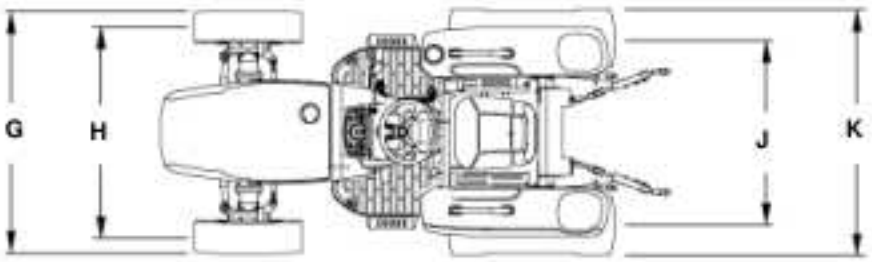

Turning Radius (without brakes) 134 in. (3404 mm)

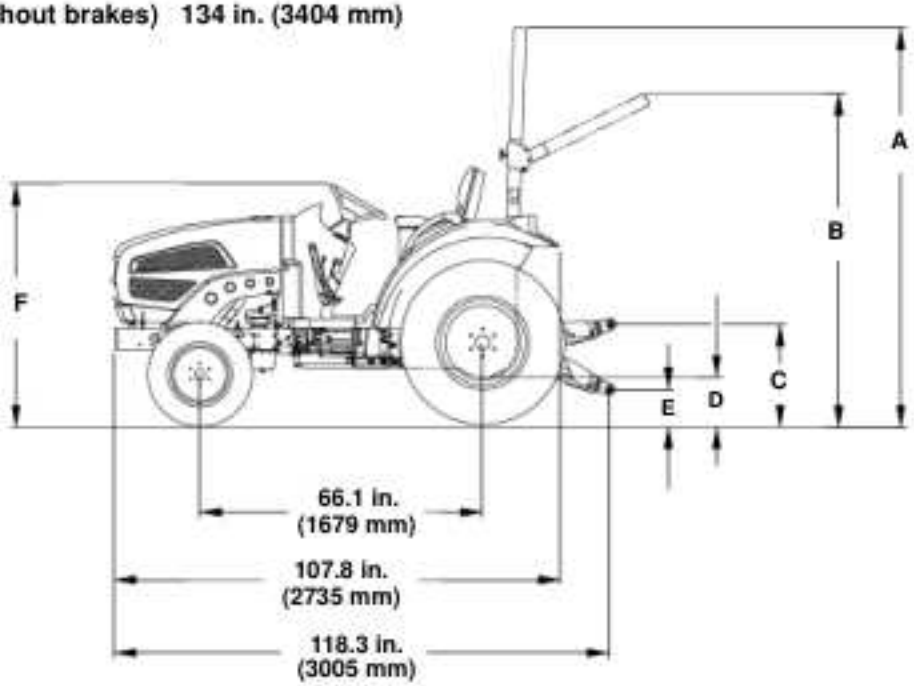


MS-2574S

	AG TIRES	GENERAL PURPOSE TIRES	TURF TIRES
A	95.9 (2436 mm)	95.3 (2420 mm)	94.2 (2392 mm)
B	65.4 (1661 mm)	64.8 (1645 mm)	63.7 (1617 mm)
C	32.7 (830 mm)	32.1 (814 mm)	30.9 (786 mm)
D	9.9 (252 mm)	9.3 (236 mm)	8.2 (207 mm)
E	7.1 (180 mm)	6.5 (164 mm)	5.3 (136 mm)
F	57.6 (1463 mm)	57.0 (1447 mm)	55.9 (1419 mm)
G	51.2 (1300 mm)	54.4 (1383 mm)	53.7 (1363 mm)
H	44.5 (1129 mm)	46.0 (1169 mm)	45.3 (1150mm)
J +	44.1 (1121 mm)	47.3 (1202 mm)	46.3 (1175 mm)
J	48.4 (1228 mm)	N/A	N/A
K +	55.9 (1421 mm)	62.6 (1591 mm)	60.9 (1546 mm)
K	60.2 (1528 mm)	N/A	N/A

MidWestTech | Bobcat CT225, CT230 Compact Tractor Service Manual | Publication 6986... Order the manual at mid-west-tech.com >

HYDRAULIC/HYDROSTATIC SCHEMATIC
CT225 (S/N A59B11001 AND ABOVE)
CT230 (S/N A59C11001 AND ABOVE)

(PRINTED SEPTEMBER 2007)
V-0918

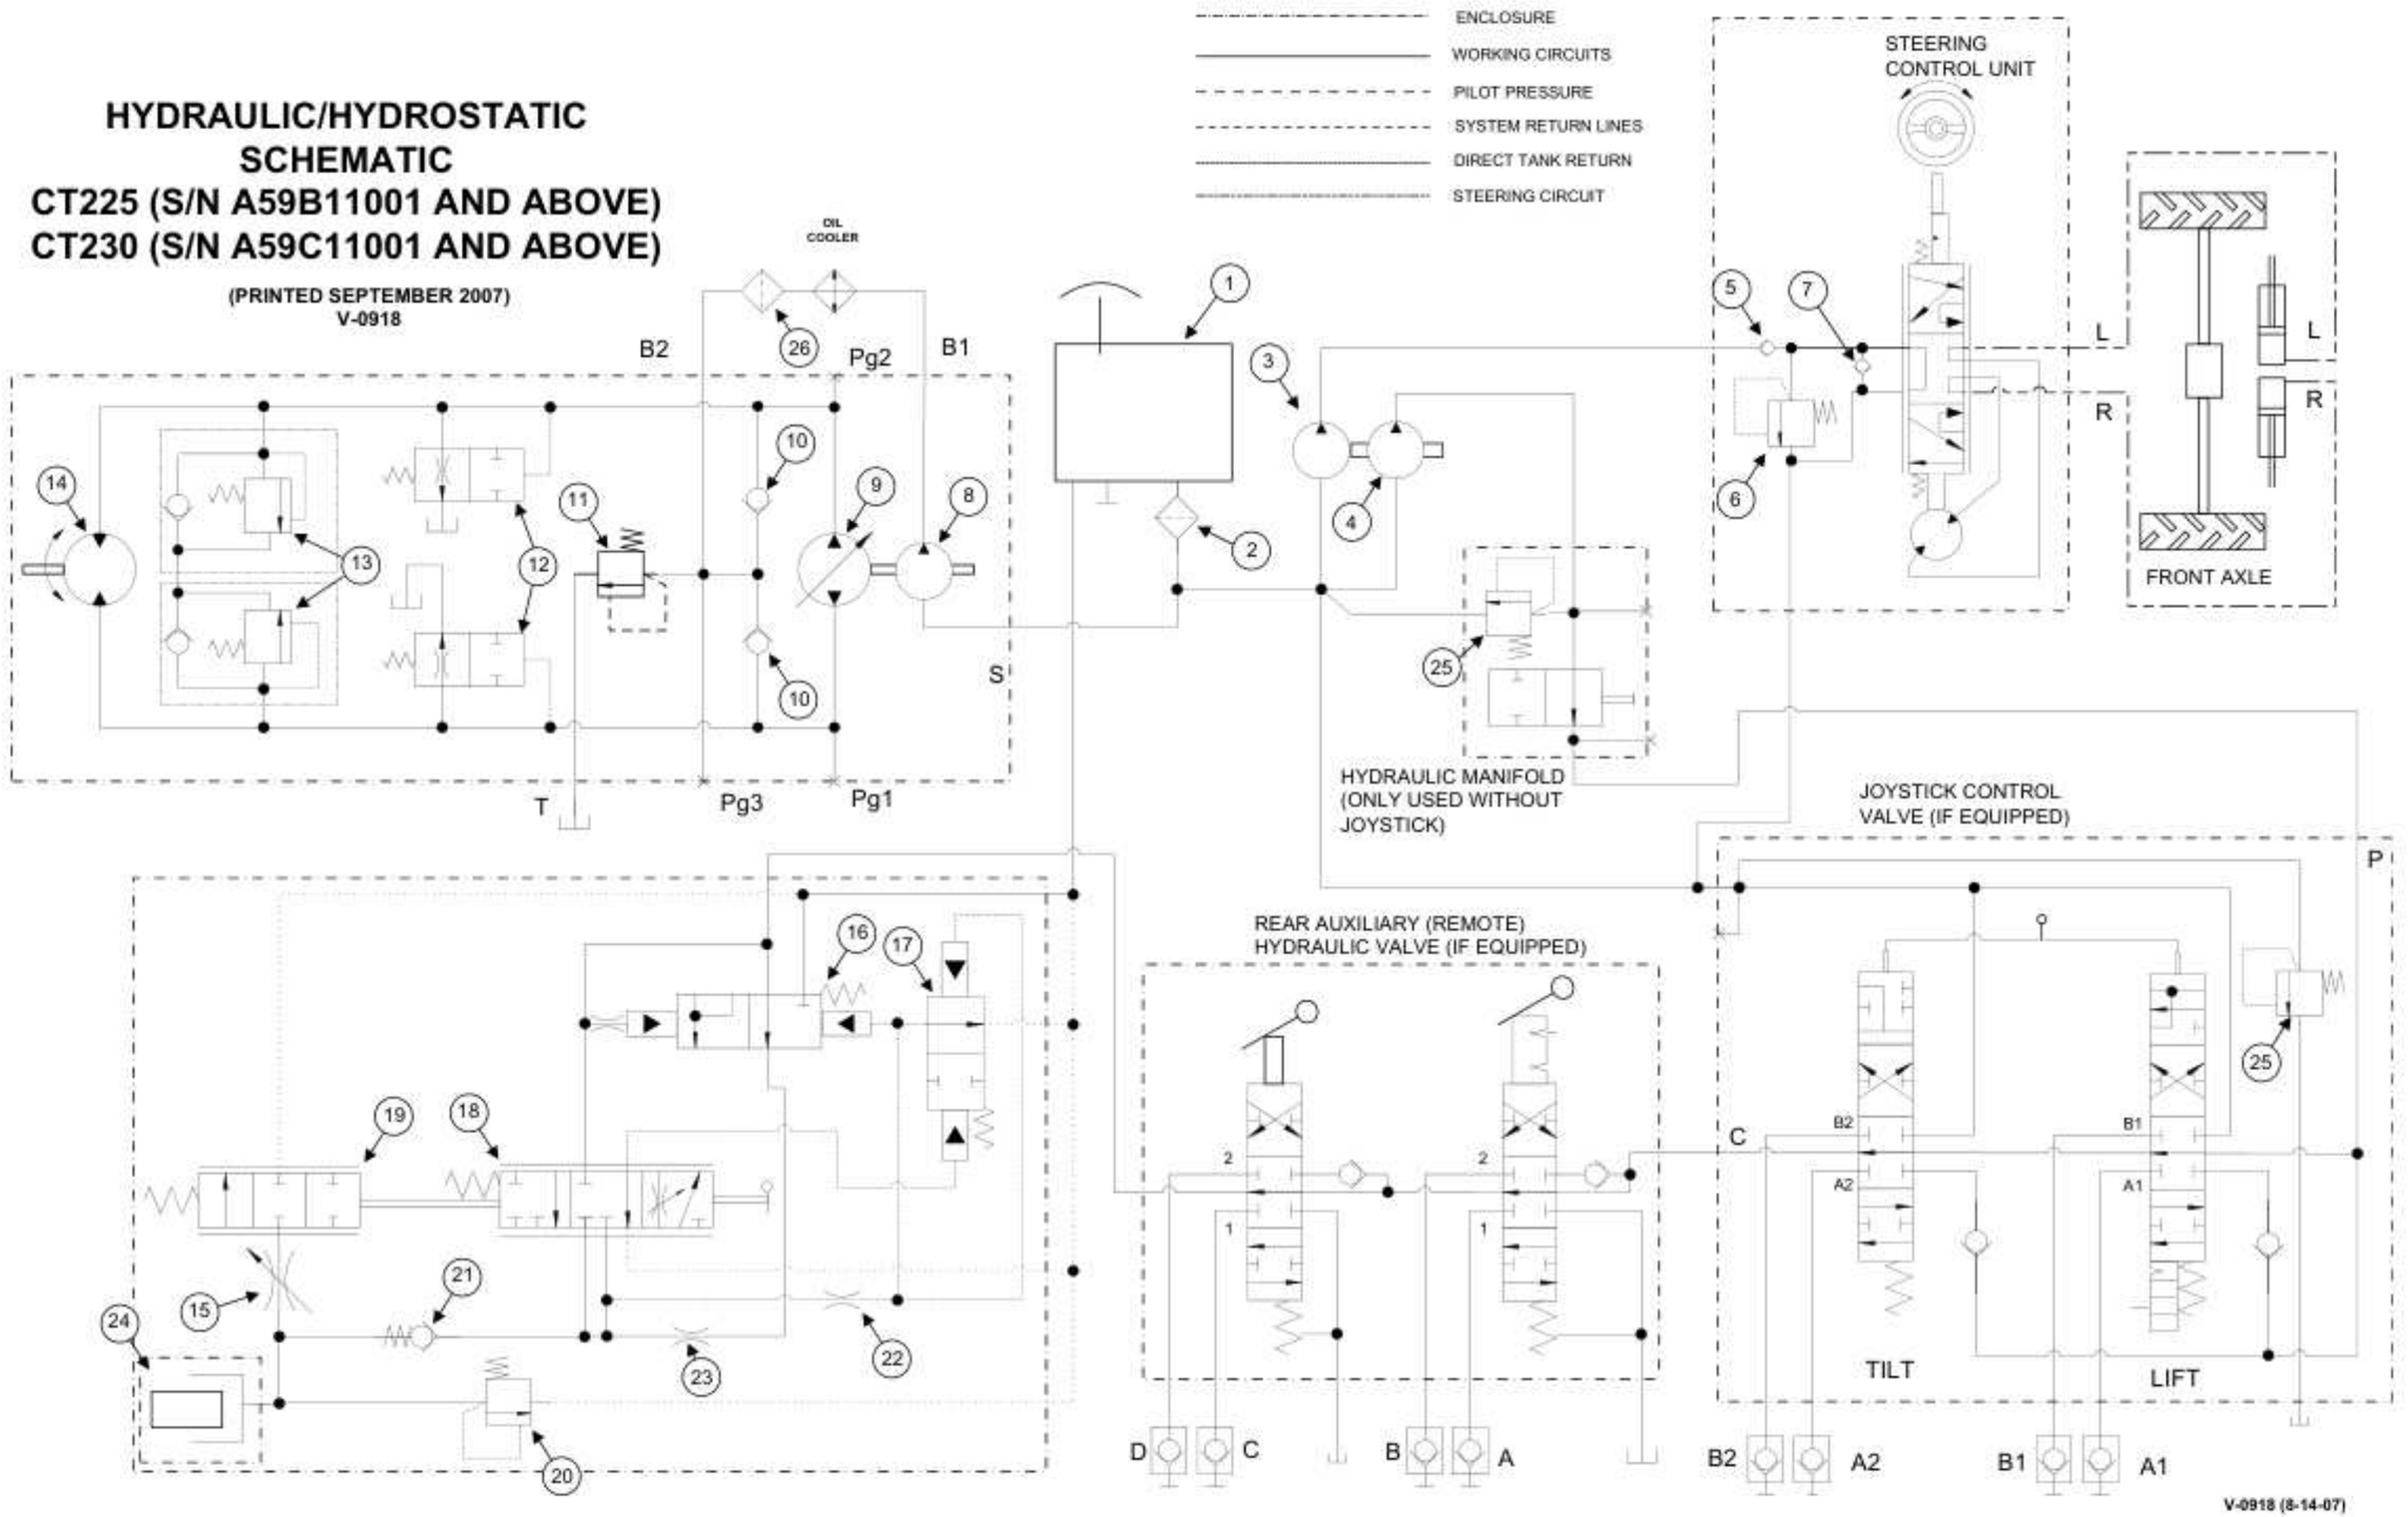

V-0918 (8-14-07)

Order the manual at mid-west-tech.com >