
Bobcat®

Service Manual
S70 Skid-Steer Loader

S/N A3W611001 & Above
S/N A3W711001 & Above

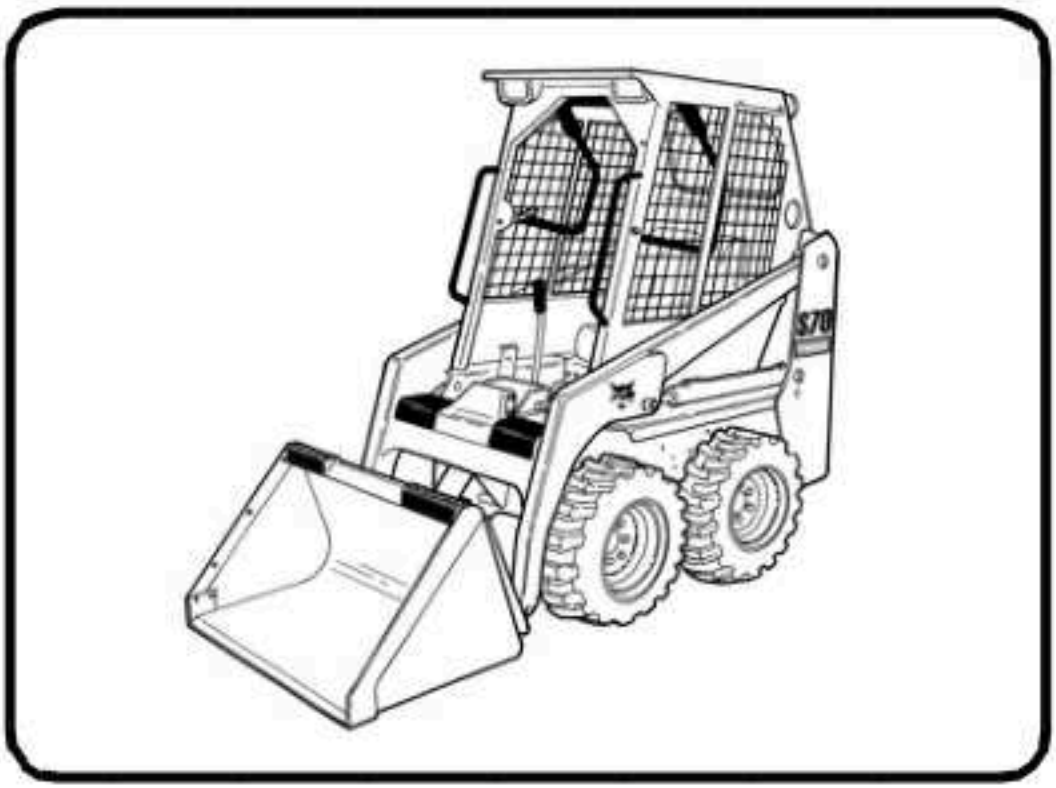

EQUIPPED WITH BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)

6986662 (2-09)

Printed in U.S.A.

© Bobcat Company 2009

MidWestTech | Bobcat S70 Skid Steer Loader Service Manual | Publication 6986662_2_09 Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

AIR CLEANER 70-01
AIR CLEANER SERVICE 10-01
ALTERNATOR 60-01
AUXILIARY CONTROL LOCKBOLT 10-01
AUXILIARY HYDRAULIC INTERLOCK VALVE 20-01

BACKUP ALARM SYSTEM 60-01
BATTERY 60-01
BICS™ CONTROLLER (GATEWAY) 60-01
BICS™ SYSTEM 60-01
BOB-TACH 10-01, 50-01
BRAKE 40-01

CAMSHAFT AND TIMING GEARS 70-01
CHAINCASE 40-01
CHARGE PRESSURE 30-01
CONTROLS 20-01
CONTROL LEVER 50-01
CONTROL PANEL 50-01
CONVERSIONS SPEC-01
CRANKSHAFT AND PISTONS 70-01
CYLINDER HEAD 70-01
CYLINDER (LIFT) 20-01
CYLINDER (TILT) 20-01

DRIVE BELT 30-01
DRIVE COMPONENTS 40-01

ELECTRICAL SYSTEM INFORMATION 60-01
ENGINE 70-01
ENGINE COMPONENTS AND TESTING 70-01
ENGINE COOLING SYSTEM 10-01, 70-01
ENGINE INFORMATION 70-01
ENGINE LUBRICATION SYSTEM 10-01
ENGINE SPEED CONTROL 70-01

FINAL DRIVE TRANSMISSION (CHAINCASE) 10-01
FLYWHEEL AND HOUSING 70-01
FUEL SYSTEM 10-01, 70-01
FUEL TANK 50-01

HEATER COIL 80-01
HEATER FAN 80-01
HEATER SWITCH 80-01
HEATER SYSTEM 80-01
HEATER UNIT 80-01
HEATER VALVE 80-01
HYDRAULIC CONNECTION SPECS SPEC-01
HYDRAULIC CONTROL VALVE 20-01
HYDRAULIC/HYDROSTAIC FILTER 20-01
HYDRAULIC/HYDROSTAIC FLUID SPECIFICATIONS SPEC-01
HYDRAULIC PUMP 20-01
HYDRAULIC FLUID RESERVOIR 20-01
HYDRAULIC SYSTEM INFORMATION 20-01
HYDRAULIC/HYDROSTATIC SYSTEM 10-01
HYDROSTATIC MOTOR 30-01
HYDROSTATIC PUMP 30-01
HYDROSTATIC SYSTEM INFORMATION 30-01

INSTRUMENT PANEL 60-01

LIFT ARMS 50-01
LIFT ARM BY-PASS CONTROL VALVE 20-01
LIFT ARM SUPPORT DEVICE 10-01
LIFTING AND BLOCKING THE LOADER 10-01
LIGHTS 60-01
LOADER SPECIFICATIONS SPEC-01
LOADER STORAGE AND RETURN TO SERVICE 10-01
LUBRICATING THE LOADER 10-01
LUBRICATION SYSTEM 70-01

MAIN RELIEF VALVE 20-01
MUFFLER 70-01

OIL COOLER 20-01
OPERATOR CAB 10-01, 50-01
OPERATOR SEAT 50-01

PARKING BRAKE 40-01
PIVOT PINS 10-01

REAR DOOR 50-01
REAR WINDOW 50-01
RECONDITIONING THE ENGINE 70-01
REGULAR MAINTENANCE 80-01
REMOTE START SWITCH 10-01

SEAT BAR RESTRAINT SYSTEM 10-01
SEAT BAR 50-01
SEAT BAR SENSOR 60-01
SERVICE SCHEDULE 10-01
SPARK ARRESTOR MUFFLER 10-01
STARTER 60-01
STEERING 30-01

TIRE MAINTENANCE 10-01
TORQUE SPECIFICATIONS FOR BOLTS SPEC-01
TOWING THE LOADER 10-01
TRACTION LOCK 60-01
TRANSPORTING THE LOADER ON A TRAILER 10-01
TROUBLESHOOTING 80-01

WINDOWS (REAR) 50-01

Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD II

SAFETY INSTRUCTIONS V

FIRE PREVENTION VII

SERIAL NUMBER LOCATIONS IX

DELIVERY REPORT IX

BOBCAT LOADER IDENTIFICATION X

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

HYDROSTATIC SYSTEM 30-01

DRIVE SYSTEM 40-01

MAIN FRAME 50-01

ELECTRICAL SYSTEM & ANALYSIS 60-01

ENGINE SERVICE 70-01

HEATER 80-01

SPECIFICATIONS SPEC-01

MidWestTech | Bobcat S70 Skid Steer Loader Service Manual | Publication 6986662_2_09 Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:


- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer or at **www.training.bobcat.com** or **www.bobcat.com**. This course is intended to provide rules and practices of correct operation of the Skid-Steer Loader. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at **www.training.bobcat.com** or **www.bobcat.com**. They provide information for safe and correct service procedures.
- The Skid-Steer Loader Safety Video is available from your Bobcat dealer or at **www.training.bobcat.com** or **www.bobcat.com**.

MidWestTech | Bobcat S70 Skid Steer Loader Service Manual | Publication 6986662_2_09 Order the manual at mid-west-tech.com >

ELECTRICAL SCHEMATIC
S70 SMALL LOADER
(S/N A3W611001 AND ABOVE)
(S/N A3W711001 AND ABOVE)

Sheet 1 of 5

PRINTED FEBRUARY 2008

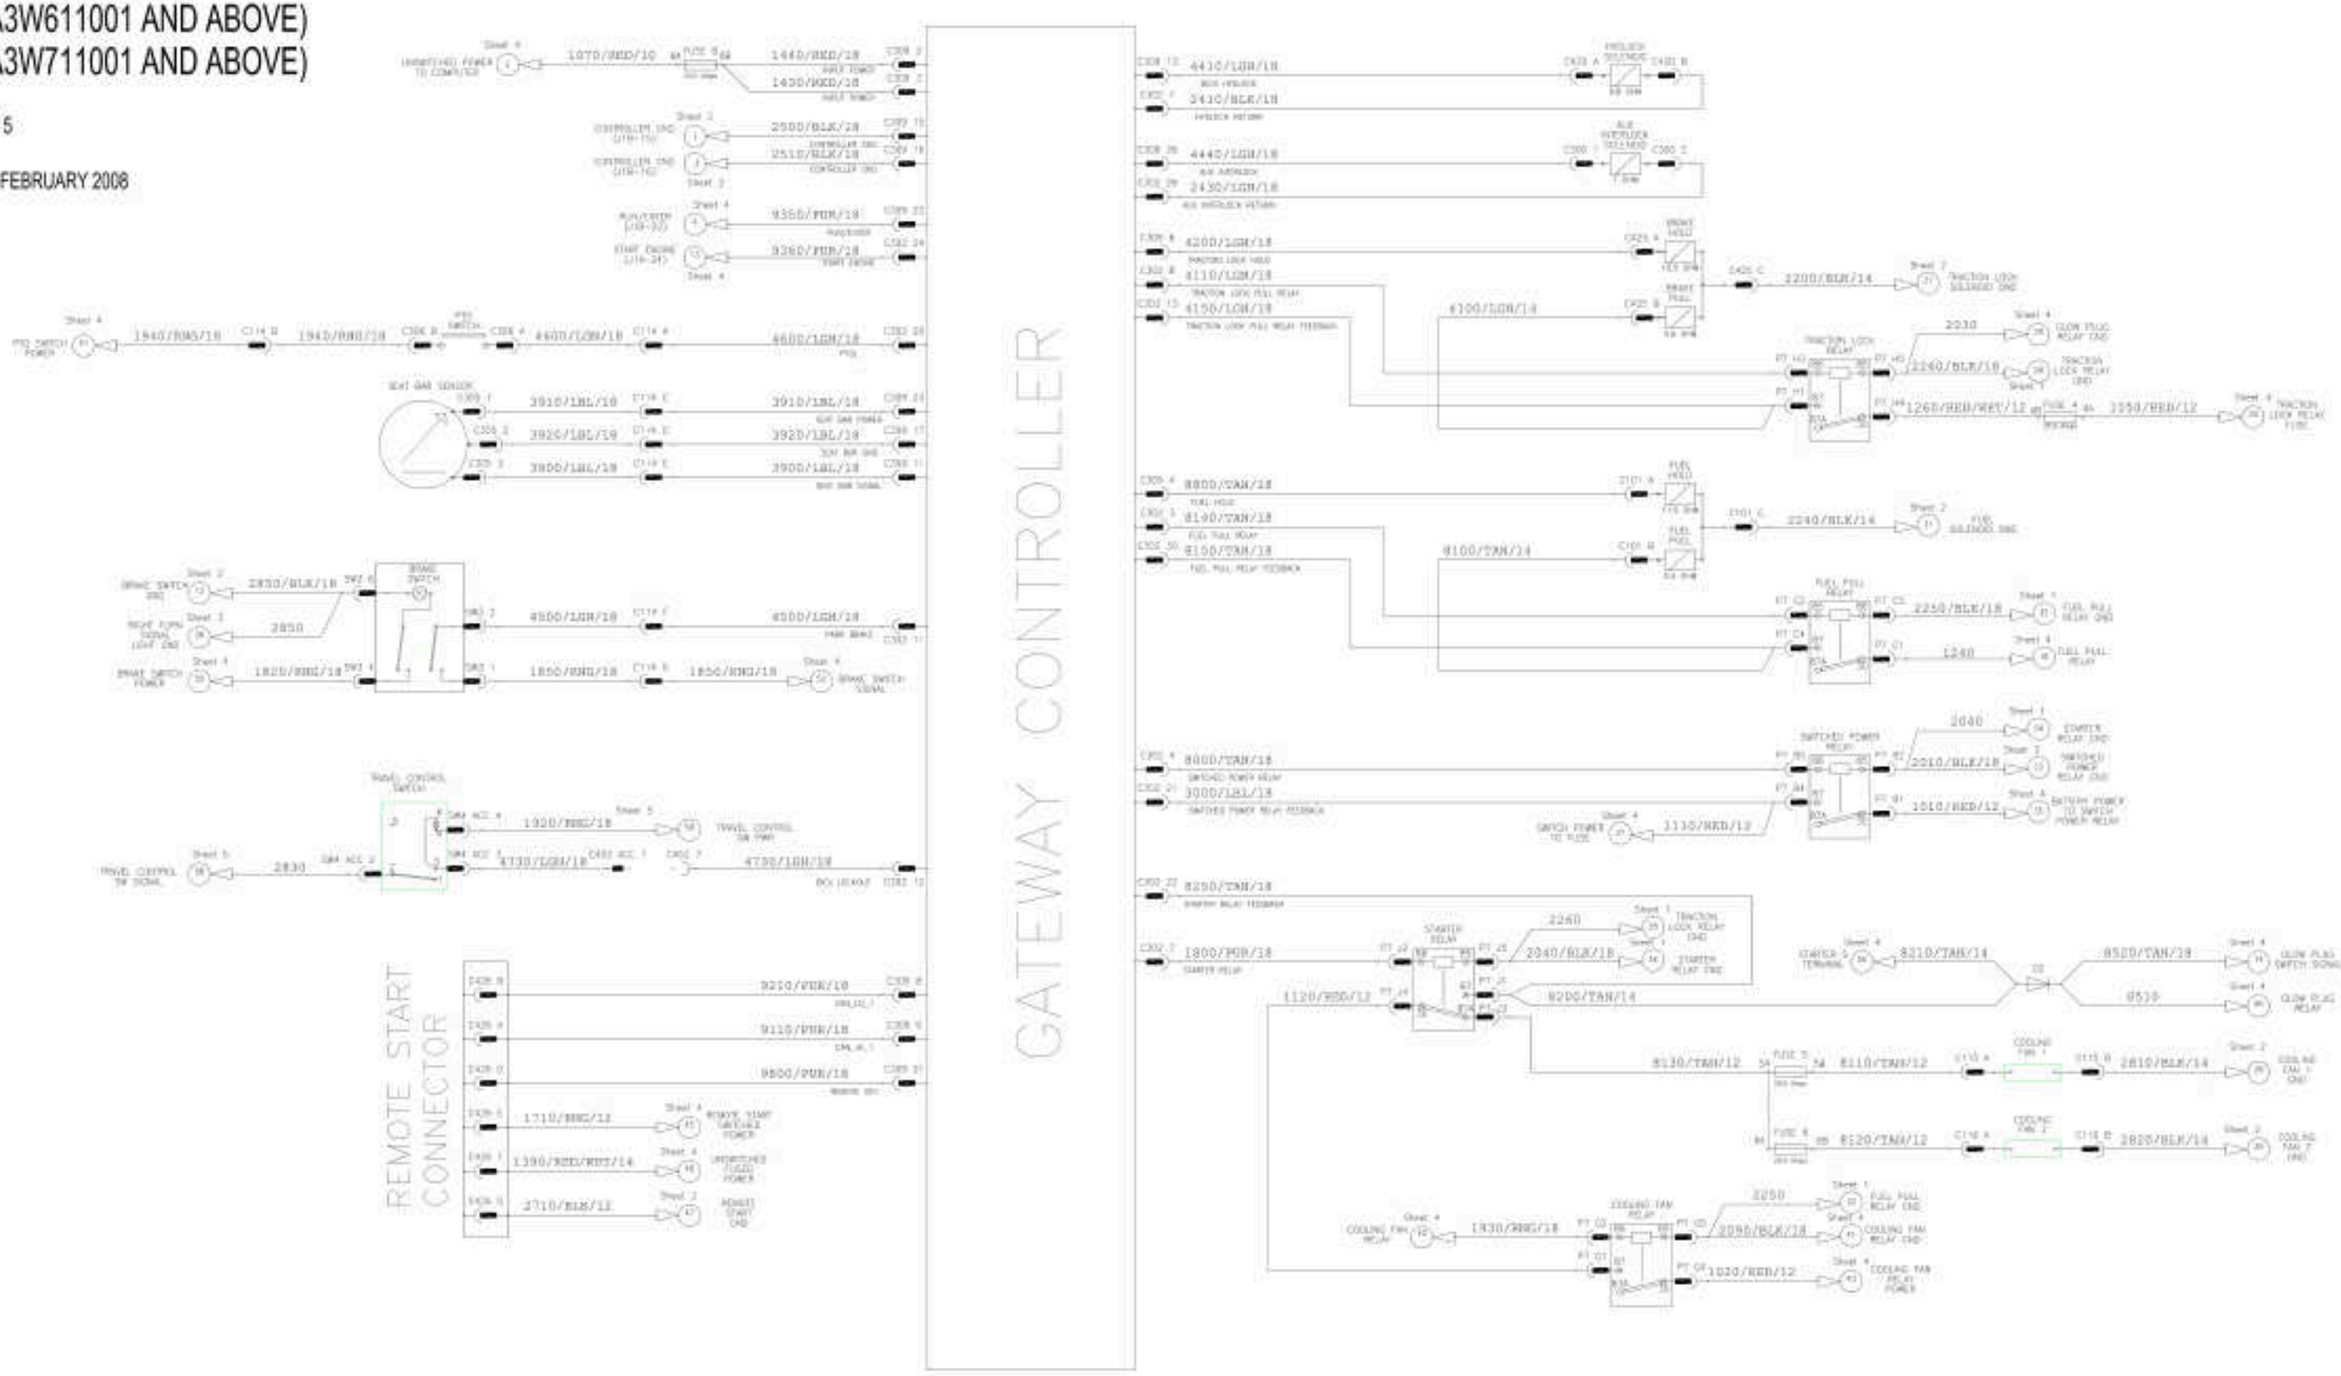

Printed in U.S.A.

7156372 (1-31-08)

Order the manual at mid-west-tech.com >