
Bobcat®

Service Manual
Tractor Backhoe

(6TB) S/N A91400101 & Above
(7TB) S/N AE3H00101 & Above
(8TB) S/N AE3L00101 & Above

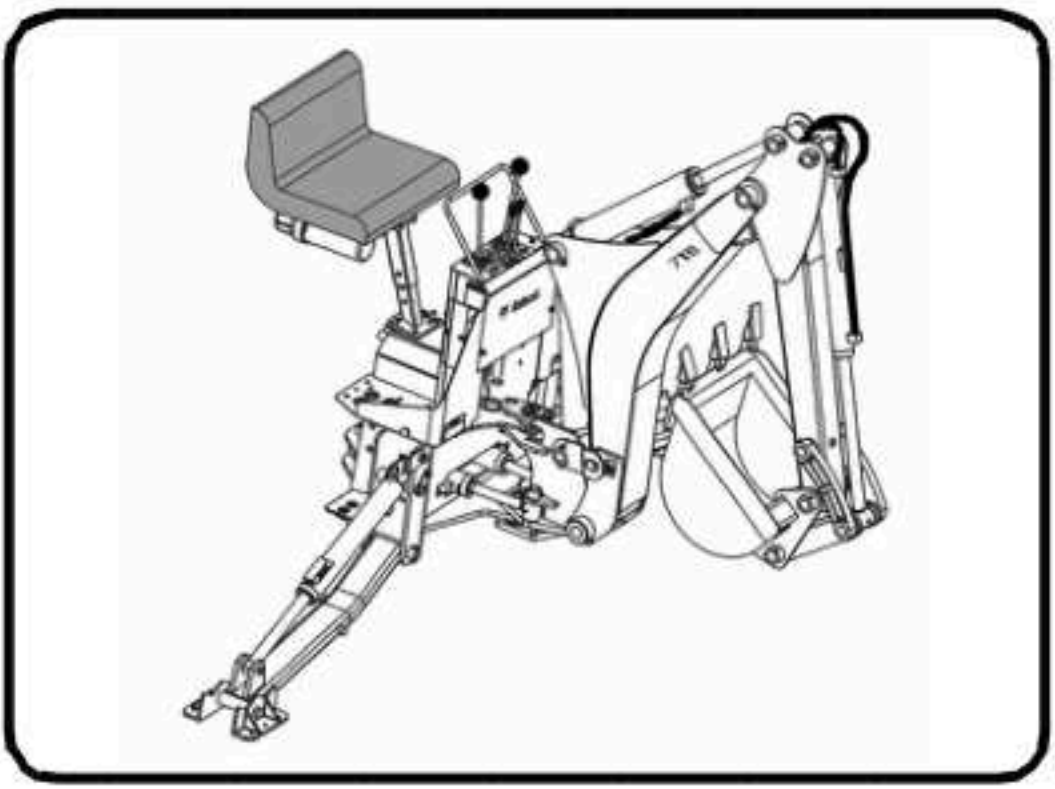

6986711 (5-10)

Printed in U.S.A.

© Bobcat Company 2010

MidWestTech | Bobcat 6TB, 7TB, 8TB Tractor Backhoe Service Manual | Publication 69867... Order the manual at mid-west-tech.com >

CONTENTS

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

MAINFRAME 30-01

SPECIFICATIONS SPEC-01

ALPHABETICAL INDEX INDEX-01

MidWestTech | Bobcat 6TB, 7TB, 8TB Tractor Backhoe Service Manual | Publication 69867... Order the manual at mid-west-tech.com >

SERIAL NUMBER LOCATION 1-7
Attachment Serial Number 1-7
Manual Storage 1-7


DELIVERY REPORT 1-7

ATTACHMENT IDENTIFICATION 1-8

MidWestTech | Bobcat 6TB, 7TB, 8TB Tractor Backhoe Service Manual | Publication 69867... Order the manual at mid-west-tech.com >

Removal And Installation (Cont'd)

Figure 30-10-4

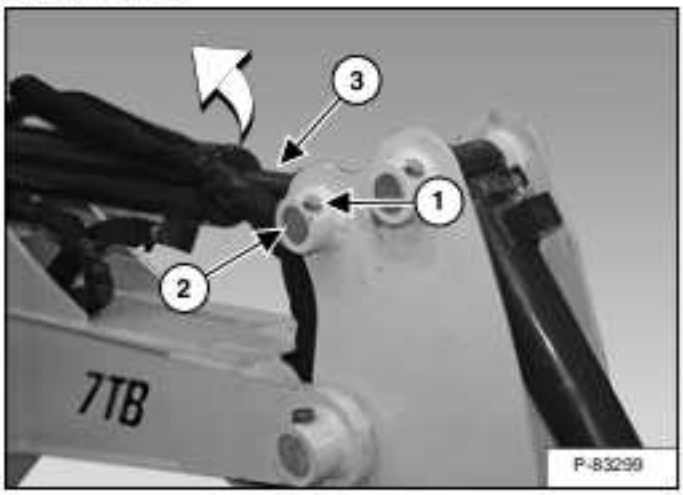


Remove retaining bolt (Item 1) and nut. Remove pivot pin (Item 2) **[Figure 30-10-4]**.

Installation: Tighten retaining bolt to 180 - 200 in.-lb. (21 - 23 N•m) torque.

Rotate arm cylinder (Item 3) **[Figure 30-10-4]** up and away from the arm.

Figure 30-10-5

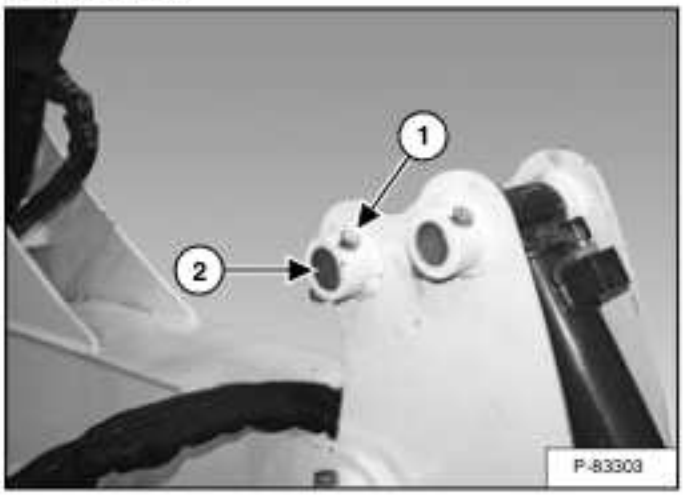

Re-install pivot pin (Item 1) and retaining bolt (Item 2) **[Figure 30-10-5]** and nut.


Figure 30-10-6



Install a chain **[Figure 30-10-6]** around the pivot pin and then to a lifting device. Raise the lifting device taking the slack out of the chain.

NOTE: Use chains or straps that are in good condition and of adequate size to lift the attachment.

Figure 30-10-7

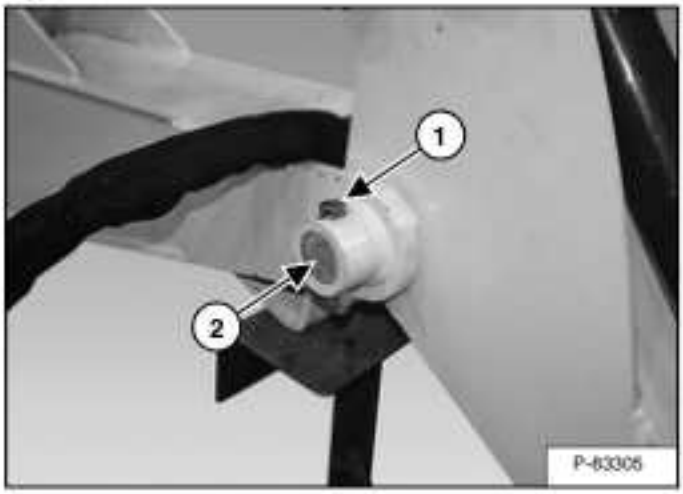


Remove the retaining bolt (Item 1), nut and pivot pin (Item 2) **[Figure 30-10-7]**.

Installation: Tighten retaining bolt to 180 - 200 in.-lb. (21 - 23 N•m) torque.

Raise the lifting device and move the arm away from the boom.

MidWestTech | Bobcat 6TB, 7TB, 8TB Tractor Backhoe Service Manual | Publication 69867... Order the manual at mid-west-tech.com >

Hydraulic Schematic (7TB & 8TB)

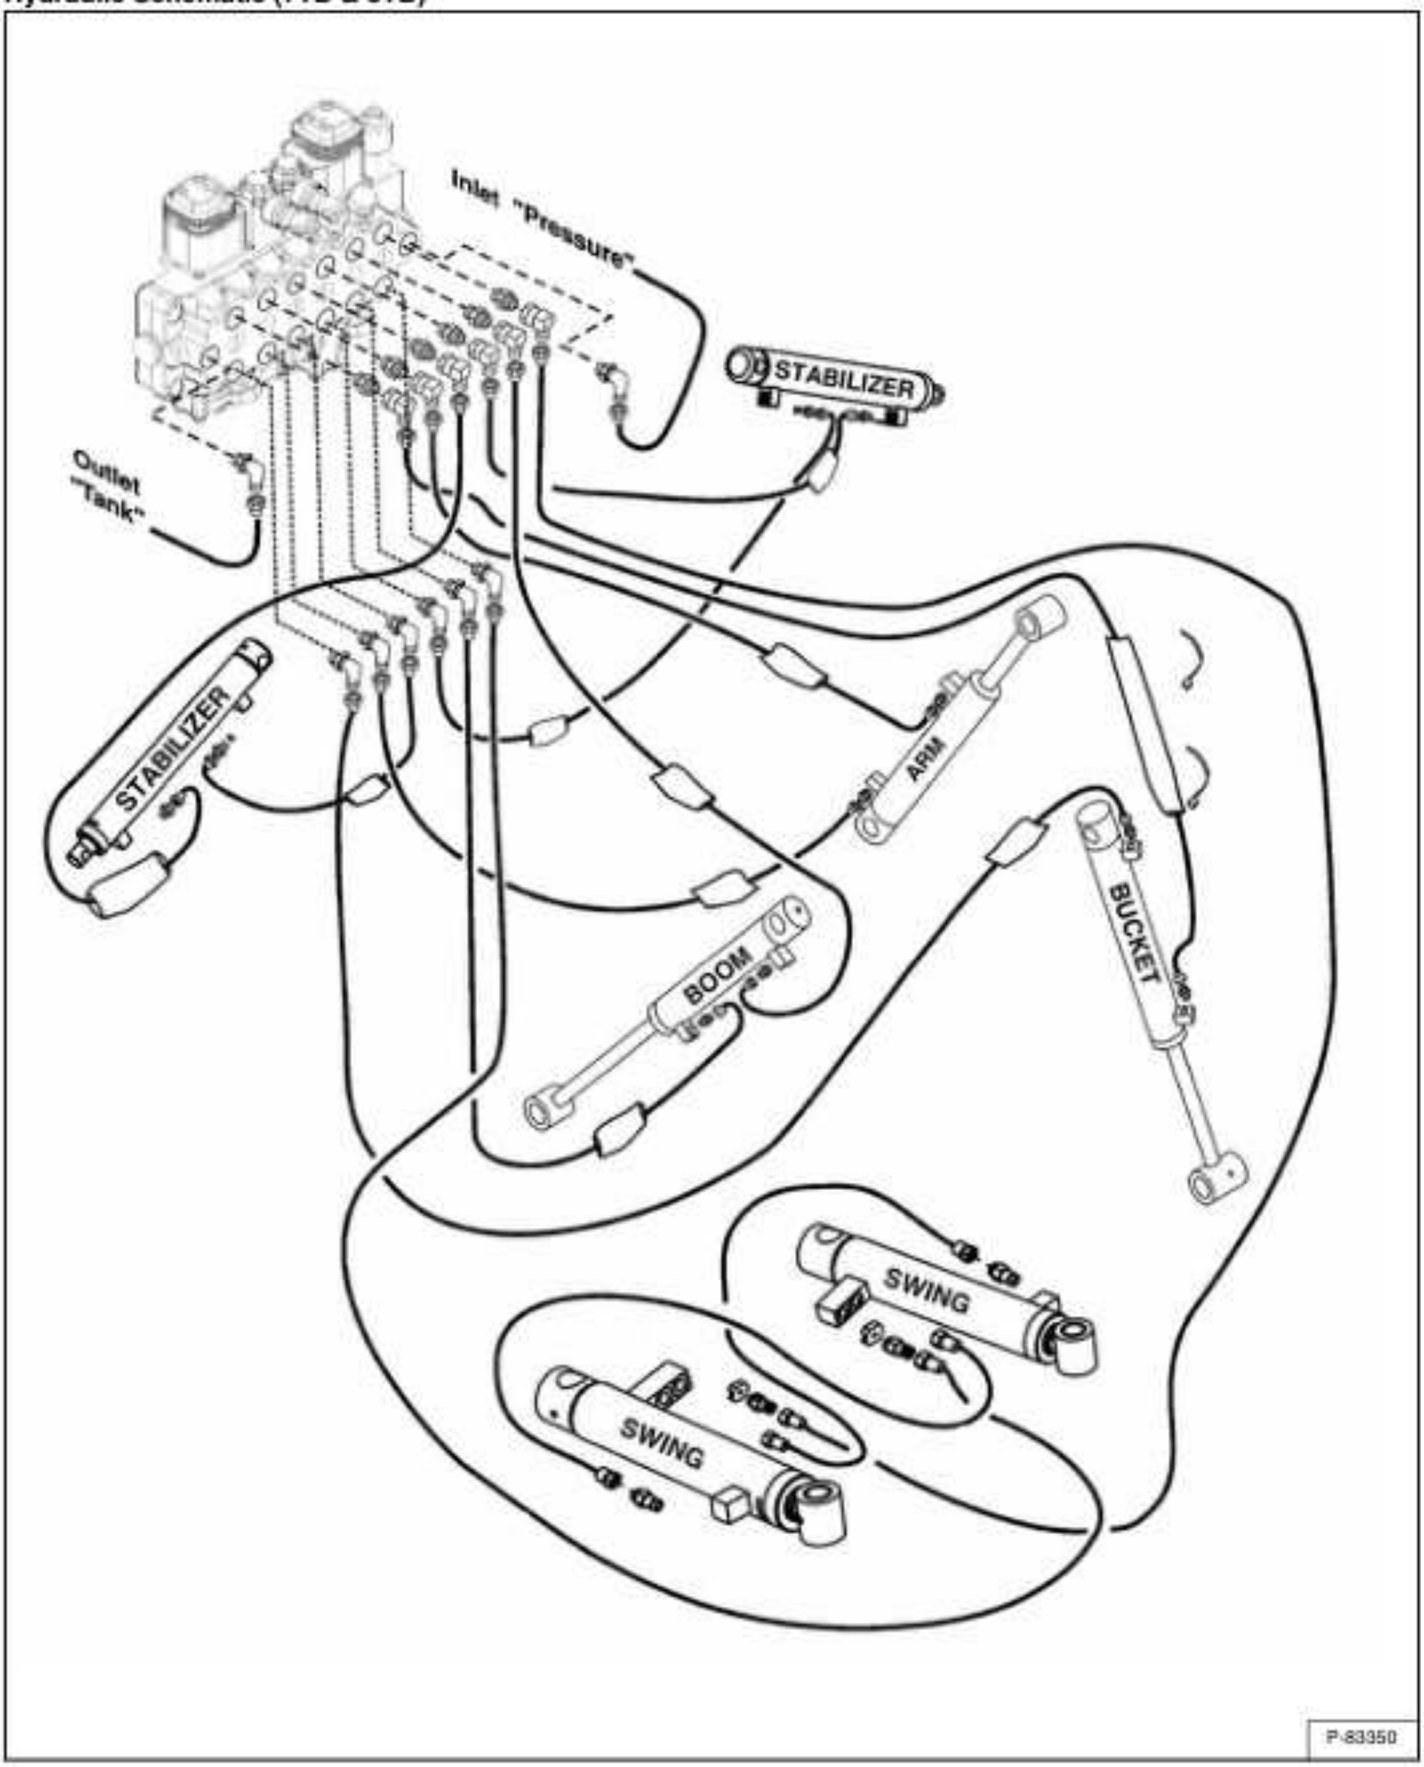

MidWestTech | Bobcat 6TB, 7TB, 8TB Tractor Backhoe Service Manual | Publication 69867... Order the manual at mid-west-tech.com >

(8TB) TRACTOR BACKHOE SPECIFICATIONS (CONT'D)

Dimensions (Cont'd)

DESCRIPTION	8TB BACKHOE
Digging Depth (2 ft. Flat Bottom) (**A**)	97.51 in. (2476,75 mm)
Reach From Pivot Point (**B**)	135.13 in. (3432,30 mm)
Loading Height (Bucket at 60 degrees) (**C**)	80 in. (2032 mm)
Loading Reach (**D**)	51.6 in. (1310,64 mm)
Maximum Leveling Angle (**E**)	18°
Swing Arc (**F**)	180°
Bucket Rotation (**G**)	180°
Stabilizer Spread (Transport) (**H**)	53.75 in. (1365,25 mm)
Stabilizer Spread (Operating) (**I**)	90 in. (2286 mm)
Overall Width	53.75 in. (1365,25 mm)

Performance

DESCRIPTION	8TB BACKHOE
Boom Swing Mechanism	Twin Cylinder
Digging Force Using Bucket Cylinder	4156 lb. (1885,13 kg)
Digging Force Using Arm Cylinder	2183 lb. (990,19 kg)
Lift Capacity Boom Cylinder	547 lb. (248,12 kg)
Digging Depth (Maximum)	103.36 in. (2625,34 mm)
Net Weight (With 12 in. (305 mm) Bucket)	1378 lb. (625,23 kg)

Controls

DESCRIPTION	8TB BACKHOE
Boom & Swing	Left Hand Lever (with detent (float) feature)
Arm & Bucket	Right Hand Lever

Hydraulic System

CYLINDER DESCRIPTION	PISTON DIA.	STROKE	RETRACTED LENGTH	EXTENDED LENGTH	ROD DIA.
Boom	2.75 in. (69,85 mm)	16.75 in. (425,45 mm)	25.50 in. (647,7 mm)	42.25 in. (1073,15 mm)	1.50 in. (38.1 mm)
Arm	2.25 in. (57,15 mm)	17.6 in. (447,04 mm)	26.19 in. (665,23 mm)	43.88 in. (1114,55 mm)	1.50 in. (38,10 mm)
Bucket	2.25 in. (57,15 mm)	19.25 in. (488,95 mm)	27.00 in. (685,8 mm)	46.25 in. (1174,75 mm)	1.50 in. (38,10 mm)
Swing	2.25 in. (57,15 mm)	8.56 in. (217,4 mm)	16.00 in. (406,4 mm)	24.56 in. (623,82 mm)	1.13 in. (28,70 mm)
Stabilizer	2.25 in. (57,15 mm)	14.00 in. (355,6 mm)	21.00 in. (533,4 mm)	35.00 in. (889 mm)	1.38 in. (35,05 mm)

MidWestTech | Bobcat 6TB, 7TB, 8TB Tractor Backhoe Service Manual | Publication 69867... Order the manual at mid-west-tech.com >