
Bobcat®

Operation & Maintenance Manual
435 Compact Excavator

S/N AACB11001 & Above
S/N AA8911001 & Above
S/N AACD11001 & Above
S/N AA8A11001 & Above

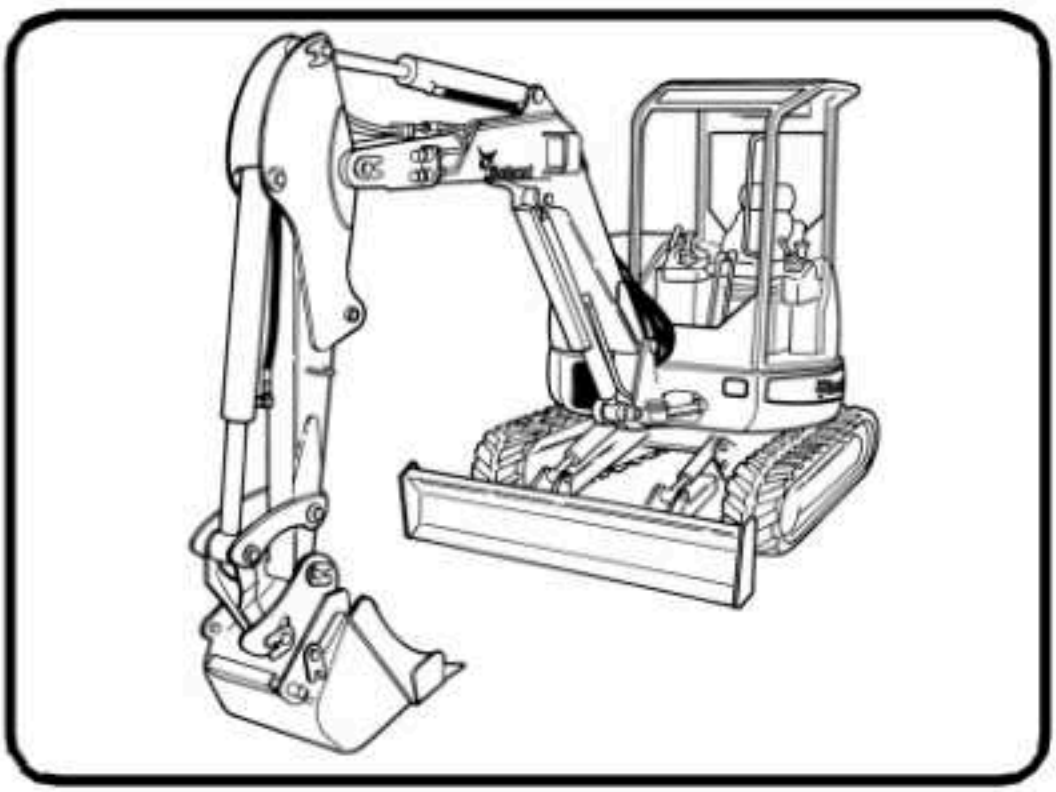

6986748 (5-08) Revised (10-09) (2)

Printed in U.S.A.

© Bobcat Company 2009

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY & TRAINING RESOURCES XI

OPERATING INSTRUCTIONS OI-1

PREVENTIVE MAINTENANCE PM-1

SYSTEM SETUP AND ANALYSIS SA-1

MACHINE SIGN TRANSLATIONS MST-1

SPECIFICATIONS SPEC-1

WARRANTY WARRANTY-1

ALPHABETICAL INDEX INDEX-1

REFERENCE INFORMATION

Write the correct information for YOUR excavator in the spaces below. Always use these numbers when referring to your Bobcat Excavator.

Bobcat Excavator Serial Number _____

Engine Serial Number _____

_____

NOTES _____

_____

_____

_____

YOUR BOBCAT EXCAVATOR DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Bobcat Excavator. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR MACHINE. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS IS0 9001 CERTIFIED V

DELIVERY REPORT VII

EXCAVATOR IDENTIFICATION VIII

FEATURES, ACCESSORIES AND ATTACHMENTS IX
- Attachments IX
- Buckets Available IX
- Falling Object Guards (FOGS) X
- Options and Accessories IX
- Special Applications Kit X
- Special Applications Kit Inspection And Maintenance X
- Standard Items IX

REGULAR MAINTENANCE ITEMS V

SERIAL NUMBER LOCATIONS VII
- Engine Serial Number VII
- Excavator Serial Number VII

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

BOBCAT COMPANY IS IS0 9001 CERTIFIED

ISO 9001 is an international standard that specifies requirements for a quality management system that controls the processes and procedures which we use to design, develop, manufacture and distribute Bobcat products.

British Standards Institute (**BSI**) is the Certified Registrar Bobcat Company chose to assess the Company's compliance with the ISO 9001 at Bobcat's manufacturing facilities in Gwinner and Bismarck, North Dakota (U.S.A.), Pontchateau (France), Dobris (Czech Republic) and the Bobcat corporate offices (Gwinner, Bismarck & West Fargo) in North Dakota. Only certified assessors, like BSI, can grant registrations.

ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

CALIFORNIA
PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

REGULAR MAINTENANCE ITEMS


	ENGINE OIL FILTER (6 Pack) 6675517		BATTERY 6673865
	FUEL FILTER 6667362 FUEL FILTER, inline 6633977		FLUID, Hydraulic / Hydrostatic 6903117 - (2.5 Gal.) 6903118 - (5 Gal.) 6903119 - (55 Gal.)
	AIR FILTER, Outer 6666375		RADIATOR CAP 6682274
	AIR FILTER, Inner 6666376		PROPYLENE GLYCOL ANTI-FREEZE, Premixed [-34° F (-37°C)] 6724094
	PRIMARY HYDRAULIC FILTER 6668819 CASE DRAIN HYDRAULIC FILTER 6681012 FAN CASE DRAIN HYDRAULIC FILTER 6681012		PROPYLENE GLYCOL ANTI-FREEZE, Concentrate 6724354
MOTOR OIL 6903105 . . . . SAE 15W/40 CE/SG (12 qt.) 6903106 . . . . SAE 15W/40 CE/SG (1 Gal.) 6903113 . . . . SAE 15W/40 CE/SG (2.5 Gal.) 6903107 . . . . SAE 10W/30 CE/SG (12 qt.) 6903108 . . . . SAE 10W/30 CE/SG (1 Gal.) 6903112 . . . . . SAE 10W/30 CE/SG (2.5 Gal.)		6903109 . . . . . SAE 30W CE/SG (12 qt.) 6903110 . . . . . SAE 30W CE/SG (1 Gal.) 6903111 . . . . . SAE 30W CE/SG (2.5 Gal.)	

NOTE: Always verify Part Numbers with your Bobcat dealer.

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

STD/ISO Selector Valve


Figure OI-5

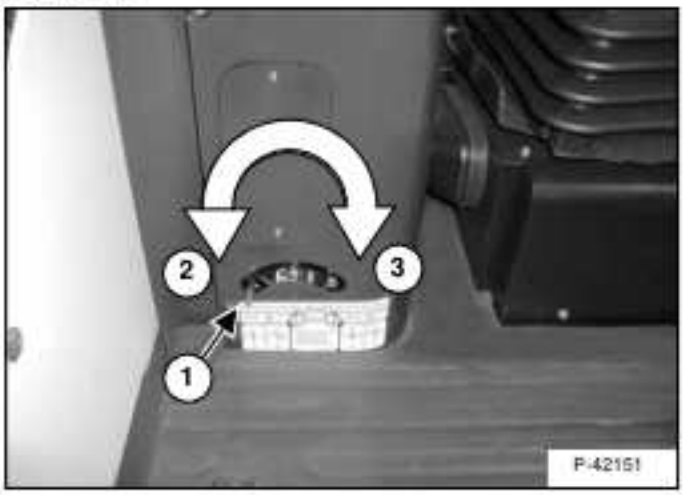

Move the lever (Item 1) to the right (Item 2) to select STANDARD Control Pattern. Move to the left (Item 3) to select ISO Control Pattern **[Figure OI-5]**. (See HYDRAULIC CONTROLS on Page OI-19.)

Upperstructure Slew Lock

Figure OI-6

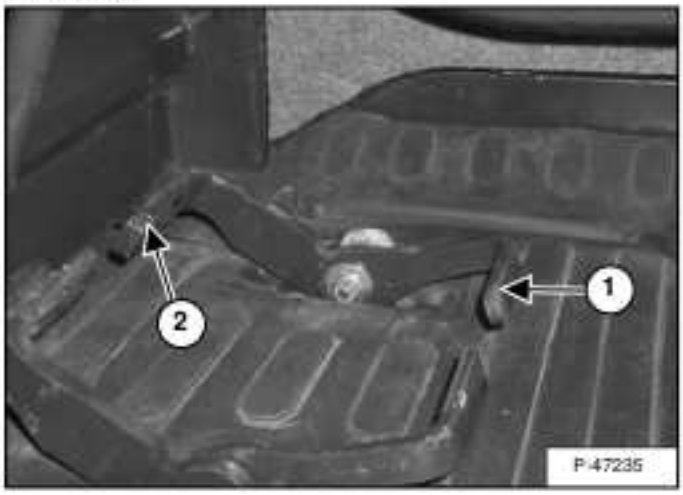

Push down on the front (Item 1) **[Figure OI-6]** of the foot pedal to engage the upperstructure swing lock.

Push down on the rear (Item 2) **[Figure OI-6]** to disengage the upperstructure slew lock.

NOTE: Upperstructure must be in the straight forward or straight rearward position for upperstructure to lock.

Raising And Lowering The Console

Raise the console before exiting the cab.

Figure OI-7



Pull up on the release handle **[Figure OI-7]**. The lift spring will assist in raising the console.

Lower the console before operating the excavator.

Push down on the console **[Figure OI-7]** until the latch is engaged.

NOTE: When the console is raised, the hydraulic and traction system functions are locked and will not operate.

If the engine stops, the boom/bucket (attachments) can be lowered to the ground using hydraulic pressure in the accumulator.

The control console must be in the locked down position, and the key switch in the ON position.

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >


Removing And Replacing Oil Filter

See the SERVICE SCHEDULE for the service interval for replacing the engine oil and filter. (See SERVICE SCHEDULE on Page PM-5.)

Run the engine until it is at operating temperature. Stop the engine.

Open the tailgate.


Figure PM-23

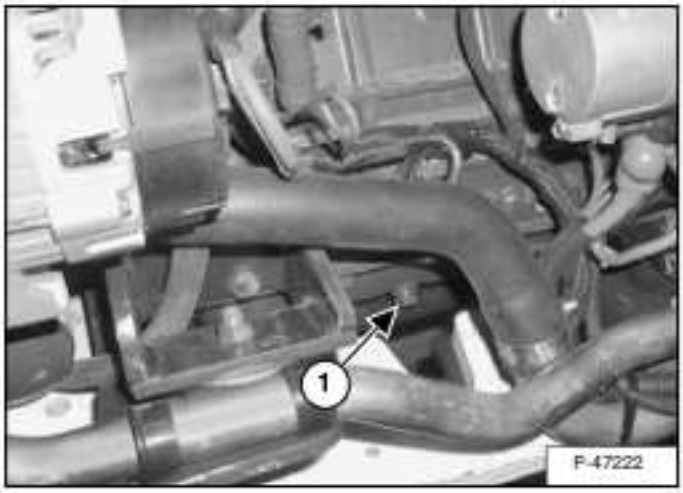

Remove the plug (Item 1) **[Figure PM-23]**. Drain the oil into a container.

Recycle or dispose of used oil in an environmentally safe manner.

Figure PM-24

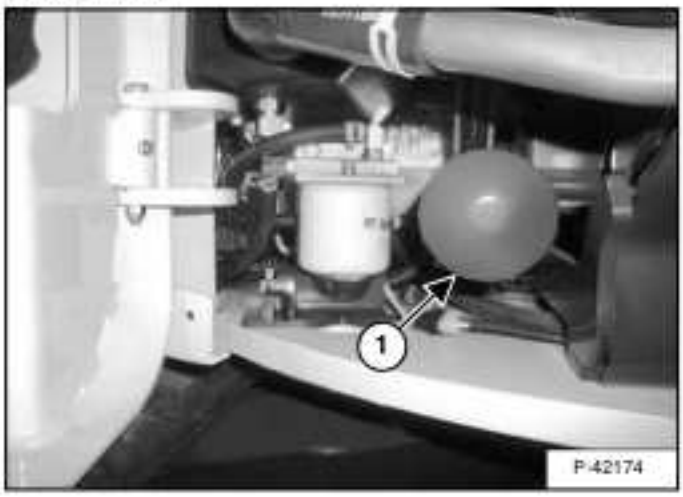

Remove the oil filter (Item 1) **[Figure PM-24]** and clean the filter housing surface.


Recycle or dispose of used oil in an environmentally safe manner.

Use a genuine Bobcat replacement filter.

Put clean oil on the filter gasket. Install the filter and hand tighten.

Install and tighten the oil plug.

Figure PM-25

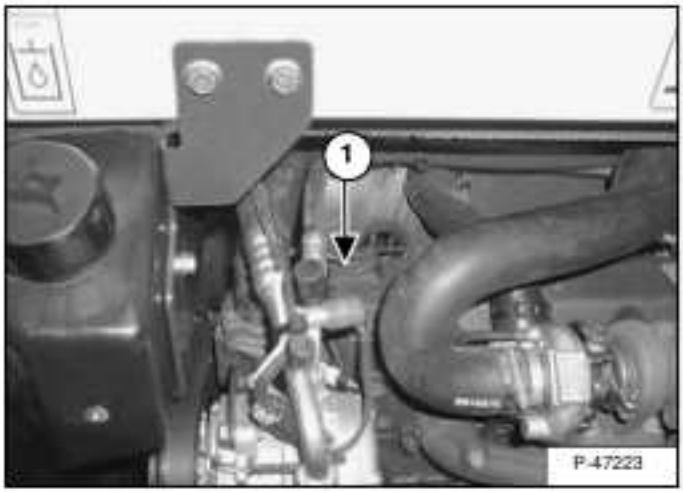

Remove the fill cap (Item 1) **[Figure PM-25]**.

Put oil in the engine. (See REGULAR MAINTENANCE ITEMS on Page V.) (See Capacities on Page SPEC-9.)

Install the fill cap.

Start the engine and let it run for several minutes.

Stop the engine. Check for leaks at the oil filter. Check the oil level.

Add oil as needed if it is not at the top mark on the dipstick.

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

Performance (S/N AACD11001 & Above), (AA8A11001 & Above)

Machine Serial Number	S/N AACD11001 & Above	AA8A11001 & Above
Operating weight w/ canopy, rubber tracks, standard arm, and 24 inch (609 mm) bucket	10685 lb. (4846 kg)	10742 lb. (4872 kg)
Steel tracks add 74 lbs (33 Kg) Cab w/heater add 305 lbs (138 Kg) Cab w/HVAC add 355 lbs (161 kg) With Long Arm add 247 lb. (112 kg) W/Angle Blade add 263 lb. (120 kg)	Add the following weights to the above, if equipped with any of these options.	
Travel Speed	Low Range 2.73 mph (4.39 km/hr) High Range 5.06 mph (8.14 km/hr)	
Boom Swing (Offset)	Left 90° Right 50°	

Performance (S/N AACB11001 & Above), (AA8911001 & Above)

Machine Serial Number	AACB11001 & Above	AA8911001 & Above
Operating weight w/ canopy, rubber tracks, standard arm, and 24 inch (609 mm) bucket	10388 lb. (4711 kg)	10445 lb. (4737 kg)
Steel tracks add 74 lbs (33 Kg) Cab w/heater add 305 lbs (138 Kg) Cab w/HVAC add 355 lbs (161 kg) With Long Arm add 247 lb. (112 kg) W/Angle Blade add 263 lb. (119 kg)	Add the following weights to the above, if equipped with any of these options.	
Travel Speed	Low Range 1.67 mph (2.69 km/hr) High Range 2.74 mph (4.41 km/hr)	
Boom Swing (Offset)	Left 90° Right 50°	

Controls

Steering	Two hand levers or foot pedals
Hydraulics	Two hand operated levers (joysticks) control boom, bucket, arm and upperstructure slew
Auxiliary Hydraulics	Electric switch in right joystick
Auxiliary Pressure Release	Electric switch in right joystick
Engine	Hand Lever engine speed, key type start switch
Starting Aid	Glow Plugs - activated by key switch
Brakes Travel Service & Parking Swing Service Holding	 Hydraulic lock in motor circuit Hydraulic lock on motor Automatically applied slew brake integrated in slew motor

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat excavator and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Lift Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Before Operation* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI EXC-0208

MidWestTech | Bobcat 435 Compact Excavator Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >