
T35120SL MP

S/N A8GS 11001
& above

Bobcat®

SERVICE MANUAL

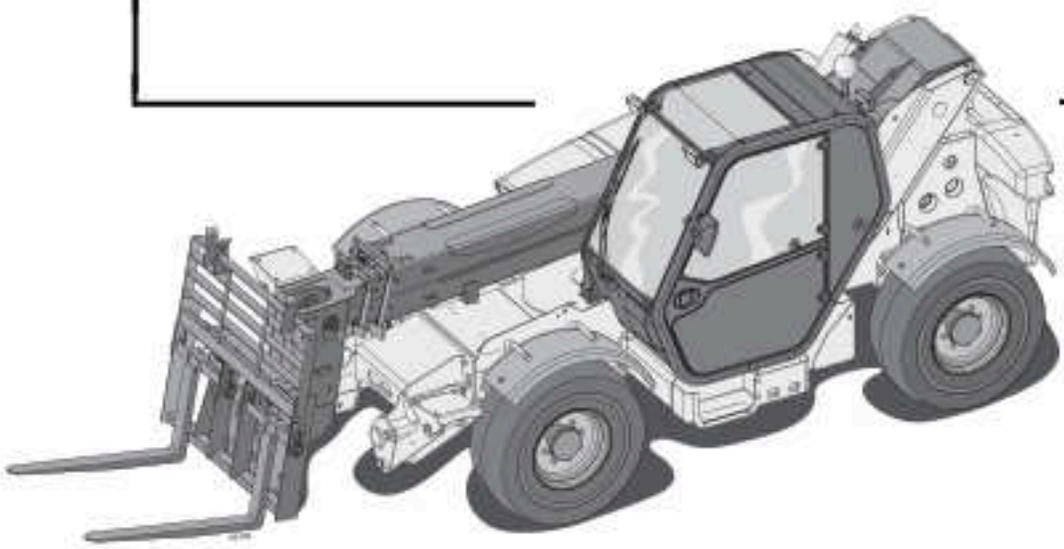

6986767-EN (08-08)

Bobcat

Printed in Europe

© Bobcat Europe, 2008

MidWestTech | Bobcat T35120SL MP Telescopic Handler Service Manual | Publicatio... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD III

SAFETY INSTRUCTIONS V

FIRE PREVENTION VI

SERIAL NUMBER LOCATIONS VIII

DELIVERY REPORT IX

IDENTIFICATION OF THE TELESCOPIC HANDLER X

SAFETY AND MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

HYDROSTATIC SYSTEM 30-01

DRIVE SYSTEM 40-01

MAIN FRAME 50-01


ELECTRICAL SYSTEM AND ANALYSIS 60-01

ENGINE SERVICE 70-01

HEATING, VENTILATION, AIR CONDITIONING 80-01

SPECIFICATIONS SPEC-01

MidWestTech | Bobcat T35120SL MP Telescopic Handler Service Manual | Publicatio... Order the manual at mid-west-tech.com >

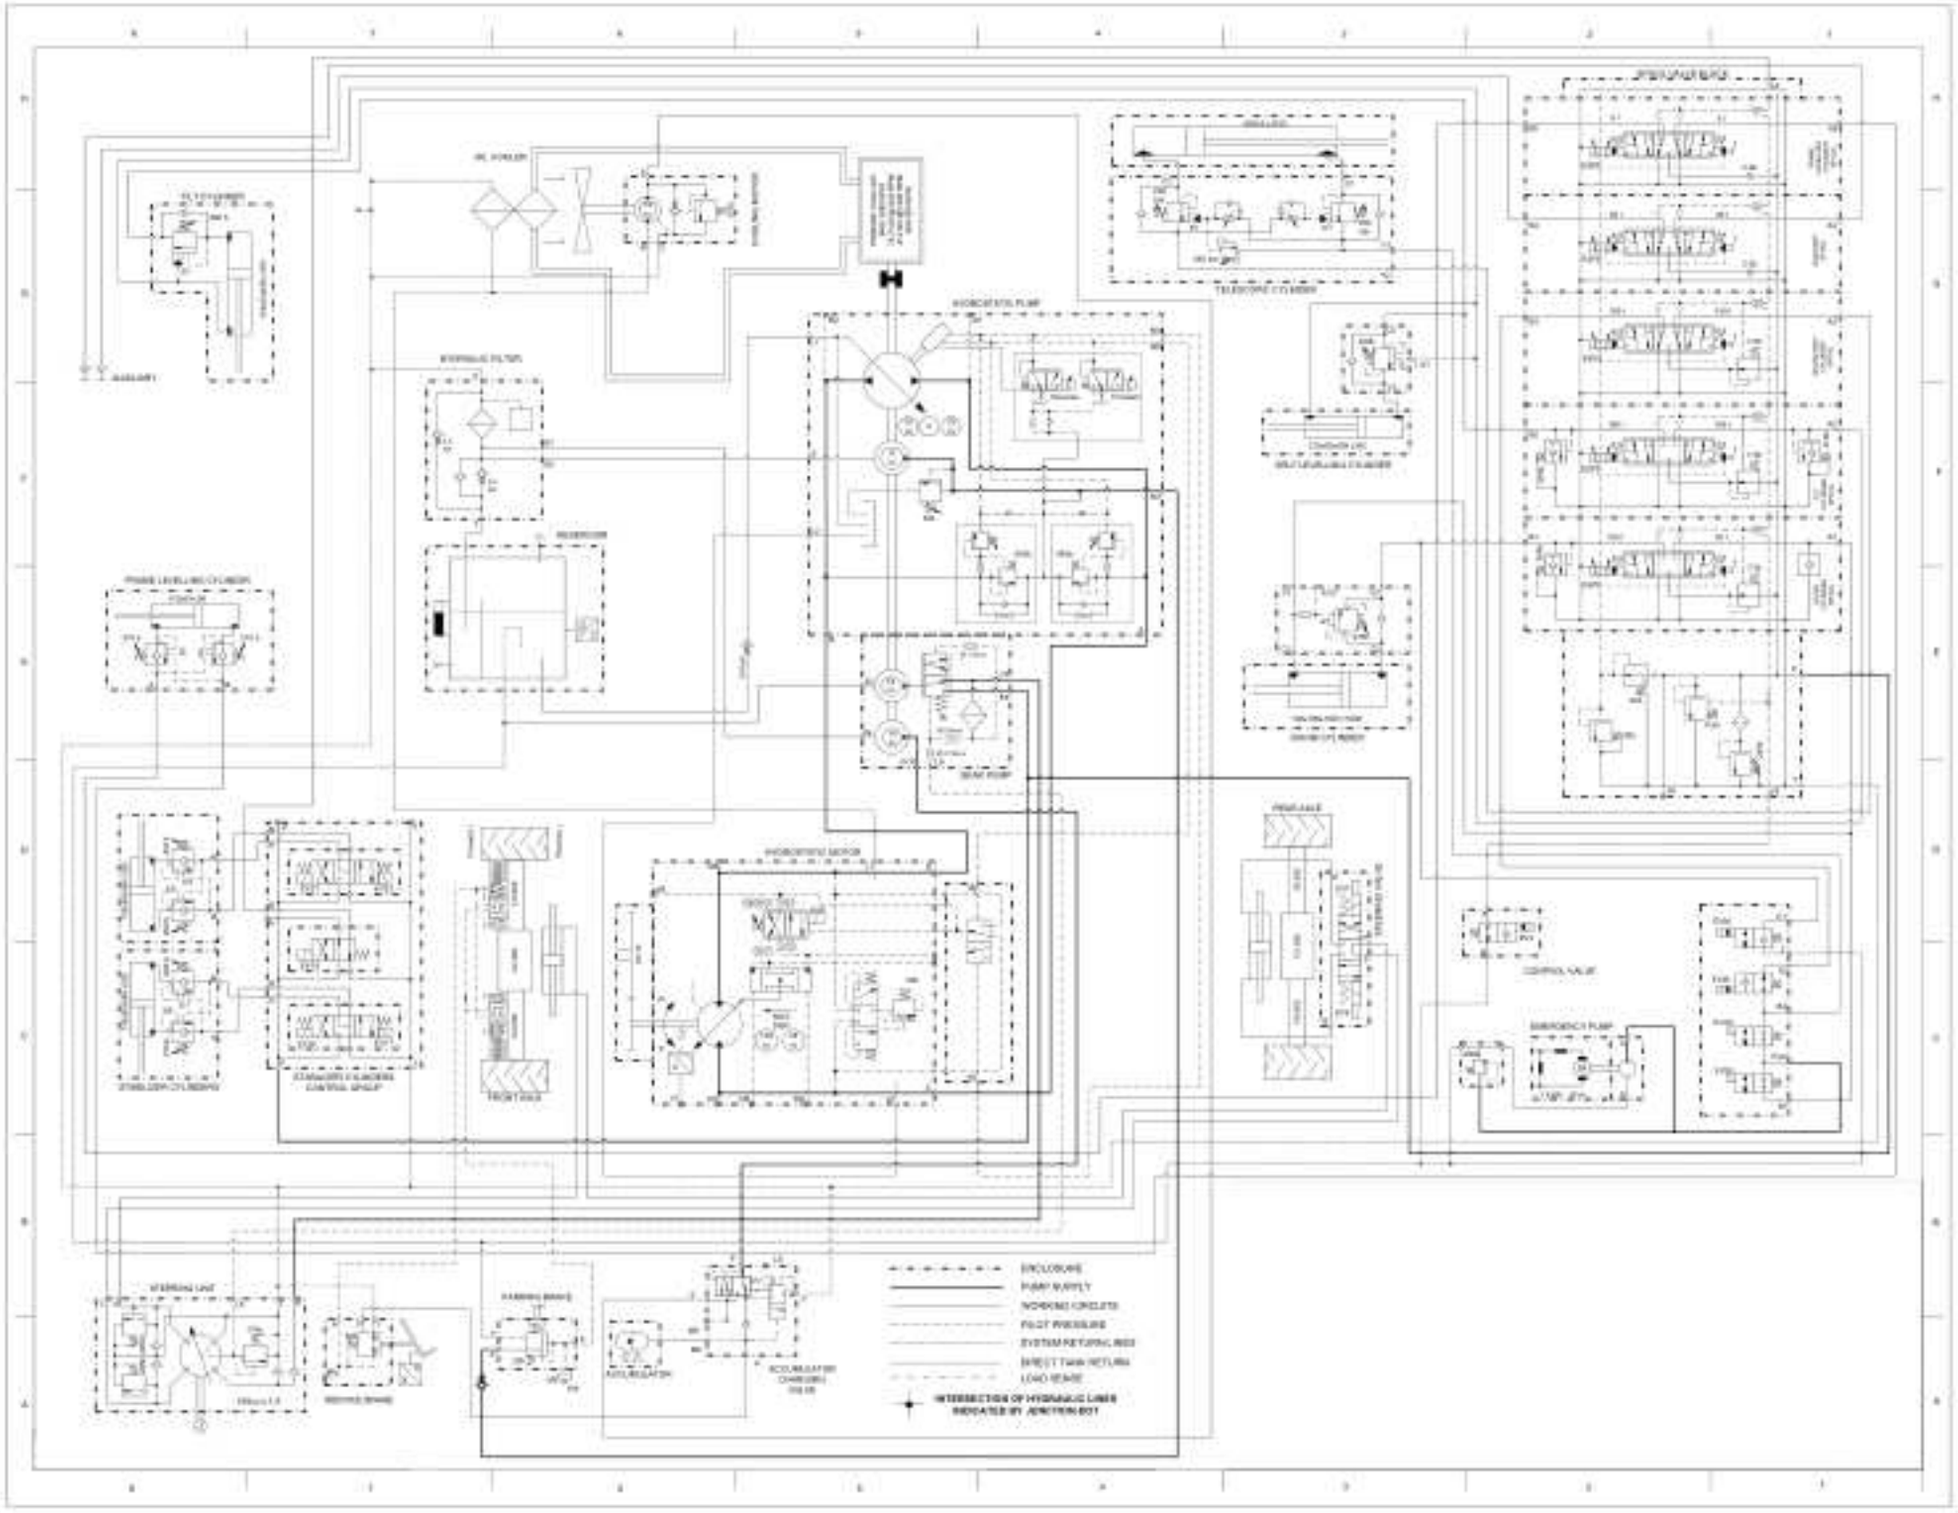

Order the manual at mid-west-tech.com >

Removal and Installation (Cont'd)

Remove the travel/signal levers. (See "Removal And Installation" on page 60-70-1)


Remove the instrument panel. (See "Removal And Installation" on page 60-80-1.)

Remove the switch panel. (See "SWITCH PANEL" on page 60-90-1)

Remove the dash cover/steering column cover. (See "Removal And Installation" on page 50-130-1)

Drain the radiator. (See "Removal And Installation" on page 70-50-1)


Figure 50-10-11

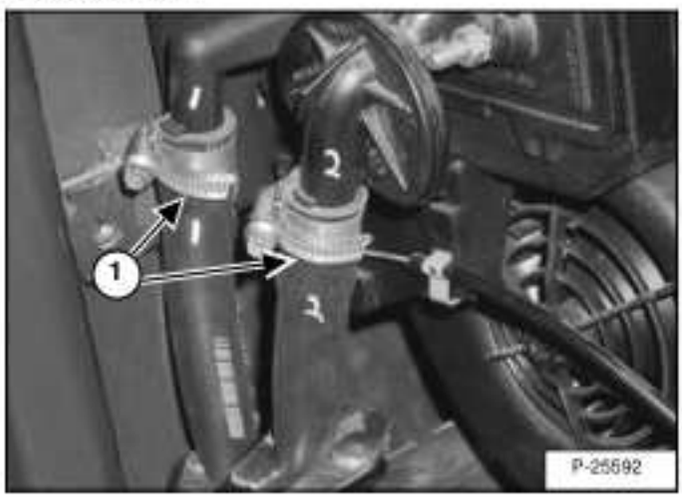

Remove the heater hoses (Item 1) **[Figure 50-10-11]** from the heater assembly.

NOTE: Mark the hoses for correct installation.


Figure 50-10-12

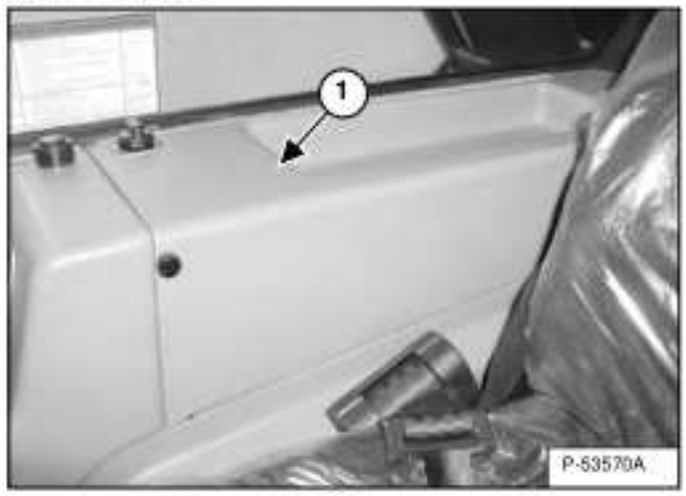

Remove the fuse box cover (Item 1) **[Figure 50-10-12]**.

Open the engine cover.

Figure 50-10-13

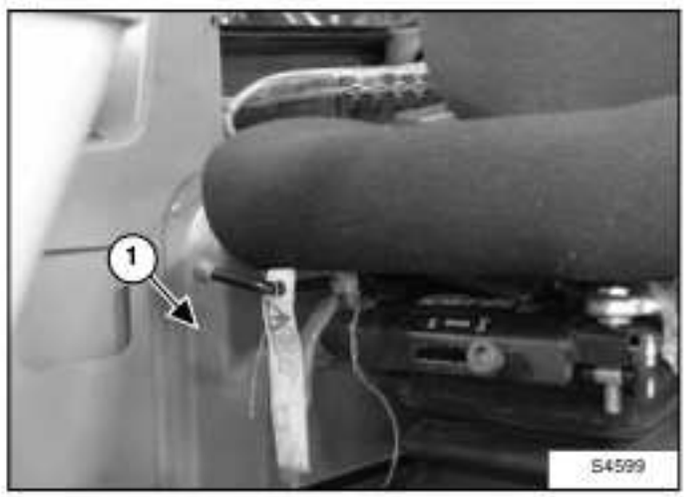


Remove the side cover (Item 1) **[Figure 50-10-13]**.

MidWestTech | Bobcat T35120SL MP Telescopic Handler Service Manual | Publicatio... Order the manual at mid-west-tech.com >

LIGHTS


Rear Light Removal And Installation

Figure 60-60-1

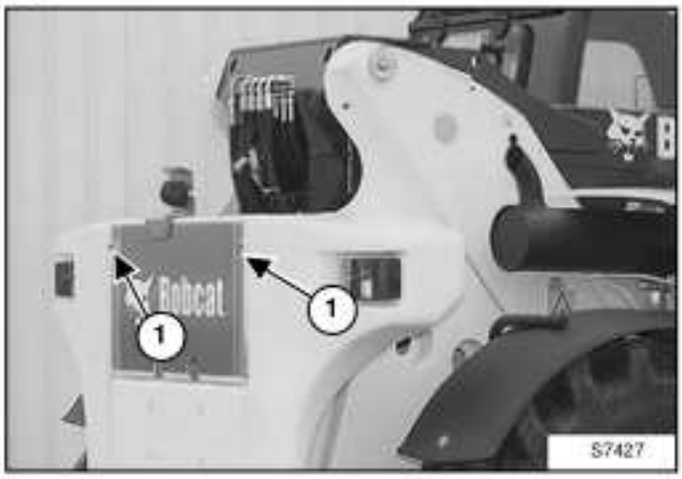


Remove the two rear cover mounting bolts (Item 1) **[Figure 60-60-1]**. Remove the cover.

Figure 60-60-2

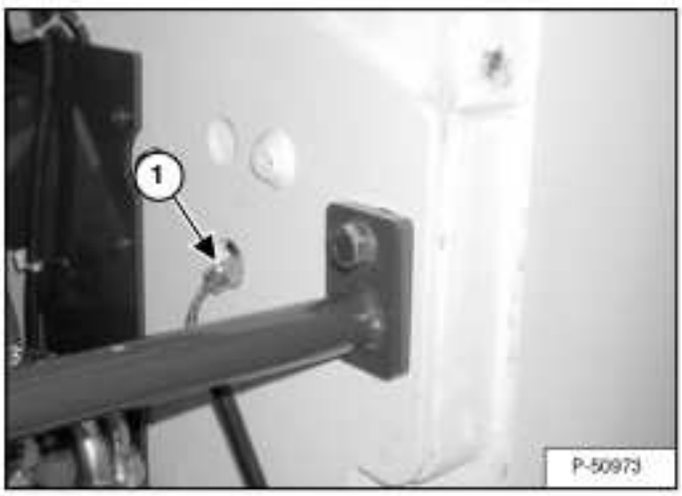


Unplug the light harness connector (Item 1) **[Figure 60-60-2]** from the main harness.

Figure 60-60-3

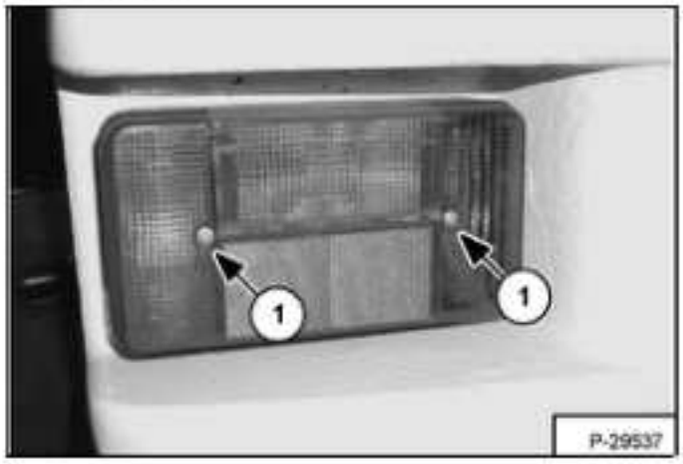

Remove the two lens retainer screws (Item 1) **[Figure 60-60-3]**.

Figure 60-60-4

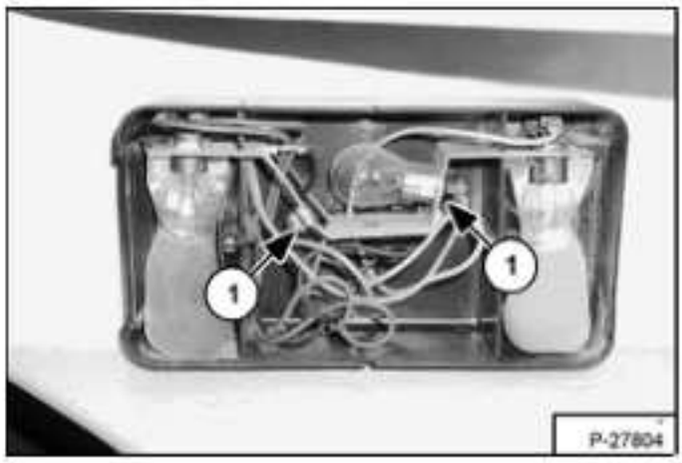

Remove the two light mounting bolts (Item 1) **[Figure 60-60-4]**.

Remove the light assembly.

MidWestTech | Bobcat T35120SL MP Telescopic Handler Service Manual | Publicatio... Order the manual at mid-west-tech.com >