
Bobcat®

Service Manual
Mid-Mount Finish Mower

(Mower Mid MM54) S/N AB4D00101 & Above
(Mower Mid MM66) S/N AB4C00101 & Above

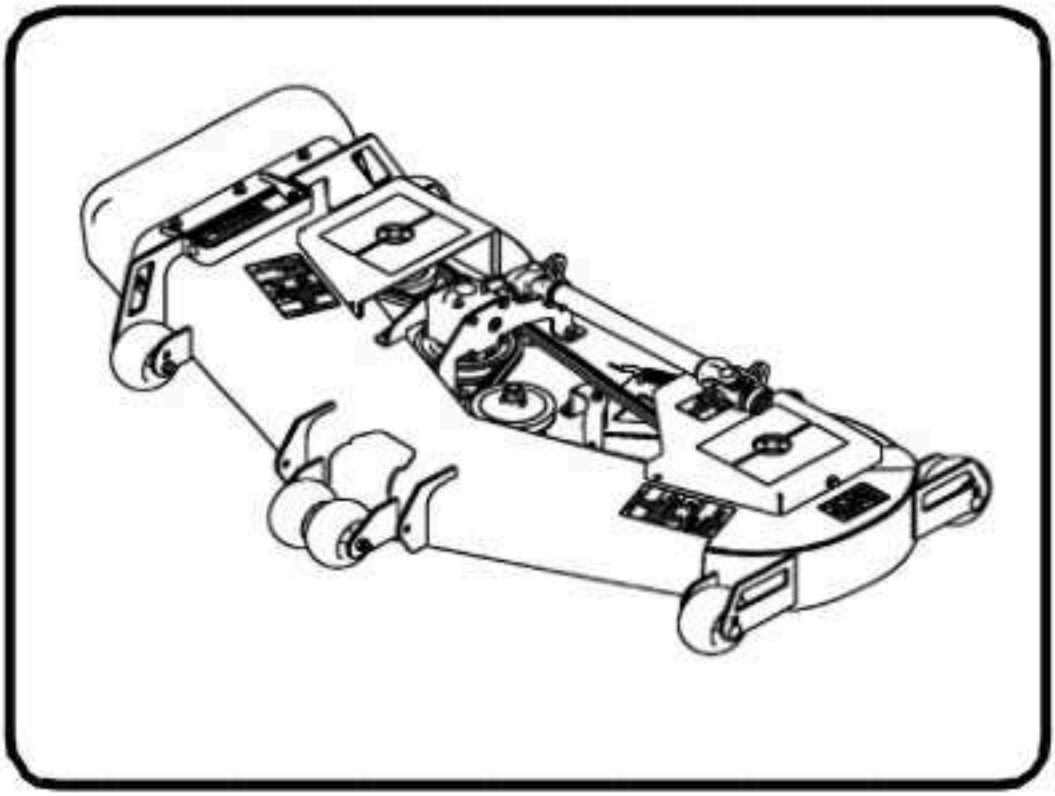

6986907 (1-09)

Printed in U.S.A.

© Bobcat Company 2009

MidWestTech | Bobcat MM54, MM66 Mid-Mount Finish Mower Service Manual | Publicatio... Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

BLADE. 10-40-1
BLADE SPINDLE 20-50-1
BELT TENSIONER 20-60-1

ANTI-SCALP WHEEL 20-10-1

DELIVERY REPORT. III
DRIVE BELT 10-30-1
DISCHARGE CHUTE 20-40-1

GEARBOX. 20-20-1

IDENTIFICATION AND MACHINE SIGNS (DECALS) IV

LUBRICATING THE IMPLEMENT 10-20-1

(MID-MOUNT FINISH MOWER) IMPLEMENT SPECIFICATIONS . . . SPEC-10-1
MOUNTING FRAME (MOWER MID MM54) 20-70-1
MOUNTING FRAME (MOWER MID MM66) 20-71-1

PTO DRIVELINE 20-30-1

SERIAL NUMBER LOCATION III

TROUBLESHOOTING 10-10-1

MidWestTech | Bobcat MM54, MM66 Mid-Mount Finish Mower Service Manual | Publicatio... Order the manual at mid-west-tech.com >

CONTENTS

DELIVERY REPORT III

IDENTIFICATION AND MACHINE SIGNS (DECALS) IV

SERIAL NUMBER LOCATION III

SAFETY AND MAINTENANCE 10-01

MAIN FRAME 20-01

SPECIFICATIONS AND SCHEMATICS SPEC-01

REFERENCE INFORMATION

Write the correct information for YOUR mid-mount finish mower implement in the spaces below. Always use these numbers when referring to your mid-mount finish mower.

Mid-Mount Finish Mower Serial Number _____

_____

_____

_____

NOTES:

_____

_____

_____

_____

YOUR BOBCAT® DEALER:

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

SAFETY AND MAINTENANCE

MAIN FRAME

SPECIFICATIONS AND SCHEMATICS

MidWestTech | Bobcat MM54, MM66 Mid-Mount Finish Mower Service Manual | Publicatio... Order the manual at mid-west-tech.com >

TROUBLESHOOTING

Chart

TROUBLESHOOTING THE MID-MOUNT FINISH MOWER		
PROBLEM	**CAUSE**	**CORRECTION**
Poor cutting.	Travel speed too fast.	Reduce travel speed.
	Damaged motor	Repair or replace motor.
	Low blade RPM.	Increase RPM.
	Blade belt slipping	Adjust belt to correct tension.
	Blades dull.	Sharpen or replace the blades.
Blades will not rotate.	Worn or broken blade belt.	Replace belt.
	PTO driveline disconnected.	Connect PTO driveline.
Vibration.	Build up of material on the bottom of the mower deck.	Clean the bottom of the mower deck.
	Loose or cracked hardware.	Repair or replace as needed.
	Blades worn or broken.	Replace the blades.
	Blade spindles bent.	Replace spindles.
	Blades not balanced.	Balance or replace blades.

MidWestTech | Bobcat MM54, MM66 Mid-Mount Finish Mower Service Manual | Publicatio... Order the manual at mid-west-tech.com >

SPECIFICATIONS AND SCHEMATICS

(MID-MOUNT FINISH MOWER) IMPLEMENT SPECIFICATIONS . . . SPEC-10-1
Dimensions SPEC-10-1

MidWestTech | Bobcat MM54, MM66 Mid-Mount Finish Mower Service Manual | Publicatio... Order the manual at mid-west-tech.com >