
Bobcat®

Service Manual
S130 Skid-Steer Loader

S/N A3KY20001 & Above

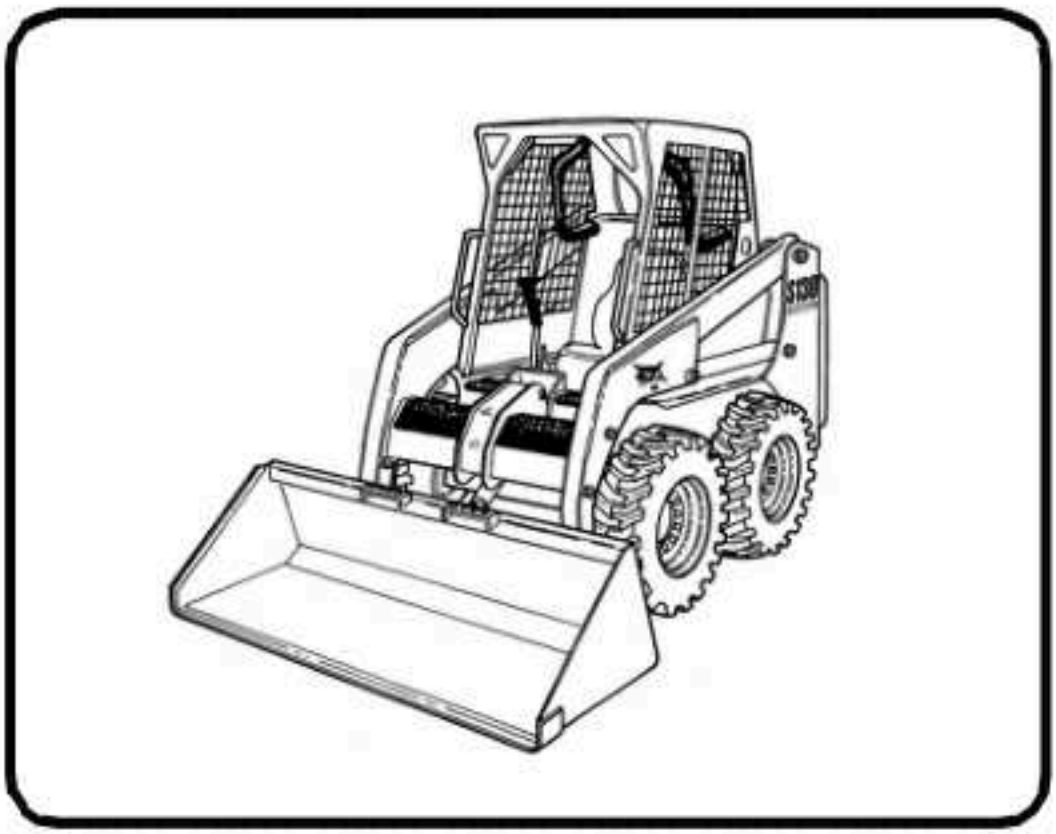

EQUIPPED WITH BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)

6987032 (11-10)

Printed in U.S.A.© Bobcat Company 2010

MidWestTech | Bobcat S130 Skid Steer Loader Service Manual | Publication 6987032_11_10 Order the manual at mid-west-tech.com >

CONTENTS

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

HYDROSTATIC SYSTEM 30-01

DRIVE SYSTEM 40-01

MAINFRAME 50-01

ELECTRICAL SYSTEM & ANALYSIS 60-01

ENGINE SERVICE 70-01

HEATING, VENTILATION, AIR CONDITIONING 80-01

SPECIFICATIONS SPEC-01

ALPHABETICAL INDEX INDEX-01

MidWestTech | Bobcat S130 Skid Steer Loader Service Manual | Publication 6987032_11_10 Order the manual at mid-west-tech.com >

FOREWORD 1-7

SAFETY INSTRUCTIONS 1-10

FIRE PREVENTION 1-12
- Maintenance 1-12
- Operation 1-12
- Electrical 1-12
- Hydraulic System 1-12
- Fueling 1-12
- Starting 1-12
- Spark Arrestor Exhaust System 1-12
- Welding And Grinding 1-13
- Fire Extinguishers 1-13

SERIAL NUMBER LOCATIONS 1-14
- Loader Serial Number 1-14
- Loader Serial Number 1-14
- Engine Serial Number 1-14

DELIVERY REPORT 1-15

LOADER IDENTIFICATION 1-16

MidWestTech | Bobcat S130 Skid Steer Loader Service Manual | Publication 6987032_11_10 Order the manual at mid-west-tech.com >

WIRING SCHEMATIC
MAINFRAME
S130 (S/N A3KY20001 AND ABOVE)
(S/N A1Z760001 AND ABOVE)

(PRINTED NOVEMBER 2010
7159446

MAINFRAME HARNESS
7159446 OR 7168391

J1B CONNECTOR

GATEWAY CONTROLLER (BLACK)

J1A CONNECTOR

P7
FUSE RELAY CENTER

J2B CONNECTOR

AUXILLIARRY
CONTROLLER
(GRAY)

J2A CONNECTOR

BATTERY

MAINFRAME GROUNDS

PRINTED IN U.S.A.

7159446 (10-18-10)

Order the manual at mid-west-tech.com >