
Bobcat®

Service Manual
T180 Compact Track Loader

S/N 531460001 & Above
S/N 531560001 & Above

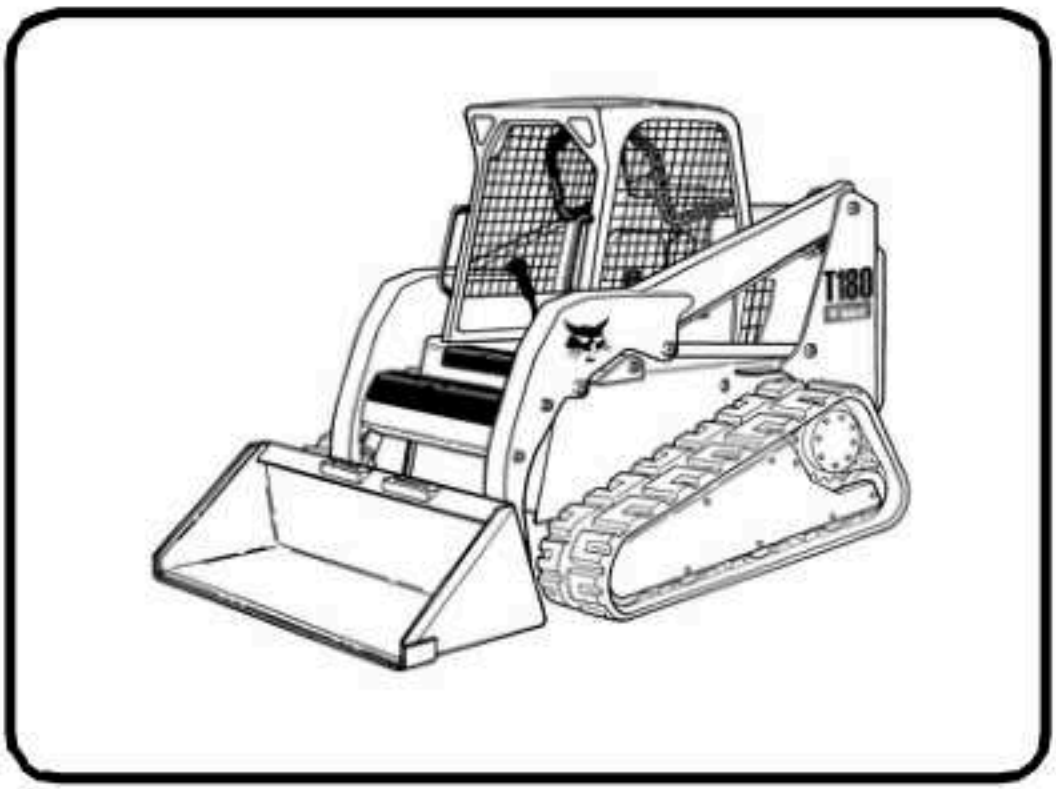

EQUIPPED WITH BOBCAT INTERLOCK CONTROL SYSTEM (BICS)

6987042 (5-08)

Printed in U.S.A.

© Bobcat Company 2008

MidWestTech | Bobcat T180 Compact Track Skid Loader Service Manual | Publication 698... Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

ACCESS PANEL (INSIDE) 50-01
ACCESS PANEL (INSIDE) (SJC) 50-01
AIR CLEANER 70-01
AIR CLEANER SERVICE 10-01
AIR CONDITIONING SYSTEM FLOW 80-01
ALTERNATOR 60-01

BACK-UP ALARM SYSTEM 60-01
BATTERY 60-01
BLOWER FAN 80-01
BOBCAT INTERLOCK CONTROL SYSTEM (BICS) 60-01
BOBCAT CONTROLLER (ACS) 60-01
BOBCAT CONTROLLER (**GATEWAY** AND AUXILIARY) 60-01
BOBCAT CONTROLLER (SJC) (DRIVE) 60-01
BOB-TACH (HAND LEVER) 10-01, 50-01
BOB-TACH (POWER) 10-01, 50-01
BOB-TACH (POWER) BLOCK 20-01
BRAKE 40-01
BUCKET POSITION VALVE 20-01

CAB DOOR 50-01
CALIBRATION 60-01
CAMSHAFT AND TIMING GEARS 70-01
CASE DRAIN FILTER 30-01
CHARGE PRESSURE 30-01
COMPRESSOR 80-01
CONDENSER 80-01
CONTROL HANDLE/LEVER 50-01
CONTROL HANDLE/LEVER (ACS) 50-01
CONTROL HANDLE/LEVER (SJC) 50-01
CONTROL PANEL 50-01
CONTROL PANEL (SJC) 50-01
CONTROL PANEL SETUP 60-01
CONTROL PEDALS AND LINKAGE 50-01
CONTROL PEDALS (ACS) 50-01
CONTROL SYSTEM (ACS) 60-01
CONVERSIONS SPEC-01
CRANKSHAFT AND PISTONS 70-01
CYLINDER (LIFT) 20-01
CYLINDER (BOB-TACH) 20-01
CYLINDER (TILT) 20-01
CYLINDER HEAD 70-01

DIAGNOSTICS SERVICE CODES 60-01
DRIVE BELT 30-01

ELECTRICAL/HYD. CONTROLS 60-01
ELECTRICAL/HYD. CONTROLS REFERENCE (SJC) 60-01
ELECTRICAL SYSTEM INFORMATION 60-01
ENGINE COOLING SYSTEM 10-01
ENGINE LUBRICATION SYSTEM 10-01
ENGINE COOLING SYSTEM 70-01
ENGINE INFORMATION 70-01
ENGINE SPEED CONTROL 70-01
ENGINE SPEED CONTROL (SJC) 70-01
EVAPORATOR 80-01
EVAPORATOR/HEATER UNIT 80-01
EXPANSION VALVE 80-01

FLYWHEEL AND HOUSING 70-01
FLYWHEEL RPM SENSOR 60-01
FRONT AUXILIARY HYDRAULIC COUPLER BLOCK 20-01
FUEL SYSTEM 10-01, 70-01
FUEL TANK 50-01

HEATER COIL 80-01
HEATER VALVE 80-01
HIGH FLOW VALVE 20-01
HYDRAULIC CONNECTION SPECS SPEC-01
HYDRAULIC CONTROL VALVE (ACS) OR (SJC) 20-01
HYDRAULIC CONTROL VALVE (STANDARD) 20-01
HYDRAULIC/HYDROSTATIC FILTERS 20-01
HYDRAULIC FLUID RESERVOIR 20-01
HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS SPEC-01
HYDRAULIC/HYDROSTATIC SYSTEM 10-01
HYDRAULIC PUMP (STANDARD) 20-01
HYDRAULIC PUMP (STANDARD) (HIGH FLOW) 20-01
HYDRAULIC PUMP (SJC) 20-01
HYDRAULIC PUMP (SJC) (HIGH FLOW) 20-01
HYDRAULIC SYSTEM INFORMATION 20-01
HYDROSTATIC MOTOR 30-01
HYDROSTATIC PUMP 30-01
HYDROSTATIC PUMP (SJC) 30-01
HYDROSTATIC SYSTEM INFORMATION 30-01

INSTRUMENT PANELS 60-01

LIFT ARMS 50-01
LIFT ARM BYPASS CONTROL VALVE 20-01
LIFT ARM SUPPORT DEVICE 10-01
LIFTING AND BLOCKING THE LOADER 10-01
LIGHTS 60-01
T180 LOADER SPECIFICATIONS SPEC-01
LOADER STORAGE AND RETURN TO SERVICE 10-01
LUBRICATING THE LOADER 10-01
LUBRICATION SYSTEM 70-01

MidWestTech | Bobcat T180 Compact Track Skid Loader Service Manual | Publication 698... Order the manual at mid-west-tech.com >

MAIN RELIEF VALVE 20-01
MAINTENANCE CLOCK 60-01
MUFFLER 70-01

OIL COOLER 20-01
OPERATOR CAB 10-01, 50-01
OPERATOR SEAT (SUSPENSION) 50-01

PASSWORD SETUP (IF EQUIPPED WITH KEYLESS START) 60-01
PIVOT PINS 10-01

REAR AUXILIARY DIVERTER VALVE 20-01
REAR DOOR 50-01
REAR GRILL 50-01
RECEIVER/DRIER 80-01
REGULAR MAINTENANCE 80-01
REMOTE STARTTOOL KIT-MEL1563 10-01
REMOTE START TOOL (SERVICE TOOL) KIT-6689779 10-01

SEAT BAR 50-01
SEAT BAR SENSOR 60-01
SERVICE PC (LAPTOP COMPUTER) 60-01
SERVICE SCHEDULE 10-01
SPARK ARRESTOR MUFFLER 10-01
SPEED SENSOR (SJC) 60-01
STARTER 60-01
STEERING DRIFT COMPENSATION 60-01
STOPPING THE ENGINE AND LEAVING THE LOADER 10-01
SYSTEM CHARGING AND RECLAMATION 80-01

TEMPERATURE/PRESSURE 80-01
THERMOSTAT 80-01
TORQUE SPECIFICATIONS FOR BOLTS SPEC-01
TOWING THE LOADER 10-01
TRACK CARRIAGE COMPONENTS 40-01
TRACTION LOCK 60-01
TRANSPORTING THE LOADER ON A TRAILER 10-01
TROUBLESHOOTING 80-01
TURBOCHARGER 70-01

WINDOW (FRONT DOOR) 50-01
WINDOW (REAR) 50-01
WINDOW (SIDE) 50-01
WINDOW (TOP) 50-01

MidWestTech | Bobcat T180 Compact Track Skid Loader Service Manual | Publication 698... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD II

SAFETY INSTRUCTIONS V

FIRE PREVENTION VII

SERIAL NUMBER LOCATION IX

DELIVERY REPORT X

LOADER IDENTIFICATION XI

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

HYDROSTATIC SYSTEM 30-01

DRIVE SYSTEM 40-01

MAIN FRAME 50-01

ELECTRICAL SYSTEM & ANALYSIS. 60-01

ENGINE SERVICE 70-01

HEATING, VENTILATION, AIR CONDITIONING 80-01

SPECIFICATIONS. SPEC-01

MidWestTech | Bobcat T180 Compact Track Skid Loader Service Manual | Publication 698... Order the manual at mid-west-tech.com >

HYDRAULIC/HYDROSTATIC SCHEMATIC
WITH SJC AND HIGH FLOW OPTION
T180 (S/N 531460001 AND ABOVE)
(S/N 531560001 AND ABOVE)

(PRINTED MAY 2008)
V-1263legend

LEGEND

1. RESERVOIR:
   Capacity . . . . . 19.2 qt. (18,2 L)
2. SPRING LOADED FILTER BY-PASS VALVE: 45-55 PSI (3,1-3,8 bar)
3. DIFFERENTIAL PRESSURE SWITCH: 36-44 PSI (2,5-3,0 bar) Normally Closed
4. DRIVE MOTOR SHUTTLE VALVE
5. RELIEF/REPLENISHING VALVE - HIGH PRESSURE: 5075 PSI (350 bar)
6. RELIEF VALVE - CHARGE INLET: 360 PSI (24,8 bar) at High Engine Idle With 140 degrees F. (60 degrees C.) Fluid
7. FRONT AUXILIARY MANUAL PRESSURE BLEED-OFF VALVE
8. HYDRAULIC PUMP . . . . . Gear Type 16.3 GPM (61,6 L/min.) at High Engine Idle
9. RELIEF VALVE - MAIN: 3250-3350 PSI (224-231 bar) at Front Quick Couplers
10. PORT RELIEF/ANTICAVITATION VALVE 3500 PSI (241,3 bar)
11. ANTICAVITATION VALVE
12. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - AUXILIARY
13. PORT RELIEF/ANTICAVITATION VALVE: . . . . . (Optional) 3500 PSI (241,3 bar)
14. LOAD CHECK VALVE
15. LIFT CYLINDER SPOOL - MADE TO RESTRICT FLOW DURING BOOM DOWN BUT NOT DURING BOOM UP
16. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - BICS CONTROL
17. PILOTED ACTIVATED DIRECTIONAL CONTROL VALVE - TILT CONTROL
18. PILOTED ACTIVATED DIRECTIONAL CONTROL VALVE - LIFT CONTROL
19. PULL BUTTON ACTIVATED DIRECTIONAL CONTROL VALVE - LIFT ARM BY-PASS
20. PILOTED ACTIVATED DIRECTIONAL CONTROL VALVE - UNLOADING SPOOL
21. PILOTED ACTIVATED DIRECTIONAL CONTROL VALVE - FLOW CONTROL SPOOL
22. FLOW DIVIDER ADJUSTMENT VALVE
23. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - BASE
24. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - ROD
25. LOAD SHUTTLE VALVE - BLEED OFF
26. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - TWO COIL
27. PILOT ACTIVATED DIRECTIONAL CONTROL VALVE - REAR AUXILIARY
28. RESTRICTOR - 0.140 inch (3,6 mm)
29. RESTRICTOR - 0.031 inch (0,8 mm)
30. RELIEF VALVE: 3300 PSI (228 bar)
31. FILTER - HYDRAULIC (CANISTER)
32. FILTER - CASE DRAIN (SINTERED BRONZE)
33. FILTER - BICS CONTROL VALVE (SCREEN)
34. CHECK VALVE - BUCKET POSITION VALVE
35. RESTRICTION
36. VARIABLE CAPACITY DISPLACEMENT BI-DIRECTIONAL HYDROSTATIC PUMP
37. SHUTTLE RELIEF VALVE (Not Adjustable - Factory Set) 65 PSI (4,5 bar)
38. FIXED CAPACITY DISPLACEMENT BI-DIRECTIONAL HYDROSTATIC MOTOR
39. CHECK VALVE - With 80 PSI (5,5 bar) Spring
40. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - BUCKET POSITION VALVE (ON/OFF)
41. CHECK VALVE - BICS CONTROL VALVE
42. RESTRICTION - 0.343 inch (8,7 mm)
43. FILTER - Bob-Tach Valve
44. PILOT ACTIVATED DIRECTIONAL CONTROL VALVE - HYDRAULIC POWERED BOB-TACH
45. RESTRICTION - 0.089 inch (2,26 mm)
46. RESTRICTION - 0.025 inch (0,6 mm)
47. RELIEF VALVE - 2000 PSI (137 bar)
48. RELIEF VALVE - 1200 PSI (83 bar)
49. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE (TWO COIL)
50. RELIEF VALVE - 3300 PSI (228 bar)
51. DUMP VALVE - (ON/OFF)
52. CHECK VALVE
53. AUXILIARY HYDRAULIC PUMP - 9.2 GPM (34,8 L/min) at High Engine Idle
54. CHECK VALVE - With 300 PSI (20,7 bar) Spring with 0.016 inch (0,40 mm) orifice
55. SOLENOID ACTIVATED CONTROL VALVE - FORWARD/REVERSE
56. SERVO PISTON -Swash Plate
57. POSITION SENSOR -Swash Plate
58. CHARGE PRESSURE SENSOR
59. CHARGE PUMP - 12.8 GPM (48,5 L/min) at High Engine Idle
60. FIXED CAPACITY DISPLACEMENT HYDRAULIC MOTOR
61. ANTICAVITATION VALVE
62. PROPORTIONAL RELIEF VALVE – (Fan Speed Regulator): 1566 - 1784 PSI (108 - 123 bar)
63. CHECK VALVE
64. SOLENOID ACTIVATED DIRECTIONAL CONTROL VALVE - BRAKE
65. HYDRAULIC BRAKE - SPRING APPLIED - PRESSURE RELEASE


NOTE: Unless otherwise specified, springs have NO significant pressure value.

Printed in U.S.A.

V-1263legend (4-30-08)

Order the manual at mid-west-tech.com >

Deluxe Cab Harness Connectors

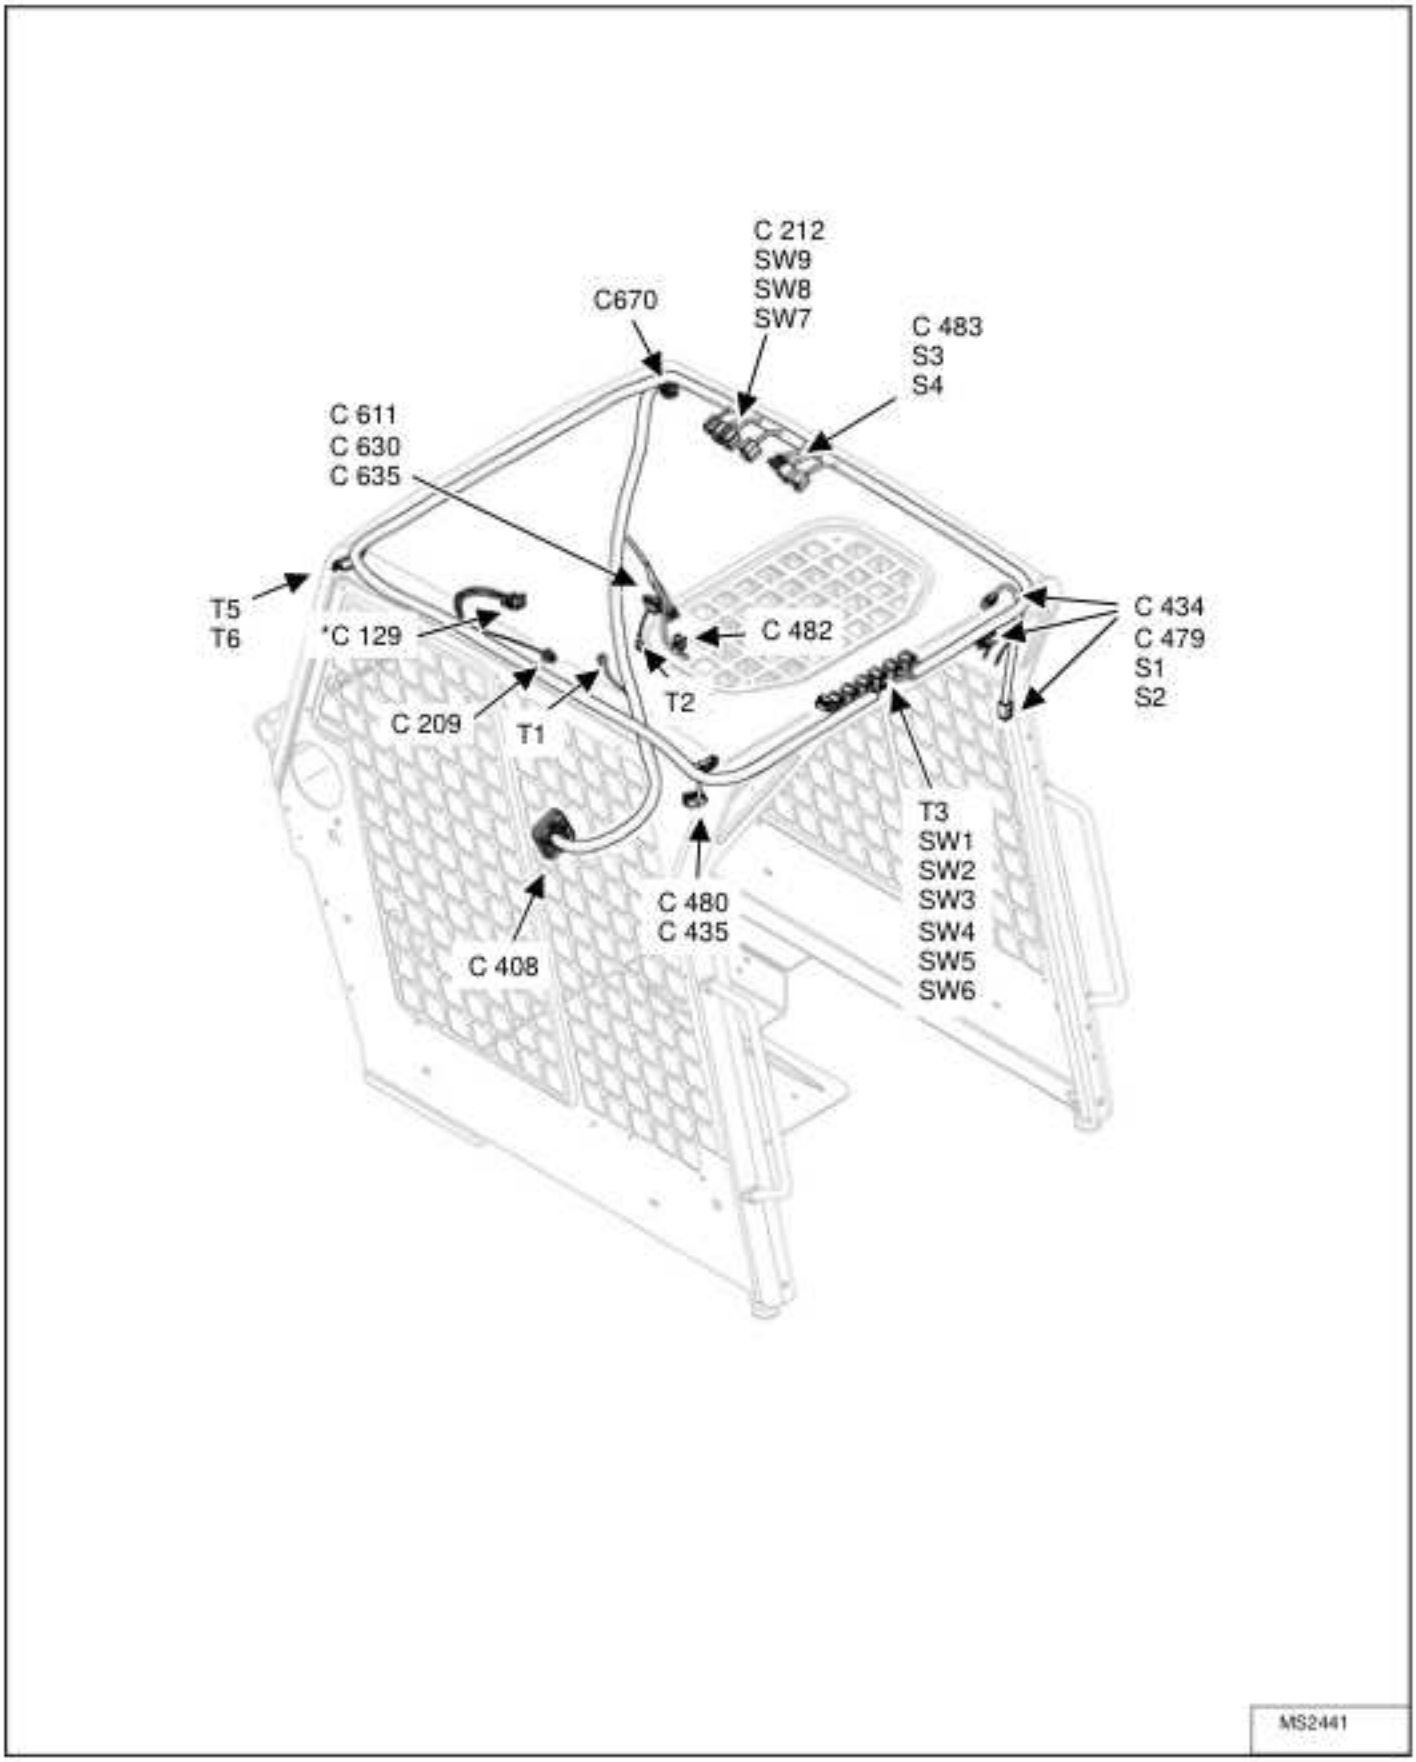

MidWestTech | Bobcat T180 Compact Track Skid Loader Service Manual | Publication 698... Order the manual at mid-west-tech.com >

TROUBLESHOOTING

Blower Motor Does Not Operate

Possible Cause	Inspection	Solution
1. Blown fuse.	Inspect the fuse/wiring.	Replace fuse/repair wiring.
2. Broken wiring or bad connection.	Check the fan motor ground and connectors.	Repair the wiring or connector.
3. Fan motor malfunction.	Check the lead wires form the motor with a circuit tester.	Replace Motor.
4. Resistor malfunction.	Check resistor using a circuit tester.	Replace Resistor.
5. Fan motor switch malfunction.	Check power into and out of the fan switch.	Replace Fan Switch.

Blower Motor Operates Normally, But Air Flow Is Insufficient

Possible Cause	Inspection	Solution
1. Evaporator inlet obstruction.	Check evaporator for plugging.	Remove obstruction and clean evaporator fins with air or water.
2. Air leak.	Check to make sure air hoses are properly hooked to Louvers, and air ducts.	Repair of adjust.
3. Defective thermo. switch (frozen evaporator).	Check thermostat using a circuit tester.	Replace thermostat.
4. Plugged cab filters	Check cab filter condition.	Clean or replace filters.

Insufficient Cooling Although Air Flow And Compressor Operation Are Normal

Possible Cause	Inspection	Solution
1. System low on refrigerant.	The high side pressure will be low and bubbles may be present in sight glass on receive drier.	Repair any leaks and recharge the refrigerant to the correct level.
2. Excessive refrigerant.	The high pressure side pressure will be high.	Use refrigerant recovery equipment to capture excess refrigerant. Charge to the correct refrigerant level.

The Compressor Does Not Operate At All, Or Operates Improperly


Possible Cause	Inspection	Solution
1. Loose drive belt.	The belt is vibrating or oscillating.	Adjust tension.
2. Internal compressor malfunction.	The compressor is locked up and the belt slips.	Replace compressor.
	Magnetic clutch related	
3. Low battery voltage.	Clutch slips.	Recharge the battery.
4. Faulty coil.	Clutch slips.	Replace the magnetic clutch.
5. Oil on the clutch surface.	Clutch slips.	Replace or clean the clutch surface.
6. Open coil.	Clutch does not engage and there is no reading when a circuit tester is connected between the coil and terminals.	Replace clutch.
7. Broken wiring or poor ground.	Clutch will not engage. Inspect the ground and connections.	Repair.
8. Wiring harness components.	Test the conductance of the pressure switch, thermostat, Relay, etc.	Check operation.


MidWestTech | Bobcat T180 Compact Track Skid Loader Service Manual | Publication 698... Order the manual at mid-west-tech.com >


WIRING SCHEMATIC
MAINFRAME
T180 (S/N 531460001 AND ABOVE)
(S/N 531560001 AND ABOVE)

(PRINTED MAY 2008)

7159445

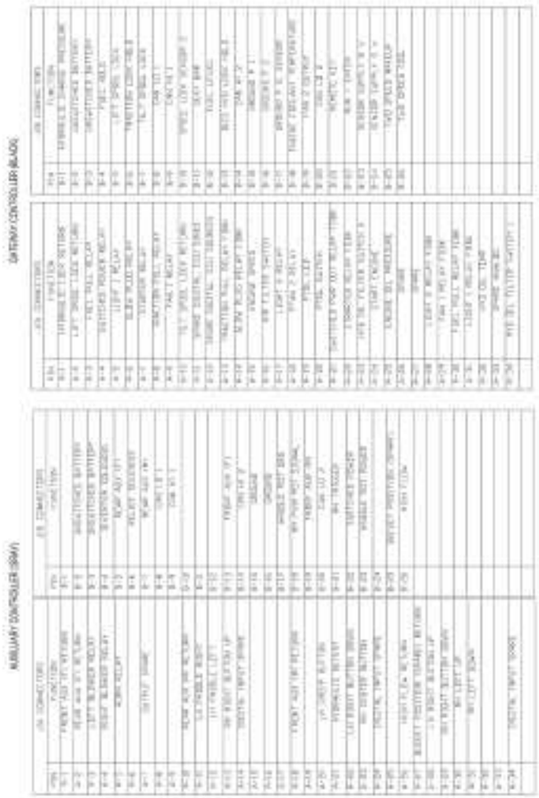

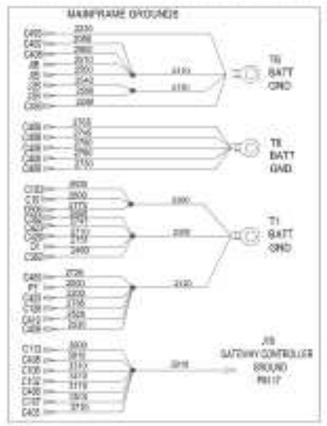

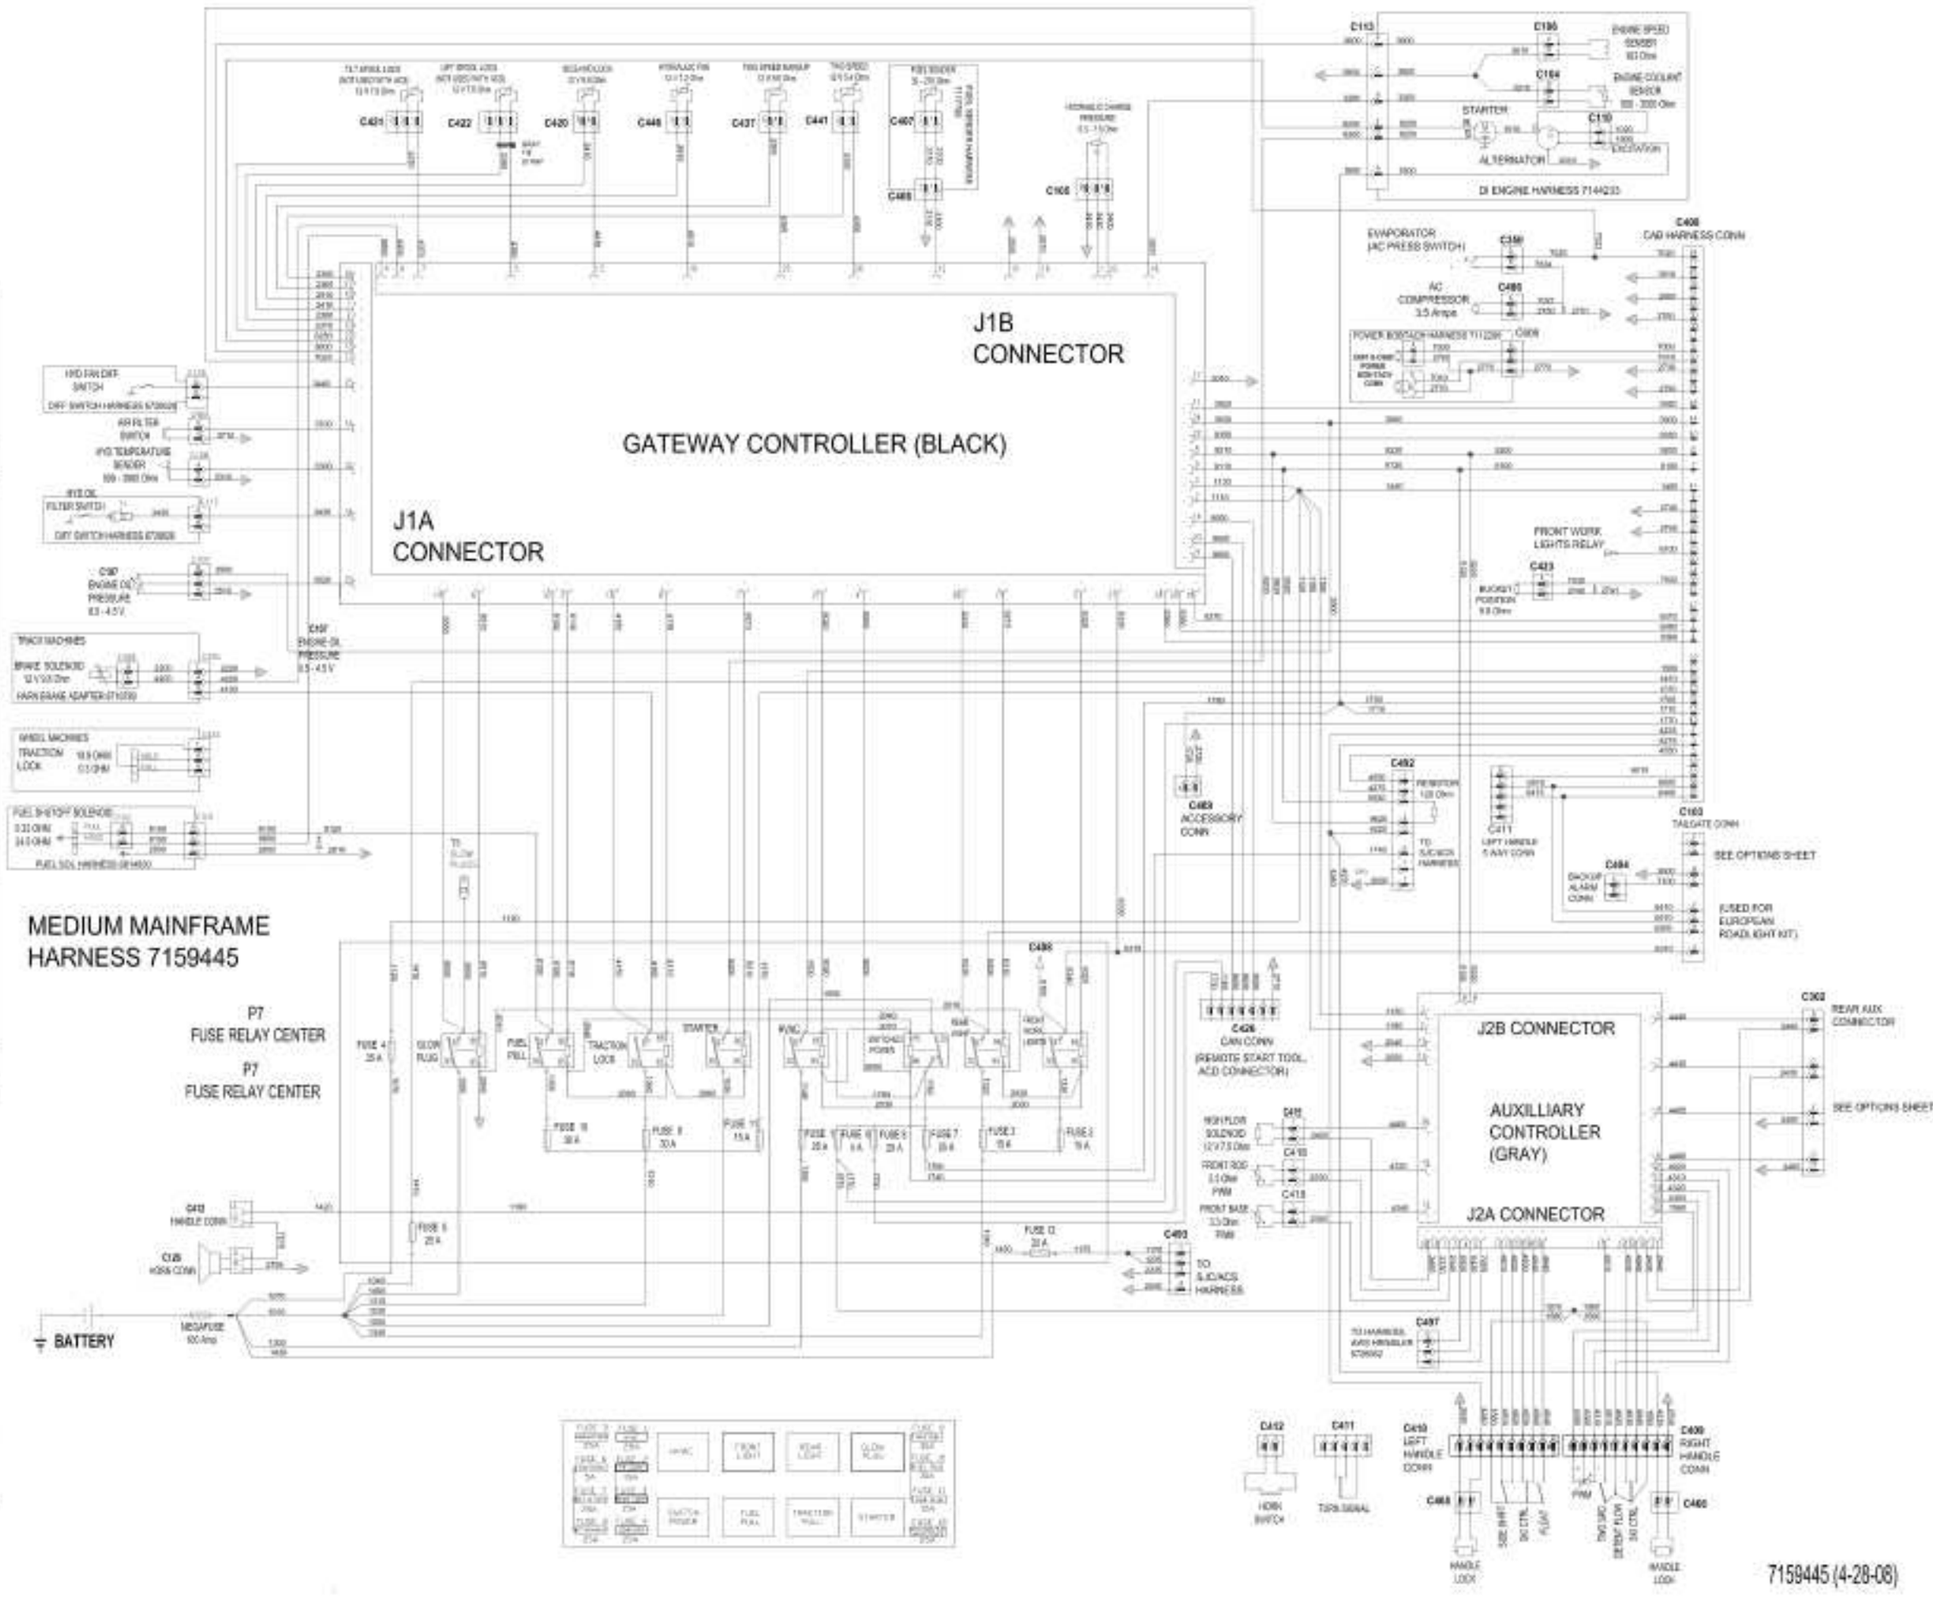

PRINTED IN U.S.A.

Order the manual at mid-west-tech.com >