
Bobcat

AU
NZ

Operation & Maintenance Manual
CT440 Compact Tractor

S/N ABHE11001 & Above

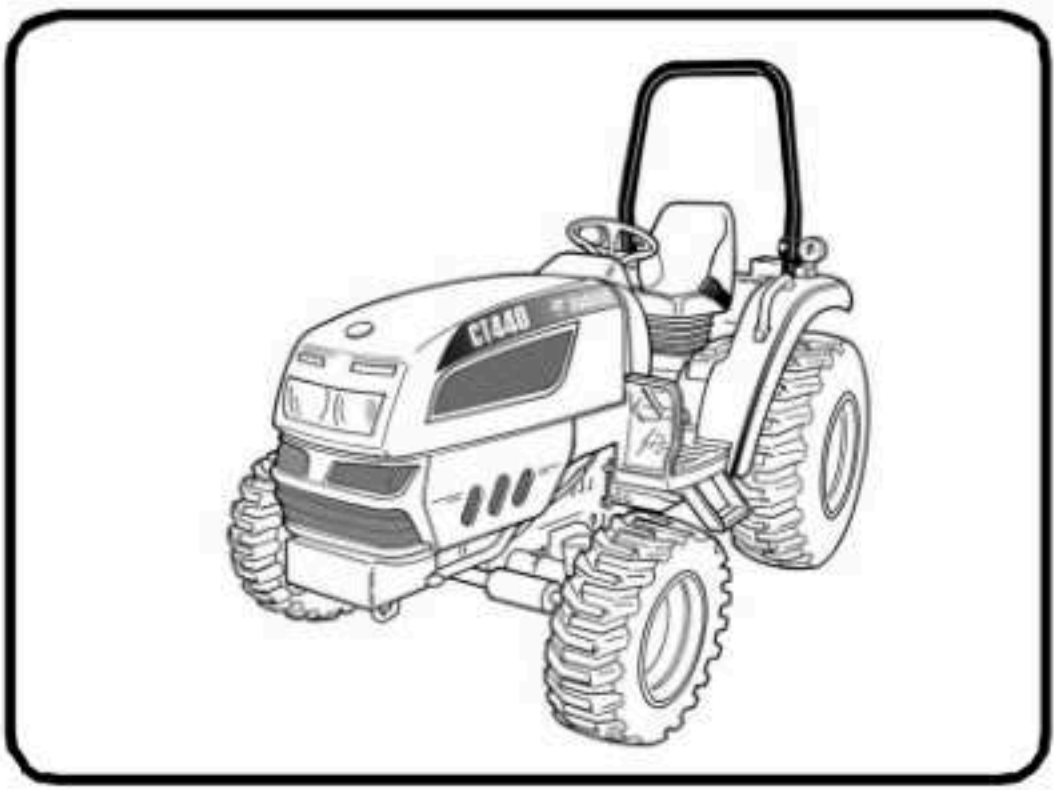

6987083 AU/NZ (5-09) Revised (3-10) (2)

Printed in U.S.A.

© Bobcat Company 2010

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 5

SAFETY & TRAINING RESOURCES 15

OPERATING INSTRUCTIONS 27

LOADER SYSTEM 121

PREVENTIVE MAINTENANCE 141

MACHINE SIGN TRANSLATIONS 203

SPECIFICATIONS 231

WARRANTY 243

ALPHABETICAL INDEX 247

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat compact tractor in the spaces below. Always use these numbers when referring to your Bobcat compact tractor.

Compact Tractor Serial Number _____

Engine Serial Number _____

NOTES:

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat compact tractor. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT COMPACT TRACTOR. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your compact tractor.

BOBCAT COMPANY IS IS0 9001 CERTIFIED 7

REGULAR MAINTENANCE ITEMS 7

SERIAL NUMBER LOCATIONS 8
- Compact Tractor Serial Number 8
- Engine Serial Number 8
- Loader Serial Number (Optional) 9

DELIVERY REPORT 9

COMPACT TRACTOR IDENTIFICATION 10

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL LOADER AND REAR BALLAST) 11

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL THREE-POINT IMPLEMENT AND FRONT BALLAST) 12

COMPACT TRACTOR IDENTIFICATION (WITH OPTIONAL CAB) 13

FEATURES, ACCESSORIES AND ATTACHMENTS 14
- Standard Items 14
- Options And Accessories 14
- Loader (Optional) 14
- Implements - Three-Point Hitch 14

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

LOADER CONTROLS (IF EQUIPPED)


Description

The joystick control lever (if equipped) activates the lift and tilt functions when equipped with a loader.

Figure 47



Figure 48

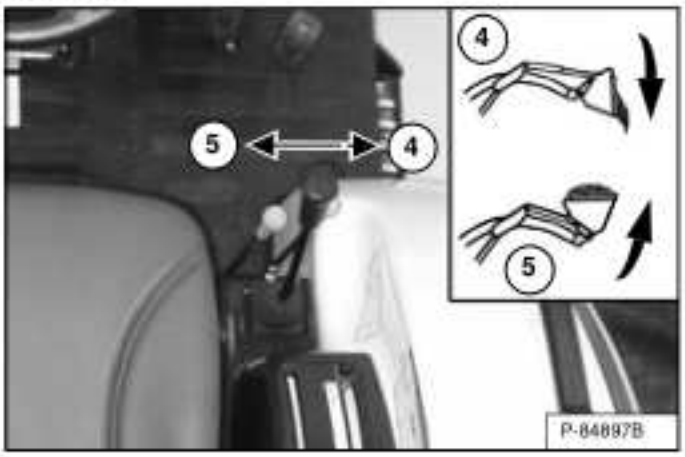

Movement of the joystick control lever **[Figure 47] and [Figure 48]** controls the lift and tilt functions of the loader.

Loader Lift Operation

Move the joystick control lever backward to raise the loader arms (Item 1) **[Figure 47]**.

Move the joystick control lever forward to lower the loader arms (Item 2) **[Figure 47]**.

Loader Arms Float Position

Move the joystick control lever all the way forward (Item 3) **[Figure 48]** until it locks into the detent (float) position.

Tilt the bucket (or attachment) forward (Item 4) **[Figure 48]**. The attachment will follow the ground as the compact tractor moves backward.

Use the float position of the loader arms to level loose material while driving backward.

To disengage from the float position, move the joystick control lever backward to raise the loader arms (Item 1) **[Figure 48]**.

NOTE: Only use the float position when operating the compact tractor in the reverse travel direction.

Loader Tilt Operation

Move the joystick control lever to the right to tilt the bucket forward (Item 4) **[Figure 48]**.

Move the joystick control lever left to tilt the bucket backward (Item 5) **[Figure 48]**.

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

LUBRICATING THE COMPACT TRACTOR

Lubrication Locations

⚠ WARNING

AVOID INJURY OR DEATH

If equipped with a loader or implement, always have the attachment or implement fully lowered on the ground. Stop the engine and engage the parking brake before doing any maintenance to the compact tractor. Do Not work under raised loader arms or raised implement.

W-2599-0607


Lubricate as specified for the best performance of the compact tractor. (See SERVICE SCHEDULE on Page 147.)

Record the operating hours each time you lubricate the compact tractor.

Always use a good quality lithium based multi-purpose grease. Apply lubricant until extra grease shows.


Lubricate the following:

Figure 288

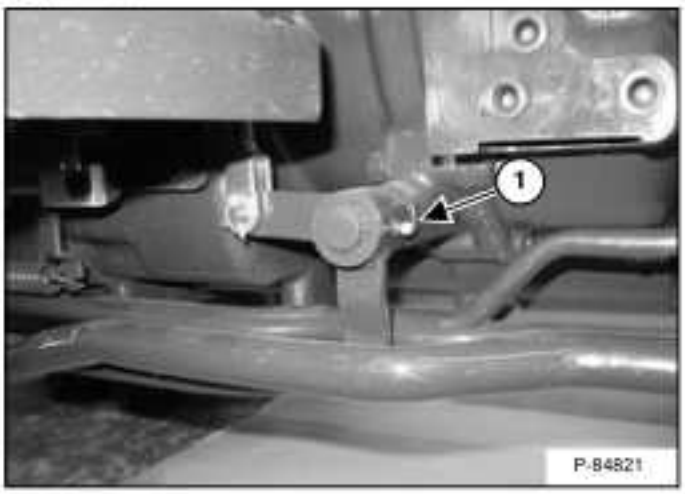


1. Right Brake Pedal Pivot (1) **[Figure 288]** (below right floor plate)

Figure 289

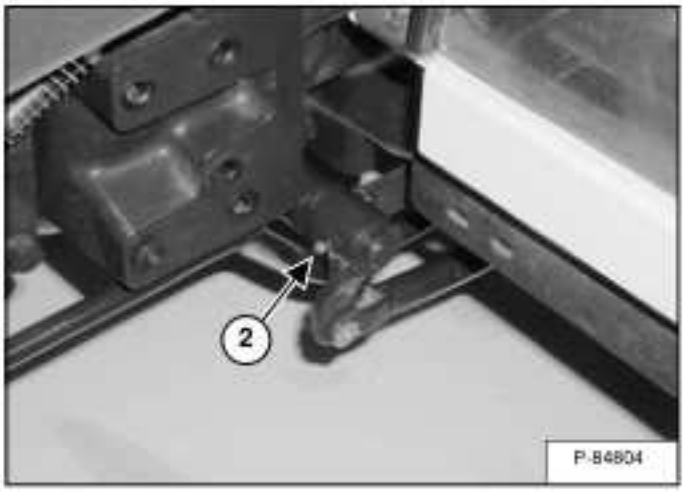

2. Left Brake Pedal Pivot (1) **[Figure 289]** (below left floor plate).

Figure 290

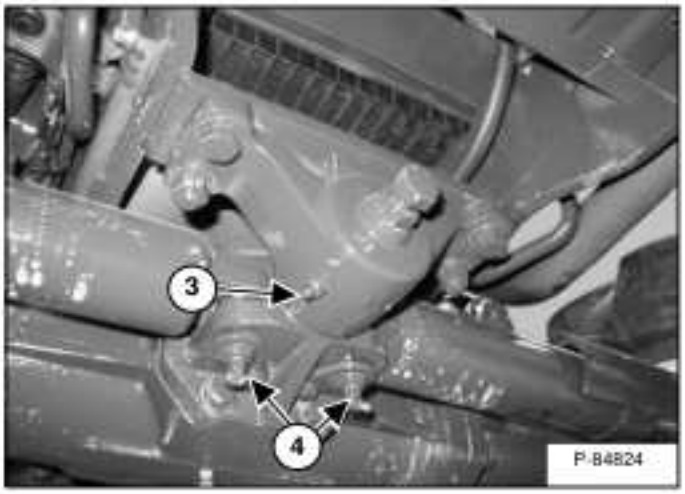

3. Axle Pivot (1) **[Figure 290]** (on front side of front axle).

4. Base End Steering Cylinder (2) **[Figure 290]** (under compact tractor).

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

COMPACT TRACTOR CAPACITIES

Compact Tractor Loader Lift Capacity


The compact tractor lift capacity with the loader and standard bucket, correct rear ballast, and tires with the correct load rating is listed in the chart below.

The following items will **reduce** the loader lift capacity:

- Use of larger buckets or attachments which moved the load center forward.
- The loader is equipped with the optional Bob-Tach mounting system.
- If the weight of the rear ballast is reduced.
- Tires with a lower load rating are used.

Ballast (Rear)

The correct rear ballast must be installed on the compact tractor for maximum loader lift capacity. Install a three-point hitch ballast box (see chart below) **and** fill the rear tires with liquid ballast. Both compact tractor rear tires must be filled to 75% full with calcium chloride mixture of 5 lb. / Gal. of water (or 0,6 kg / liter of water).

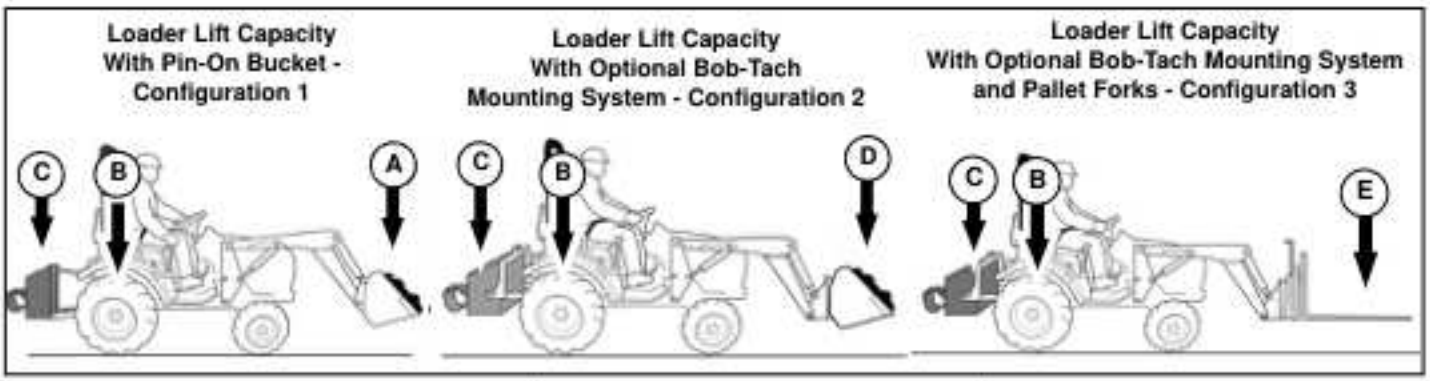

		9TL S/N AL4F00101 & Above, AKPW00101 & Above		9TL S/N AE3500101 & Above	
		(**A**) 68 in. (1727 mm) Pin-On Bucket	(**D**) 68 in. (1727 mm) Bob-Tach Bucket	(**A**) 72 in. (1829 mm) Pin-On Bucket	(**D**) 72 in. (1829 mm) Bob-Tach Bucket
Bucket Weight		264 lb. (120 kg)	280 lb. (127 kg)	265 lb. (120 kg)	268 lb. (122 kg)
Rear Ballast Box Weight (**C**) (NOTE: Weight (**C**) does not include liquid ballast. Also add liquid ballast (**B**) for maximum loader lift capacity.)		1110 lb. (503 kg)	1110 lb. (503 kg)	1110 lb. (503 kg)	1110 lb. (503 kg)
Loader lift capacity at full height with Bucket (Model 9TL Loader and Liquid Ballast (**B**) and Rear Ballast (**C**) installed)	Measured at pivot pin	2713 lb. (1231 kg)	2655 lb. (1204 kg)	2600 lb. (1179 kg)	2450 lb. (1111 kg)
	Measured at 500 mm from pivot	2030 lb. (921 kg)	1950 lb. (885 kg)	2050 lb. (930 kg)	1900 lb. (862 kg)
Loader lift capacity at 59 in. lift height with Bucket (Model 9TL Loader and Liquid Ballast (**B**) and Rear Ballast (**C**) installed)	Measured at pivot pin	3191 lb. (1447 kg)	3057 lb. (1387 kg)	N/A	N/A
	Measured at 500 mm from pivot	2537 lb. (1151 kg)	2392 lb. (1085 kg)	N/A	N/A
Boom breakout force	Measured at pivot pin	4090 lb. (1855 kg)	4063 lb. (1843 kg)	N/A	N/A
	Measured at 500 mm from pivot	3028 lb. (1373 kg)	2919 lb. (1324 kg)	N/A	N/A
Bucket rollback force measured at 500 mm from pivot pins	Measured at maximum lift height	3002 lb. (1362 kg)	2819 lb. (1279 kg)	N/A	N/A
	Measured at 59 in. lift height	3599 lb. (1632 kg)	3411 lb. (1547 kg)	N/A	N/A
	Measured at ground level	2622 lb. (1189 kg)	2336 lb. (1060 kg)	N/A	N/A
(**E**) Loader lift capacity at full height with 42 in. (1067 mm) pallet forks (Model 9TL Loader and Liquid Ballast (**B**) and Rear Ballast (**C**) installed). Pallet forks weight 364 lb. (165 kg)	Measured at 24 in. (610 mm) in front of pallet fork frame	N/A	1350 lb. (612 kg)	N/A	1350 lb. (612 kg)
(**B**) Liquid Ballast Weight – Both rear tires filled to 75% full with calcium chloride mixture of 5 lb. / gal. of water (0,6 kg / liter of water).					

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and attachment / implement must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the attachment / implement.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment / implement safely under all conditions of the work area. Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked. DO NOT wear the seat belt if ROPS is down.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine and attachment / implement load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Before Operation* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, hearing protection, or respiratory equipment are required for some work. See your Bobcat dealer about Bobcat Safety equipment for your machine.

SI CT-1008

MidWestTech | Bobcat CT440 Compact Tractor Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >