
Bobcat®

Operation & Maintenance Manual
Seeder

(Seeder 72SDR) S/N AEUD00101 & Above

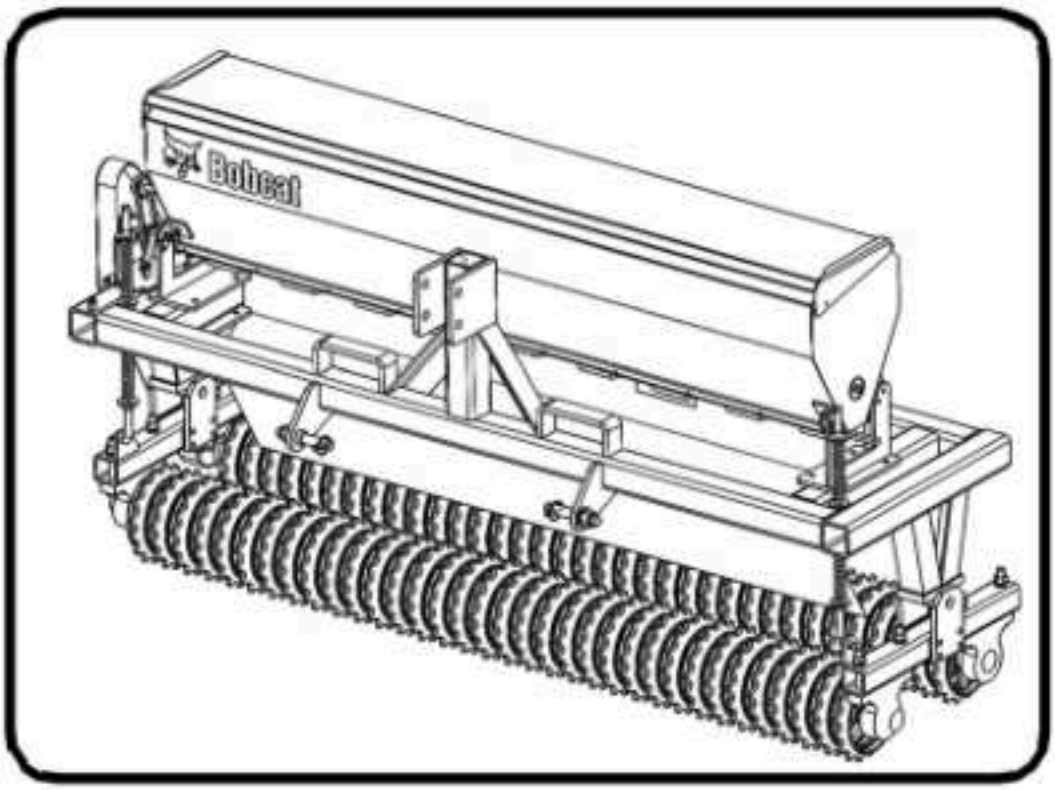

6987212 (1-11) Revised (3-11) (3)

Printed in U.S.A.

© Bobcat Company 2011

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 3

SAFETY & TRAINING RESOURCES 9

OPERATING INSTRUCTIONS 19

PREVENTIVE MAINTENANCE 77

MACHINE SIGN TRANSLATIONS 85

SPECIFICATIONS 89

WARRANTY 93

INSTALLATION INSTRUCTIONS 1

ALPHABETICAL INDEX 103

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat seeder in the spaces below. Always use these numbers when referring to your Bobcat seeder.

Seeder Serial Number _____

NOTES:

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat seeder. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT SEEDER. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat seeder.

BOBCAT COMPANY IS ISO 9001 CERTIFIED 5

SERIAL NUMBER LOCATION 6
Seeder Serial Number 6

DELIVERY REPORT 6

IMPLEMENT IDENTIFICATION 7

FEATURES AND ACCESSORIES 8
Standard Items 8
Options And Accessories 8

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >

Installation (Cont'd)

Hand Lever Bob-Tach (Cont'd)

⚠ WARNING


Before you leave the operator's position:

- **Put the travel Direction Control Lever and the Joystick in neutral.**
- **Engage the parking brake.**
- **Retract and lower the boom and attachment flat on the ground.**
- **Stop the engine. Raise the restraint bar (if equipped).**

SEE THE MACHINE OPERATION & MAINTENANCE MANUAL FOR MORE INFORMATION.


W-2637-0607

Figure 57

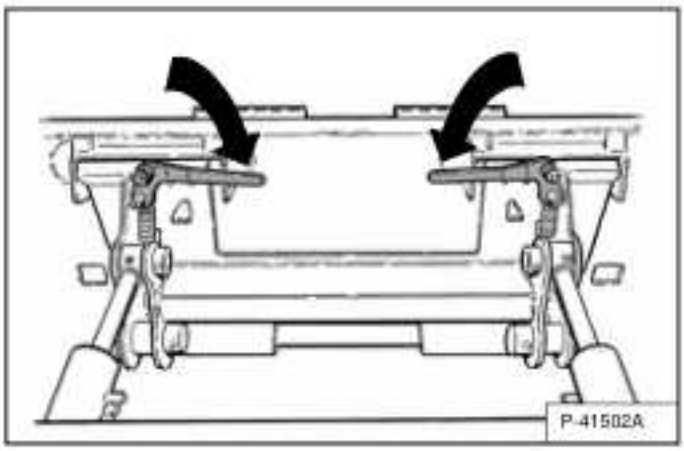

Push down on the Bob-Tach levers until they are fully engaged in the locked position **[Figure 57]** (wedges fully extended through the attachment mounting frame holes).

Figure 58

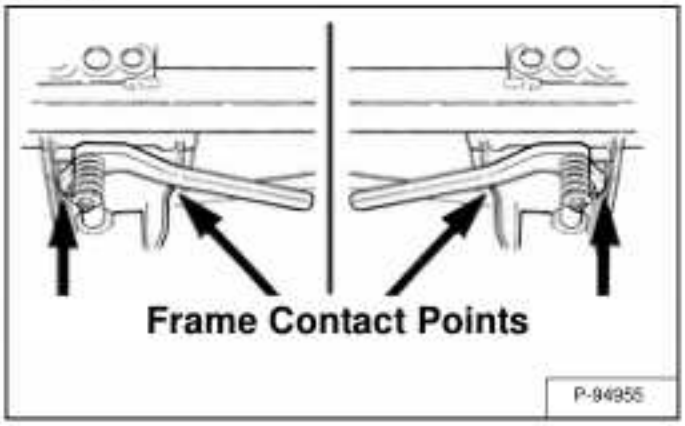

Both levers must contact the frame as shown when locked **[Figure 58]**.

If both levers do not engage in the locked position, see your Bobcat dealer for maintenance.


⚠ WARNING

AVOID INJURY OR DEATH

The Bob-Tach wedges must extend through the holes in the attachment mounting frame. Levers must be fully down and locked. Failure to secure wedges can allow attachment to come off.

W-2715-0208

Figure 59

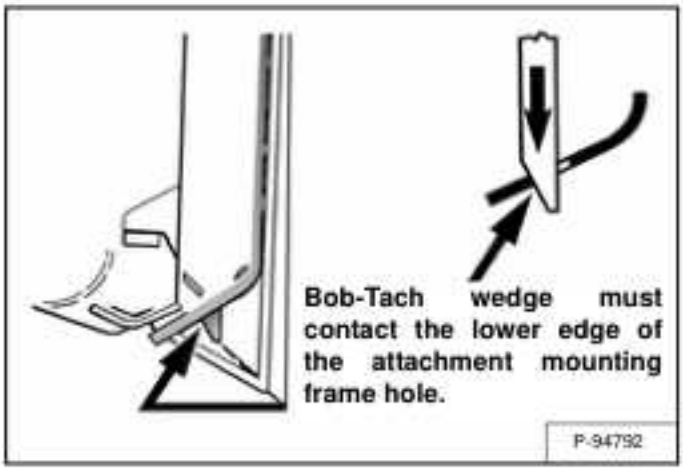

The wedges must extend through the holes in the attachment mounting frame, securely fastening the attachment to the Bob-Tach **[Figure 59]**.

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >


LUBRICATING THE SEEDER

Lubrication Locations

Always use a good quality Lithium base grease when lubricating the seeder. Apply the lubricant until extra grease shows.


Grease the bearings every 20 hours;

Figure 142

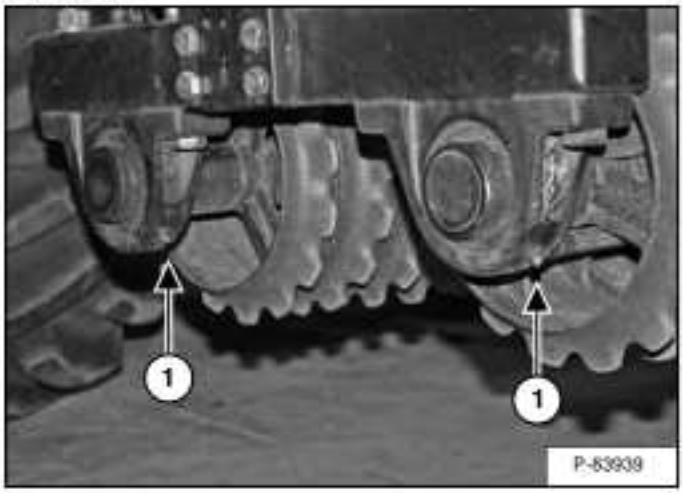

Apply grease to the roller fittings (Item 1) **[Figure 142]**.

Figure 143

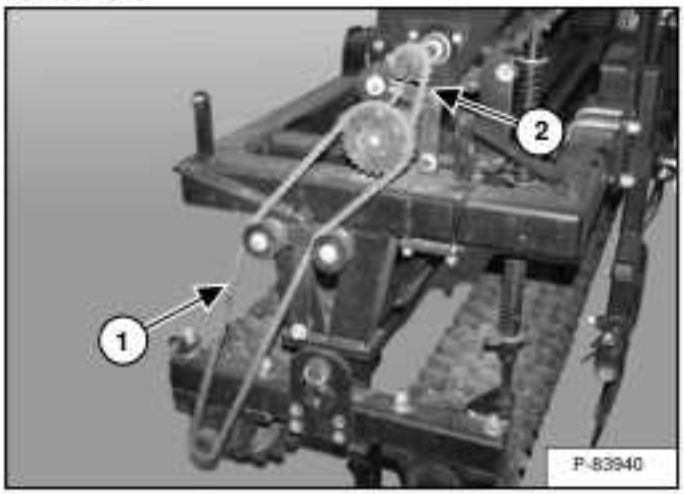

Remove the top and bottom chain covers. Oil the 2 chains (Item 1) and (Item 2) **[Figure 143]** every 20 hours of operation. Re-install the top and bottom chain covers before operation.

⚠ WARNING

AVOID INJURY OR DEATH

Never operate with covers or guards removed.


W-2121-0788

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >

(SEEDER 72SDR) SEEDER SPECIFICATIONS

Dimensions

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

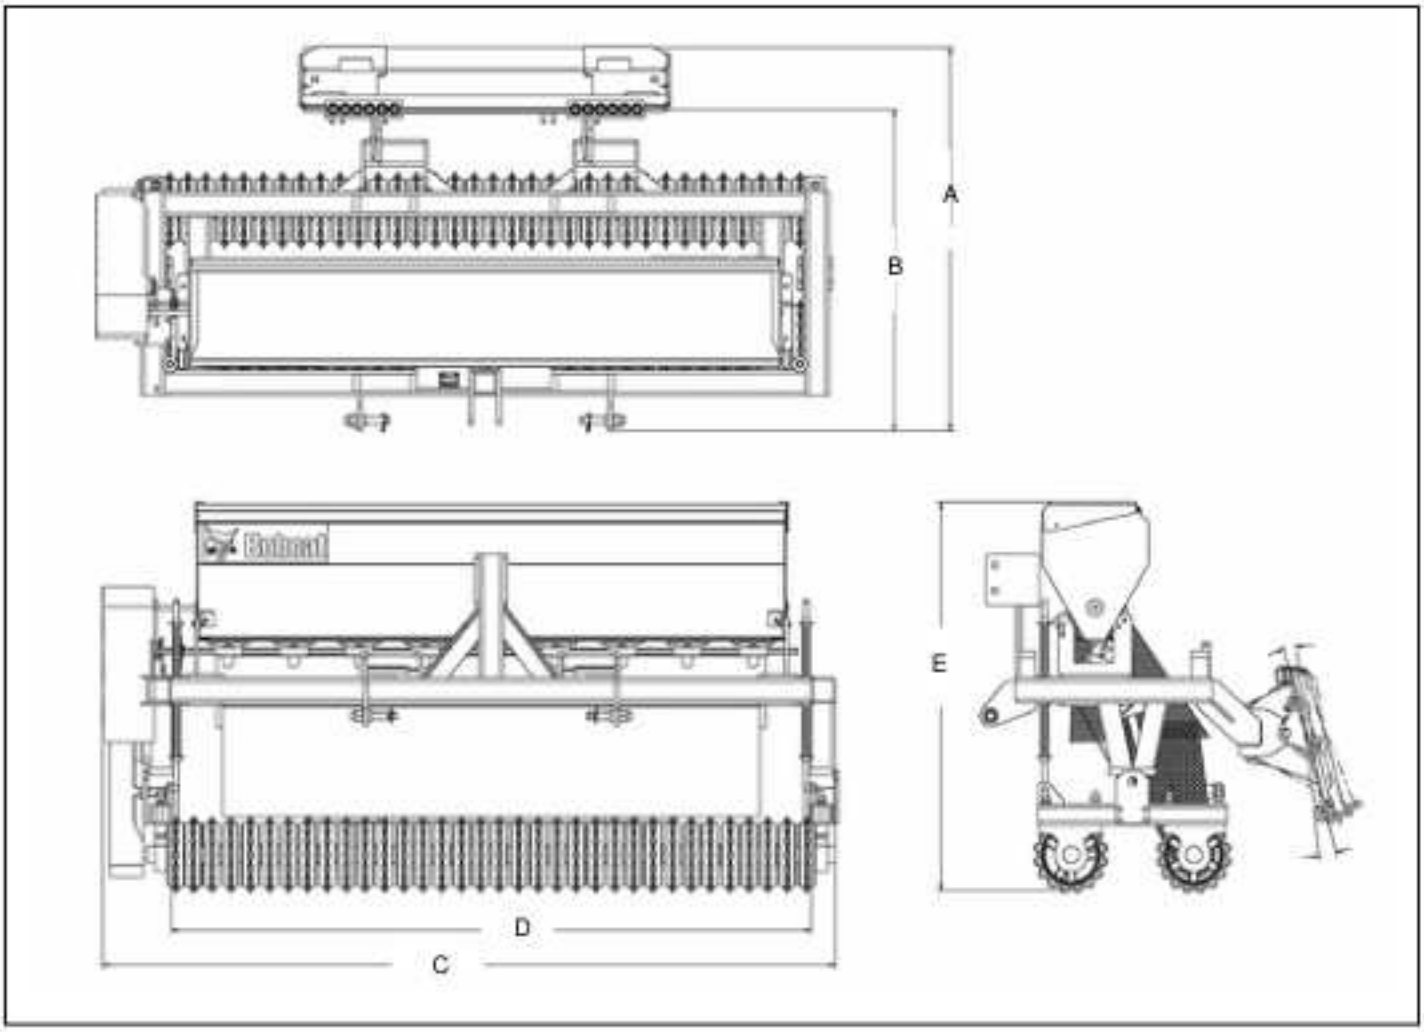

DESCRIPTION	SEEDER
Length With Bob-Tach (**A**)	1092 mm (43.0 in)
Length Without Bob-Tach (**B**)	940 mm (37.0 in)
Maximum Width (**C**)	2235 mm (88.0 in)
Working Width (**D**)	1829 mm (72.0 in)
Height (**E**)	1118 mm (44.4 in)
Three Point Hitch	Category 1
Approx. Hopper Capacity	4 Bushels
Weight With Bob-Tach	590 kg (1300 lb)
Weight Without Bob-Tach	523 kg (1150 lb)

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and attachment / implement must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8 - 10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the attachment / implement.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment / implement safely under all conditions of the work area. Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked. DO NOT wear the seat belt if ROPS is down.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine and attachment / implement load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Call Before You Dig* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection, Special Applications Kits or a Front Window Guard are required for some work. See your Bobcat dealer about Bobcat Safety equipment for your machine.

SI ATT IMP-0208

MidWestTech | Bobcat 72SDR Seeder Operation & Maintenance Manual | Publication 6987... Order the manual at mid-west-tech.com >