
Bobcat®

Operation & Maintenance Manual
Front Compact Tractor Snow Blower

(FCTSB49) S/N AHN900101 & Above
(FCTSB62) S/N A5E000101 & Above

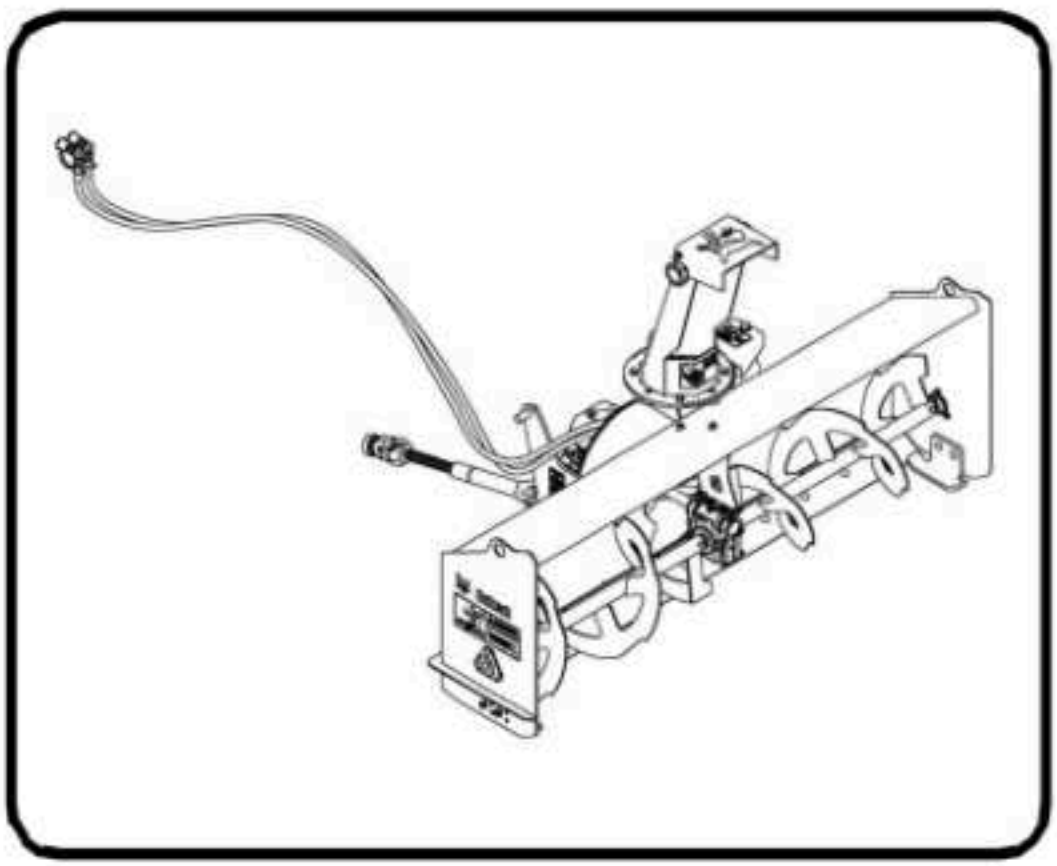

6989401 (8-09)

Printed in U.S.A.

© Bobcat Company 2009

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >

CONTENTS

CONTENTS 1

FOREWORD 3

SAFETY & TRAINING RESOURCES 9

OPERATING INSTRUCTIONS 19

PREVENTIVE MAINTENANCE 43

MACHINE SIGN TRANSLATIONS 57

SPECIFICATIONS 65

WARRANTY 75

ALPHABETICAL INDEX 79

REFERENCE INFORMATION

Write the correct information for YOUR front compact tractor snow blower in the spaces below. Always use these numbers when referring to your front compact tractor snow blower.

Front Compact Tractor
Snow Blower Serial Number _____

NOTES:

_____

_____

_____

_____

_____

YOUR BOBCAT DEALER:

_____

ADDRESS:

_____

PHONE:

_____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the front mount snow blower. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR FRONT MOUNT SNOW BLOWER. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED 5

SERIAL NUMBER LOCATION 6
Implement Serial Number 6

DELIVERY REPORT 6

IMPLEMENT IDENTIFICATION 7

FEATURES AND ACCESSORIES 8
Standard Items 8
Required Kits For Implement 8

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >


OPERATING PROCEDURE WITH COMPACT TRACTORS (CONT'D)

Control Functions Quick Hitch Implement

Front Quick Hitch

The joystick control lever will be used to control the front quick hitch.

Figure 25

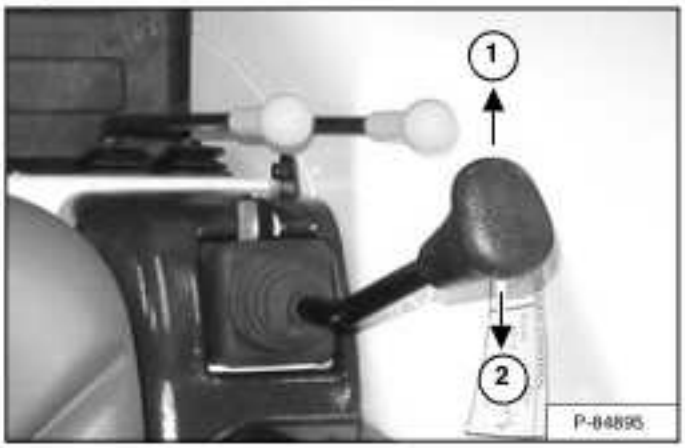


Move the joystick control lever forward to lower the front quick hitch (Item 1) **[Figure 25]**.

Move the joystick control lever backward to raise the front quick hitch (Item 2) **[Figure 25]**.

Hydraulic Discharge Chute Rotation

Use the joystick control lever to rotate the discharge chute clockwise or counterclockwise.

Figure 26

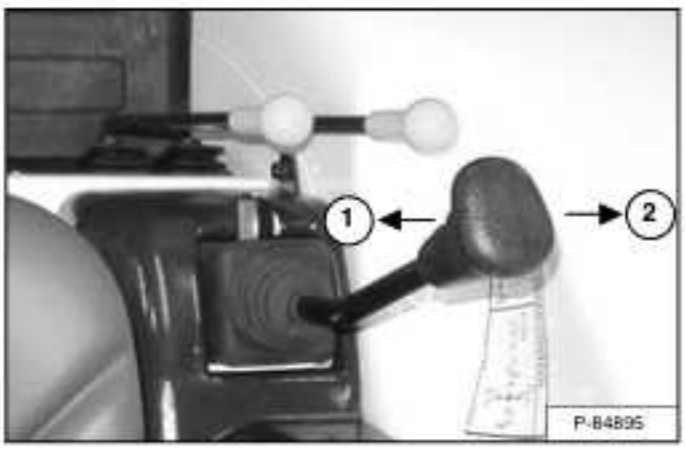

Move the joystick control lever left to rotate discharge chute counterclockwise (Item 1) **[Figure 26]**.


Move the joystick control lever right to rotate discharge chute clockwise (Item 2) **[Figure 26]**.

Deflector Adjustment

Stop the engine and exit the compact tractor. (See Entering And Exiting The Compact Tractor on Page 25.)

Make sure the PTO driveline and all rotating components have come to a complete stop before exiting the compact tractor.

Figure 27

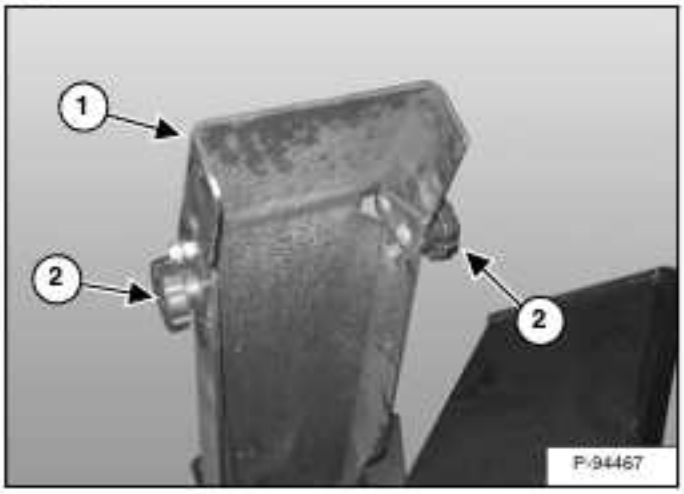

The deflector (Item 1) **[Figure 27]** can be adjusted to control the distance snow is thrown.

To adjust the deflector (Item 1), loosen both the friction knobs (Item 2) **[Figure 27]**. Adjust the deflector up or down. Tighten both friction knobs.

⚠ WARNING

AVOID INJURY OR DEATH

Never direct discharge toward bystanders, building or other property. Foreign objects or ice chunks can be thrown great distances.

W-2382-0900

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >

SERVICE SCHEDULE

Description

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat product.

⚠ WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

SERVICE SCHEDULE		FREQUENCY			
ITEM	SERVICE REQUIRED	DAILY	2 HOURS	10 HOURS	50 HOURS/ YEARLY
Attachment Frame Inspection	Inspect for cracks or damage.				
Skid Shoe Inspection	Inspect for excess wear, cracks, damage and loose hardware.				
Check Chute Rotation Gears	Adjust and/or replace gears as required.				
Grease PTO Shaft	Grease PTO shaft and knuckles.				
Lubricate the Drive Chain	Lubricate the drive chain with Bobcat chain lubricant. See your Bobcat dealer.				
Replace Auger Gearbox Lube	Drain and replace fluid (Approx. 10.24 fl. oz. (0,3 L) of EP80W90)			[1]	


[1] Service at first 10 hours and thereafter as scheduled.

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >

(FCTSB49 & FCTSB62) FRONT MOUNT SNOW BLOWER SPECIFICATIONS

Dimensions

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

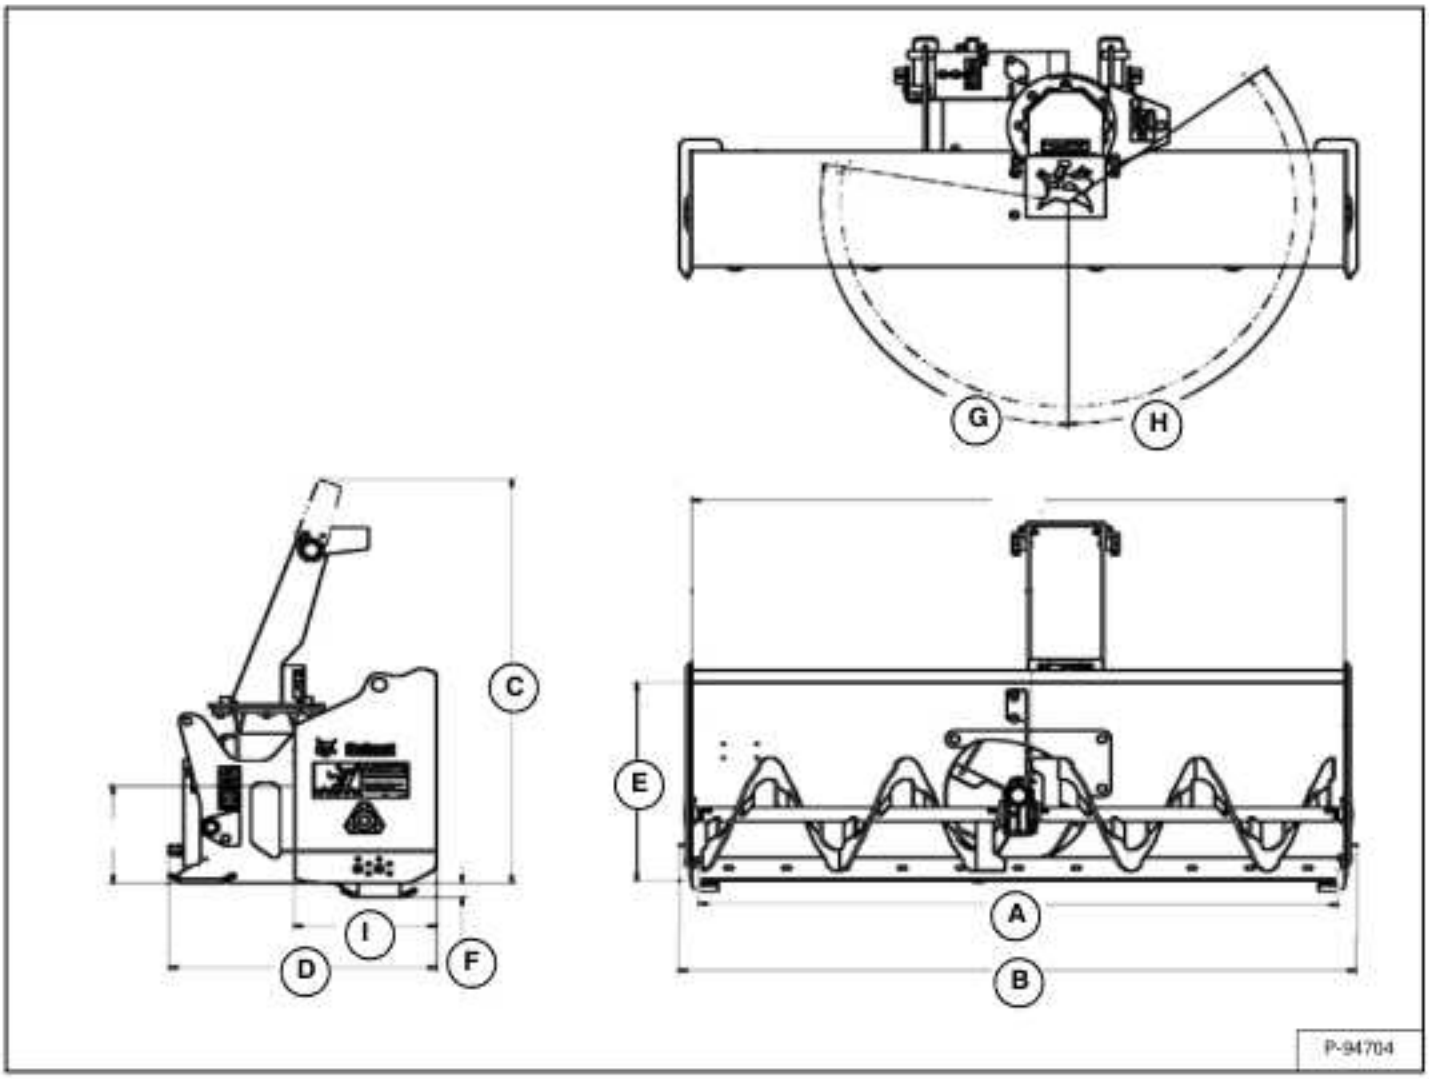

	FCTB49	FCTB62
Cutting Width (A)	49 in. (1244,6 mm)	62 in. (1574,8 mm)
Overall Width (B)	51.36 in. (1304,5 mm)	64.36 (1634,7 mm)
Height (Maximum) (C)	42.67 in. (1083,8 mm)	42.67 in. (1083,8mm)
Length (D)	25.4 in. (645,2 mm)	25.4 in. (645,2 mm)
Intake Height (E)	21 in. (533 mm)	21 in. (533 mm)
Fan Diameter	14 in. (355,6 mm)	14 in. (355,6 mm)
Auger Diameter	12 in. (304,8 mm)	12 in. (304,8 mm)
Skid Shoe Adjustment (F)	0 - 1.5 in (0 - 38 mm)	0 - 1.5 in (0 - 38 mm)
Chute Arc Right (G)	100°	100°
Chute Arc Left (H)	127°	127°
Intake Depth (I)	13.54 in. (383,8 mm)	13.54 in. (383,8 mm)

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

WARNING

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

WARNING

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and implement must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the implement.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and implement safely under all conditions of the work area. Fasten seat belt securely when Roll-Over Protective Structure (ROPS) is up and locked. DO NOT wear the seat belt if ROPS is down.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine and implement load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Call Before You Dig* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection, Special Applications Kits or a Front Window Guard are required for some work. See your Bobcat dealer about Bobcat Safety equipment for your machine.

SI IMP-0208

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snow Blower Operation... Order the manual at mid-west-tech.com >