
Bobcat®

Service Manual
Front Compact Tractor Snowblower

(FCTSB49) S/N AHN900101 & Above
(FCTSB62) S/N A5E000101 & Above

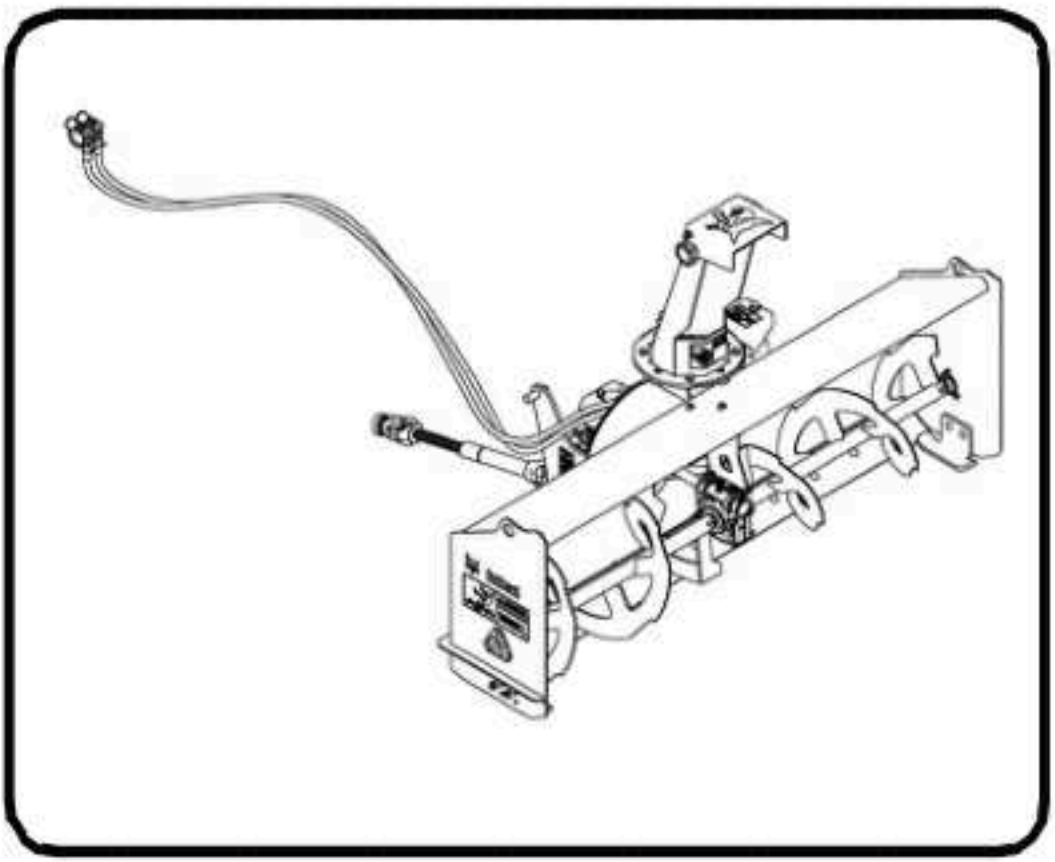

6989402 (5-10)

Printed in U.S.A.

© Bobcat Company 2010

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snowblower Service Ma... Order the manual at mid-west-tech.com >

CONTENTS

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

MAINFRAME 30-01

SPECIFICATIONS SPEC-01

ALPHABETICAL INDEX INDEX-01

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snowblower Service Ma... Order the manual at mid-west-tech.com >

TROUBLESHOOTING

Chart

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

Use the following troubleshooting chart to locate and correct problems which most often occur with the implement.


PROBLEM	CAUSE	CORRECTION
Snowblower does not operate.	Damaged or incorrect attachment of the PTO shaft.	Check connection, connect properly, repair or replace.
	Auger shear bolt has sheared / missing.	Replace bolt.
	Fan shear bolt has sheared or missing.	Replace bolt.
Snowblower cuts too low / too high.	Skid shoes out of adjustment.	Raise or lower skid shoes as needed.
	Top link set wrong.	Adjust top link as needed.
Chute does not rotate.	Damaged quick couplers.	Replace quick couplers.
	Damaged hydraulic motor.	Repair or replace.
	Worn teeth on gear (motor or chute).	Adjust gear mesh by adjusting hydraulic motor placement, or replace gears.
	Orifice plugged.	Remove the orifice fittings and clean the fittings and reinstall. If problem still persists, replace orifice.

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snowblower Service Ma... Order the manual at mid-west-tech.com >

(FCTSB49 & FCTSB62) FRONT MOUNT SNOWBLOWER SPECIFICATIONS

Dimensions

- All dimensions are shown in inches. Respective metric dimensions are given in millimeters enclosed by parentheses.
- Where applicable, specifications conform to **SAE and ISO** standards and are subject to change without notice.

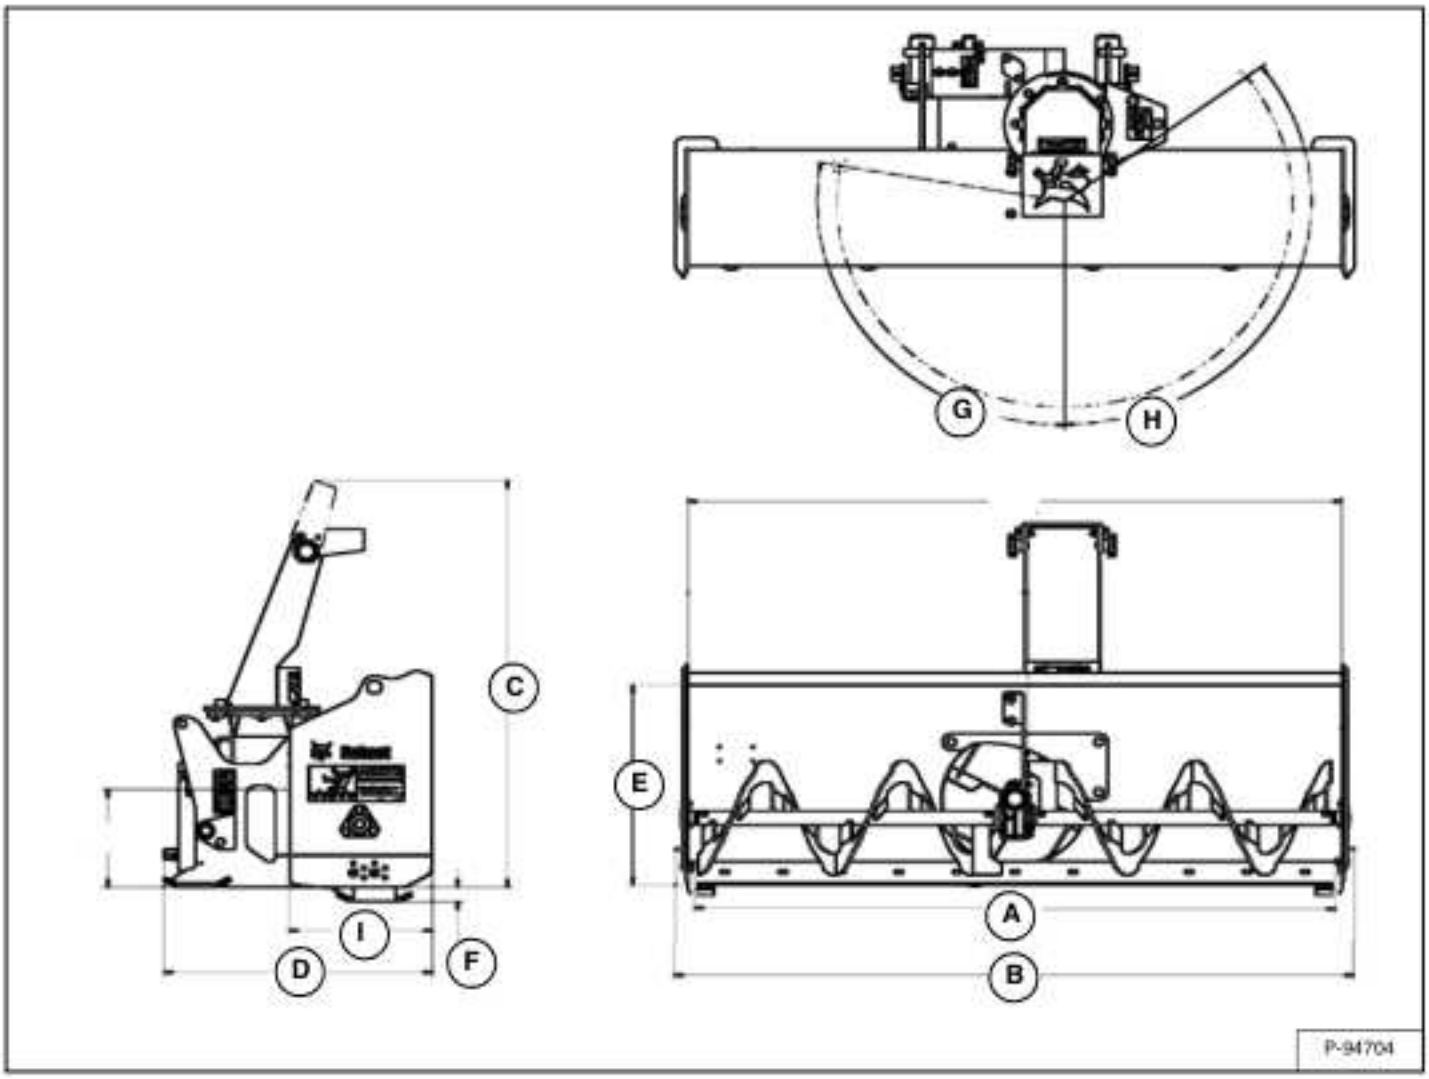

	FCTSB49	FCTSB62
Cutting Width (A)	49 in. (1244,6 mm)	62 in. (1574,8 mm)
Overall Width (B)	51.36 in. (1304,5 mm)	64.36 (1634,7 mm)
Height (Maximum) (C)	42.67 in. (1083,8 mm)	42.67 in. (1083,8mm)
Length (D)	25.4 in. (645,2 mm)	25.4 in. (645,2 mm)
Intake Height (E)	21 in. (533 mm)	21 in. (533 mm)
Fan Diameter	14 in. (355,6 mm)	14 in. (355,6 mm)
Auger Diameter	12 in. (304,8 mm)	12 in. (304,8 mm)
Skid Shoe Adjustment (F)	0 - 1.5 in (0 - 38 mm)	0 - 1.5 in (0 - 38 mm)
Chute Arc Right (G)	100°	100°
Chute Arc Left (H)	127°	127°
Intake Depth (I)	13.54 in. (383,8 mm)	13.54 in. (383,8 mm)

MidWestTech | Bobcat FCTSB49, FCTSB62 Front Compact Tractor Snowblower Service Ma... Order the manual at mid-west-tech.com >