
Bobcat®

Service Manual
S750 Skid-Steer Loader

S/N A3P211001 & Above
S/N A3P311001 & Above

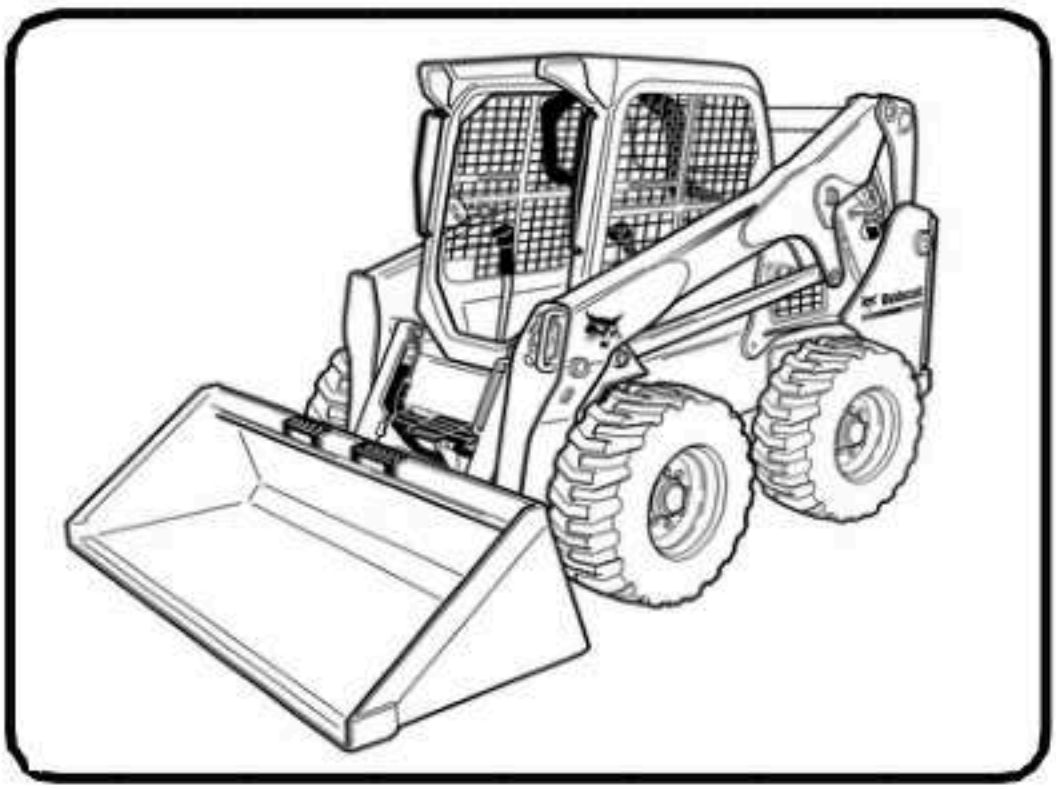

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6989464 (4-11)

Printed in U.S.A.

© Bobcat Company 2011

MidWestTech | Bobcat S750 Skid Steer Loader Service Manual | Publication 6989464_4_11 Order the manual at mid-west-tech.com >

CONTENTS

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM 20-01

HYDROSTATIC SYSTEM 30-01

DRIVE SYSTEM 40-01

MAINFRAME 50-01

ELECTRICAL SYSTEM & ANALYSIS 60-01

ENGINE SERVICE 70-01

HEATING, VENTILATION AND AIR CONDITIONING (HVAC) 80-01

SPECIFICATIONS SPEC-01

ALPHABETICAL INDEX INDEX-01

MidWestTech | Bobcat S750 Skid Steer Loader Service Manual | Publication 6989464_4_11 Order the manual at mid-west-tech.com >

FOREWORD 1-7

SAFETY INSTRUCTIONS 1-10

FIRE PREVENTION 1-12
- Maintenance 1-12
- Operation 1-12
- Electrical 1-12
- Hydraulic System 1-12
- Fueling 1-12
- Starting 1-12
- Spark Arrestor Exhaust System 1-12
- Welding And Grinding 1-13
- Fire Extinguishers 1-13

SERIAL NUMBER LOCATIONS 1-14
- Loader Serial Number 1-14
- Engine Serial Number 1-14


DELIVERY REPORT 1-15

LOADER IDENTIFICATION 1-16

MidWestTech | Bobcat S750 Skid Steer Loader Service Manual | Publication 6989464_4_11 Order the manual at mid-west-tech.com >

Service Tool Harness Communicator - MEL1566

Figure 10-60-6

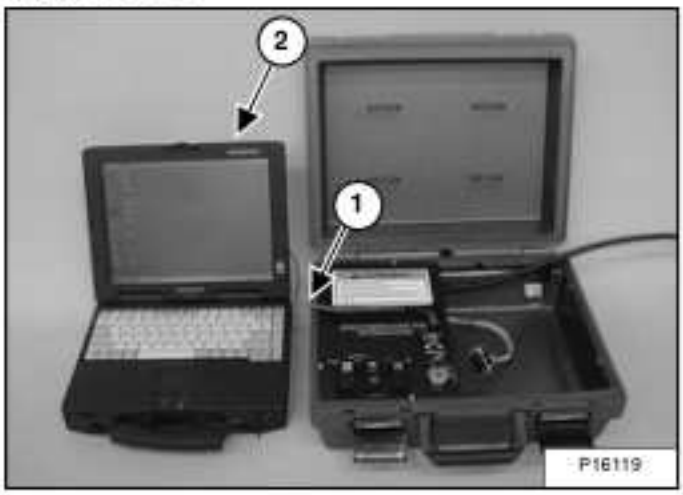


The service tool harness communicator (Item 1) is required to connect remote start tool to the Service PC (Item 2) **[Figure 10-60-6]**.

Remote Start Procedure

The tool listed will be needed to do the following procedure:

MEL1563: Remote Start Tool Kit

Figure 10-60-7

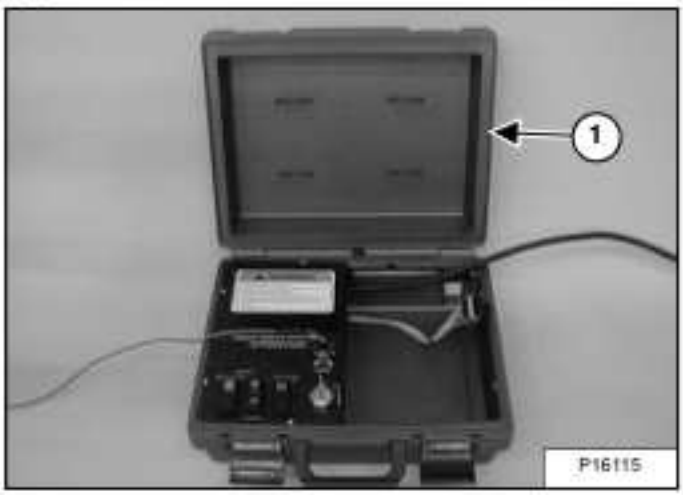

The remote start tool (Item 1) **[Figure 10-60-7]** is required when the operator cab is in the raised position for service and the service technician needs to turn the key switch on or start the engine. Example: adjusting the steering linkage.

Lift and block the loader.

Raise the lift arms (if required by the procedure) and install an approved lift arm support device.

Raise the operator cab (if required by the procedure).

Open the rear door of the loader.

MidWestTech | Bobcat S750 Skid Steer Loader Service Manual | Publication 6989464_4_11 Order the manual at mid-west-tech.com >

All dimensions are given in millimeters. Respective imperial dimensions are given in inches enclosed by parentheses.

Torque Values

Thread Size (Dia. x Pitch)	Material		
	Head Mark 4	Head Mark 7	Head Mark 10
M5 x 0.8		4 - 5 N•m (3 - 4 ft-lb)	
M6 x 1.0		8 - 9 N•m (6 - 7 ft-lb)	8 - 12 N•m (6 - 9 ft-lb)
M8 x 1.25	8 - 12 N•m (6 - 9 ft-lb)	15 - 22 N•m (11 - 16 ft-lb)	24 - 34 N•m (18 - 25 ft-lb)
M10 x 1.25	18 - 24 N•m (13 - 18 ft-lb)	30 - 41 N•m (22 - 30 ft-lb)	49 - 68 N•m (36 - 50 ft-lb)
M12 x 1.25	30 - 41 N•m (22 - 30 ft-lb)	54 - 73 N•m (40 - 54 ft-lb)	94 - 118 N•m (69 - 87 ft-lb)
M14 x 1.5	49 - 68 N•m (36 - 50 ft-lb)	79 - 108 N•m (58 - 80 ft-lb)	157 - 186 N•m (116 - 137 ft-lb)

Troubleshooting


The following troubleshooting chart is provided for assistance in locating and correcting problems which are most common. Many of the recommended procedures must be done by authorized Bobcat Service Personnel only.

PROBLEM	CAUSE
Slow cranking speed.	1, 2, 3, 54
Engine will not start.	2, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 19, 27, 28, 29
Difficult to start.	1, 2, 5, 7, 8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 19, 20, 25, 27, 28, 29,54
No power for engine.	8, 9, 10, 11, 12, 13, 15, 16, 17, 18, 20, 21, 22, 23, 27, 28, 29
Engine is misfiring.	8, 9, 11, 12, 13, 15, 16, 17, 21, 22, 24, 25, 26, 28
Too much fuel consumption.	10, 12, 13, 15, 16, 17, 19, 20, 21, 23, 24, 25, 27, 28, 29
Black exhaust.	10, 12, 13, 15, 16, 17, 19, 20, 21, 23, 24, 25, 27, 28, 29
Blue / white exhaust.	4, 10, 15, 16, 17, 21, 23, 27, 29, 30, 50
Low oil pressure.	4, 31, 32, 33, 34, 35, 37, 38, 39, 52
Engine knocking.	13, 15, 16, 19, 22, 24, 25, 27, 29, 31, 40, 41, 53
Engine running rough.	7, 8, 9, 10, 11, 12, 13, 17, 18, 22, 24, 25, 26, 29, 40, 53
Vibration.	12, 13, 17, 21, 22, 25, 26, 29, 40, 42, 43
High oil pressure warning.	4, 33, 36
Overheating.	10, 12, 13, 15, 16, 20, 21, 40, 44, 45, 46, 47, 48, 51
Too much crankcase pressure.	22, 27, 29, 30, 40, 49
Poor compression.	10, 16, 21, 24, 25, 27, 28, 29, 30, 41, 53
Start and stop.	9, 10, 11

MidWestTech | Bobcat S750 Skid Steer Loader Service Manual | Publication 6989464_4_11 Order the manual at mid-west-tech.com >

Electrical System (Cont'd)


Figure 80-30-12

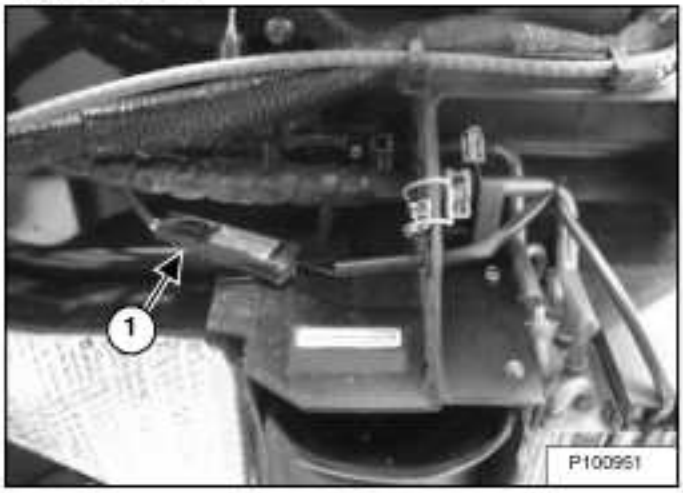

Raise the operator cab. (See Raising on Page 10-30-2.)

Disconnect the thermostat wiring connector (Item 1) **[Figure 80-30-12]** from the loader wiring harness.

Figure 80-30-13

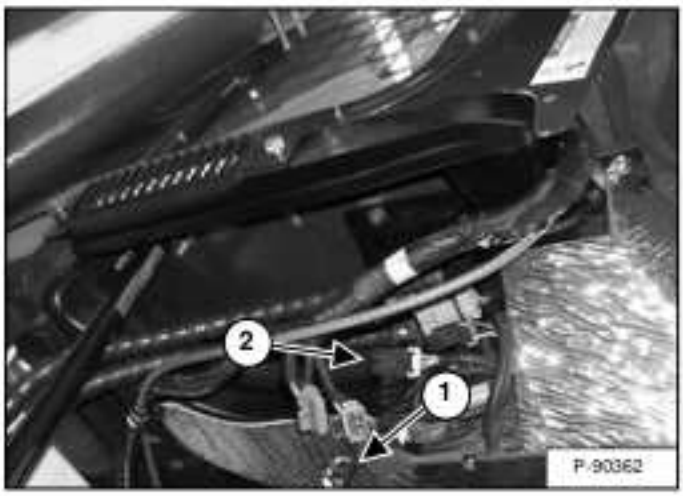

Check the loader harness (Item 1) **[Figure 80-30-13]** for voltage. The voltage should be battery voltage.

If there is no voltage at the wiring harness, check the harness for broken wires.


If there is voltage at the wiring harness, check the thermostat (Item 2) **[Figure 80-30-13]** for resistance.

The resistance value of the thermostat should be 10 ohm at 20°C (68°F).

If there is no resistance value, replace the thermostat. (See Removal And Installation on Page 80-90-2.)


If there is a resistance value, check the blower.

Figure 80-30-14

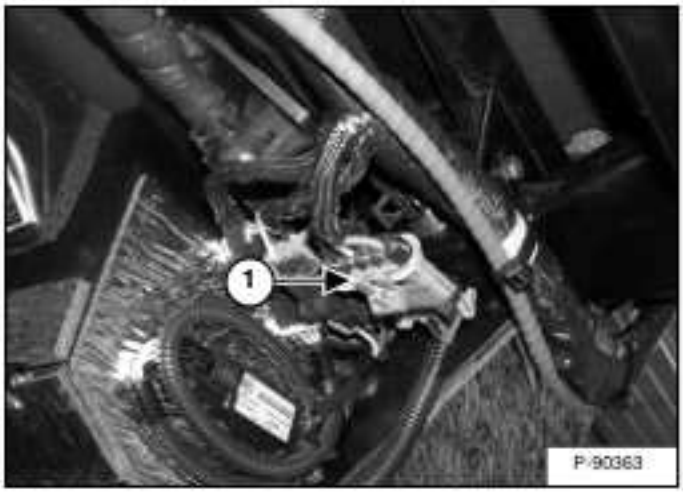

Disconnect the blower wiring connector (Item 1) **[Figure 80-30-14]** from the loader wiring harness.

Figure 80-30-15

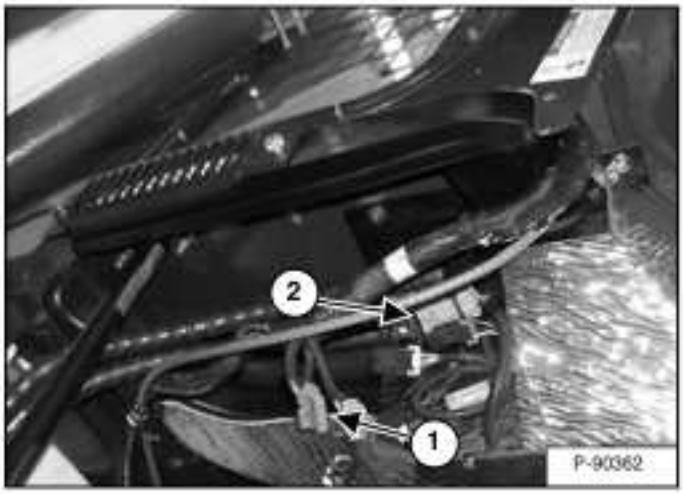

Check the loader harness (Item 1) **[Figure 80-30-15]** for voltage. The voltage should be battery voltage.

If there is no voltage at the wiring harness, check the harness for broken wires.

If there is voltage at the wiring harness, check the resistance to the blower at the blower wiring connector (Item 2) **[Figure 80-30-15]**.

If there is no resistance value replace the blower. (See Removal And Installation on Page 80-130-1.)

If there is a resistance value check the climate controls at the control panel inside the loader cab.

MidWestTech | Bobcat S750 Skid Steer Loader Service Manual | Publication 6989464_4_11 Order the manual at mid-west-tech.com >

CONNECTOR ASSIGNMENTS												
CONN	DESCRIPTION	NUM OF PINS	SHEET		CONN	DESCRIPTION	NUM OF PINS	SHEET		CONN	DESCRIPTION	NUM OF PINS	SHEET
C101	FUEL SHUTOFF SOLENOID	3	6		C446	HYDRAULIC FAN	2	7		FC1	FUSE CENTER 1	8	3
C103	TAILGATE	8	4,10,11,13		C449	LEFT JOYSTICK (CAB HARN)	4	5		FC2	FUSE CENTER 2	8	3
C104	ENGINE COOLANT SENSOR	2	6		C450	RIGHT JOYSTICK (CAB HARN)	4	5		FRC1	FUSE RELAY CENTER	64	3,6,7,11,12
C105	HYD CHARGE PRESSURE	3	7		C453	RIGHT QUAD A DRIVE	4	15					
C106	ENGINE SPEED SENSOR	2	6		C454	LEFT QUAD DRIVE	4	15		J1A	GATEWAY CONTROLLER	34	3,6-8,10-13
C107	ENGINE OIL PRESSURE	3	6		C467	LIFT PEDAL LOCK	3	14		J1B	GATEWAY CONTOLLER	26	3-10,13
C108	HYD TEMPERATURE SENDER	2	7		C468	TILT PEDAL LOCK	3	14		J2A	AUX CONTROLLER	34	7,10,13
C109	S/R ADAPTER HARNESS	2	6		C469	TILT HANDLE	3	14		J2B	AUX CONTROLLER	26	3-5,7,10,13
C110	ALTERNATOR	2	6		C470	TILT PEDAL	3	14					
C112	HYD OIL FILTER SWITCH	2	7		C471	LIFT PEDAL	3	14		J1-ACS	ACS CONTROLLER	8	14, 15
C126	HORN	2	13		C472	LIFT HANDLE	3	14		J2-ACS	ACS CONTROLLER	10	14, 15
C129	CAB ACCESSORY	3	9		C474	BRAKE LIGHT	1	15		J3-ACS	ACS CONTROLLER	10	14, 15
C209	DOME LIGHT	3	9		C479	LEFT PANEL(BLACK)	12	5,8		J5	DRIVE CONTROLLER	50	15
C212	POWER SOCKET	2	9		C480	LEFT PANEL(GRAY)	12	8					
C252	WASHER	2	9		C482	SEATBAR SENSOR	3	9		SW1	BRAKE SWITCH	6	8
C277	AIR RIDE SEAT	6	13		C483	TEMP CONTROL SWITCH	3	12		SW2	BEACON SWITCH	6	13
C278	RIGHT SPEAKER	2	13		C486	AC COMPRESSOR	2	12		SW3	HAZARD SWITCH	6	13
C279	LEFT SPEAKER	2	13		C489	MFR ACCESSORY	2	3,4		SW4	HAND/FOOT, H/ISO SWITCH	6	9
C308	BRAKE SOLENOID	2	7		C492	ACS/SJC/AWS-MFR HARN	8	3,5,9		SW5	POWER BOBTACH SWITCH	6	13
C350	AC EVAPORATOR SWITCH	2	12		C493	ACS/SJC/AWS-MFR HARN	4, 15	3,4		SW6	BUCKET POSITION SWITCH	6	13
C355	DLX or STD FUEL HARNESS	6	6,12,13		C497	SJC HORN/BLINKER	3	13		SW9	TRAVEL CONTROL SWITCH	6	8
C404	BU ALARM-MFR HARN	2	3,10		C499	PTOL	4	8		SW10	BLOWER SWITCH	5	12
C405	AIR FILTER SWITCH	2	6		C500	RH KEY SWITCH	6	8		SW11	AC SWITCH	3	12
C406	FUEL SENDER	2	6		C501	A22 PUMP HARNESS	8	15					
C408	CAB - MFR HARN CONNECTOR	48	3-5,8-9,11-13		C503	RH DLX PANEL	6	5,8		T1	BATT GROUND	1	4
C409	RIGHT HANDLE	10	10		C542	LEFT SWASHPLATE	3	15		T2	BUZZER GROUND	1	8
C410	LEFT HANDLE	10	10		C543	RIGHT SWASHPLATE	3	15		T3	FLASHER	2	13
C411	LEFT HANDLE 5 WAY (FLSHR)	5	13		C544	LEFT FORWARD DRIVE	2	15		T6	BATT GROUND	1	4
C412	LEFT HANDLE 2 WAY (HORN)	2	13		C545	LEFT REVERSE DRIVE	2	15		T8	BATT GROUND	1	4
C415	HIGH FLOW SOLENOID	2	13		C546	RIGHT FORWARD DRIVE	2	15		T13	BUZZER POWER	1	8
C418	FRONT ROD (MALE)	2	7		C547	RIGHT REVERSE DRIVE	2	15		T14	PRE HEATER	1	6
C419	FRONT BASE (FEMALE)	2	7							T15	RIGHT REAR WORK LIGHT(+)	1	11
C420	HYD LOCK	2	7							T16	RIGHT REAR WORK LIGHT(-)	1	11
C440	RF BASE	2	14		C602	LEFT REAR TAIL LIGHT	2	11		T17	LEFT REAR WORK LIGHT (+)	1	11
C422	TILT SPOOL LCOK	3	10		C603	RIGHT REAR TAIL LIGHT	2	11		T18	LEFT REAR WORK LIGHT (-)	1	11
C423	BUCKET POSITION	2	13		C606	POWER BOBTACH OPEN	2	13		T19	BACKUP ALARM	1	10
C425	BRAKE SOLENOID	3	7		C607	POWER BOBTACH CLOSE	2	13		T20	BACKUP ALARM (GND)	1	10
C426	CAN (Remote Start Tool, ACD)	7	5		C610	HVAC DUCT FAN	2	12					
C428	TILT ACTUATOR	8	14, 15		C611	BLOWER MOTOR	4	12					
C429	LIFT ACTUATOR	8	14,15		C630	THERMOSTAT	3	12					
C434-1	LEFT WORKLIGHT 1	2	11		C635	HEATER VALVE	6	12					
C434-2	LEFT WORKLIGHT 2	2	11		C667	DOOR	6	9					
C435-1	RIGHT WORKLIGHT 1	2	11		C670	EXTERIOR BEACON	6	13					
C435-2	RIGHT WORKLIGHT 2	2	11		C676	RADIO	6	13					
C437	TWO SPEED MAKEUP	2	13										
C441	TWO SPEED	2	13		C707	OBW STOP BRAKE LIGHT	3	15					

WIRE CATEGORIES FOR COLORS AND NUMBER RANGE			
GROUP DESCRIPTION	GROUP NUMBER RANGE	WIRE COLOR	COLOR CODE
BATT FEED, GENERAL	1000 THROUGH 1499	RED	RED
BATT FEED, FUSED	1000 THROUGH 1499	RED/WHITE	RED/WHT
BATT FEED, SWITCHED	1500 THROUGH 1999	ORANGE/WHITE	RNG/WHT
BATTERY GROUND	2000 THROUGH 2999	BLACK	BLK
move	2000 THROUGH 2999	BROWN	BRN
MONITORING	3000 THROUGH 3999	LIGHT BLUE	LBL
HYDRAULIC	4000 THROUGH 4999	LIGHT GREEN	LGN
CONTROLLER SUPPLY	5000 THROUGH 5999	YELLOW	YEL
LIGHTS	6000 THROUGH 6999	PINK	PNK
OTHER FUNCTIONS	7000 THROUGH 7999	WHITE	WHT
ENGINE	8000 THROUGH 8999	TAN	TAN
COMMUNICATION	9000 THROUGH 9999	PURPLE	PUR
COMMUNICATION	9000 THROUGH 9999	PURPLE/WHITE	PUR/WHT

SCHEMATIC INDEX	
OVERVIEW	PAGE 1,2
POWER	PAGE 3
GROUND	PAGE 4
CAN BUS	PAGE 5
ENGINE	PAGE 6
HYDRAULICS	PAGE 7
CAB DISPLAY	PAGE 8
CAB	PAGE 9
MANUAL CONTROLS	PAGE 10
LIGHTS	PAGE 11
HVAC	PAGE 12
OPTIONS	PAGE 13
ACS	PAGE 14
SJC	PAGE 15

WIRING SCHEMATIC
(ACS / SJC MACHINE)
S750 (S/N A3P211001 AND ABOVE)
(S/N A3P311001 AND ABOVE)
Sheet 1 of 15

(PRINTED NOVEMBER 2010)
7197682
Printed In U.S.A.

Order the manual at mid-west-tech.com >