686G, 686GXR and 688G SERIES 2 TELESCOPIC HANDLERS

Service Manual

7-16041

CASE CONSTRUCTION

MidWestTech | Case 686G, 686GXR, 688G Series 2 Telescopic Handler Service Manual | Publication 7-16041

Order the manual at mid-west-tech.com >

686G, 686GXR and 688G SERIES 2
TELESCOPIC HANDLERS
Service Manual
7-16041

Table of Contents

Description	Section No.	Form No.
General	**Tab 1**	
Section Index - General		7-16070
Standard Torque Specification	1001	8-71601
Fluids and Lubricants	1002	7-16080
Safety and General Information	1003	7-16090
Loctite Product Chart		8-98902
Engine	**Tab 2**	
Section Index- Engine		7-90140
Diesel Engine Specifications	2000	7-16100
Engine and Transmission Removal and Installation	2001	7-89691
Engine Troubleshooting	2002	7-89701
Fuel System	**Tab 3**	
Section Index- Fuel System		7-16110
Electrical	**Tab 4**	
Section Index - Electrical		7-16700
Electrical System General	4000	7-16710
Electrical Schematics and Troubleshooting	4001	7-16720
Electrical Gauges and Senders	4005	7-89741
Alternator	4007	7-49250
Steering	**Tab 5**	
Section Index - Steering		7-90170
How It Works	5000	7-89751
Steering Specifications	5001	7-89760
Steering Troubleshooting	5002	7-89771
Steering Pump and Steering Column	5003	7-89781
Steering Selector Valve	5004	7-89791
Steering Priority Valve	5005	7-89800

Reprinted

CASE, LLC.
700 State Street
Racine, WI 53404 U.S.A.

Bur 7-16061

© 2003 Case, LLC.

Printed in U.S.A.
Issued February, 2003


MidWestTech | Case 686G, 686GXR, 688G Series 2 Telescopic Handler Service Manual |... Order the manual at mid-west-tech.com >

686G, 686GXR and 688G SERIES 2
TELESCOPIC HANDLERS
Service Manual
7-16041

Table of Contents

Description	Section No.	Form No.
Power Train	**Tab 6**	
Section Index - Power Train		7-90180
How It Works	6000	7-89820
Removal and Installation of Power Train Components	6001	7-16730
Transmission Specifications and Troubleshooting	6002	7-89841
Drive Axle	6004	7-16740
Brakes	**Tab 7**	
Section Index - Brakes		7-90190
How It Works	7000	7-16750
Brake System Specifications	7001	7-89870
Brake System Troubleshooting	7002	7-89880
Brake System Removal and Installation of Components	7003	7-89891
Hydraulics	**Tab 8**	
Section Index - Hydraulics		7-90201
How It Works	8000	7-16760
Hydraulic Specifications, Schematics and Troubleshooting	8001	7-17210
Hydraulic Specifications, Schematics and Troubleshooting 686GXR P.I.N. JFE0001848 and after, 688G P.I.N. JFE0003613 and after	8001	6-49340
Removal and Installation of Hydraulic Components	8002	7-90281
Hydraulic Cylinders	8006	7-16770
Hydraulic and Fuel Tanks	8007	7-89930
Mounted Equipment and Chassis	**Tab 9**	
Section Index - Mounted Equipment and Chassis		7-90210
How It Works	9000	7-16780
Specifications, and Troubleshooting	9001	7-16790
Removal and Installation of Boom Components	9005	7-16800
Electrical Schematic and Hydraulic Schematic Foldout - 686G,686GXR, and 688G		7-17200
Electrical Schematic and Hydraulic Schematic Foldout - 686GXR Series 2 Machines P.I.N. JFE0001848 and After and 688G Series 2 Machines P.I.N. JFE0003613 and After		6-49430

MidWestTech | Case 686G, 686GXR, 688G Series 2 Telescopic Handler Service Manual |... Order the manual at mid-west-tech.com >

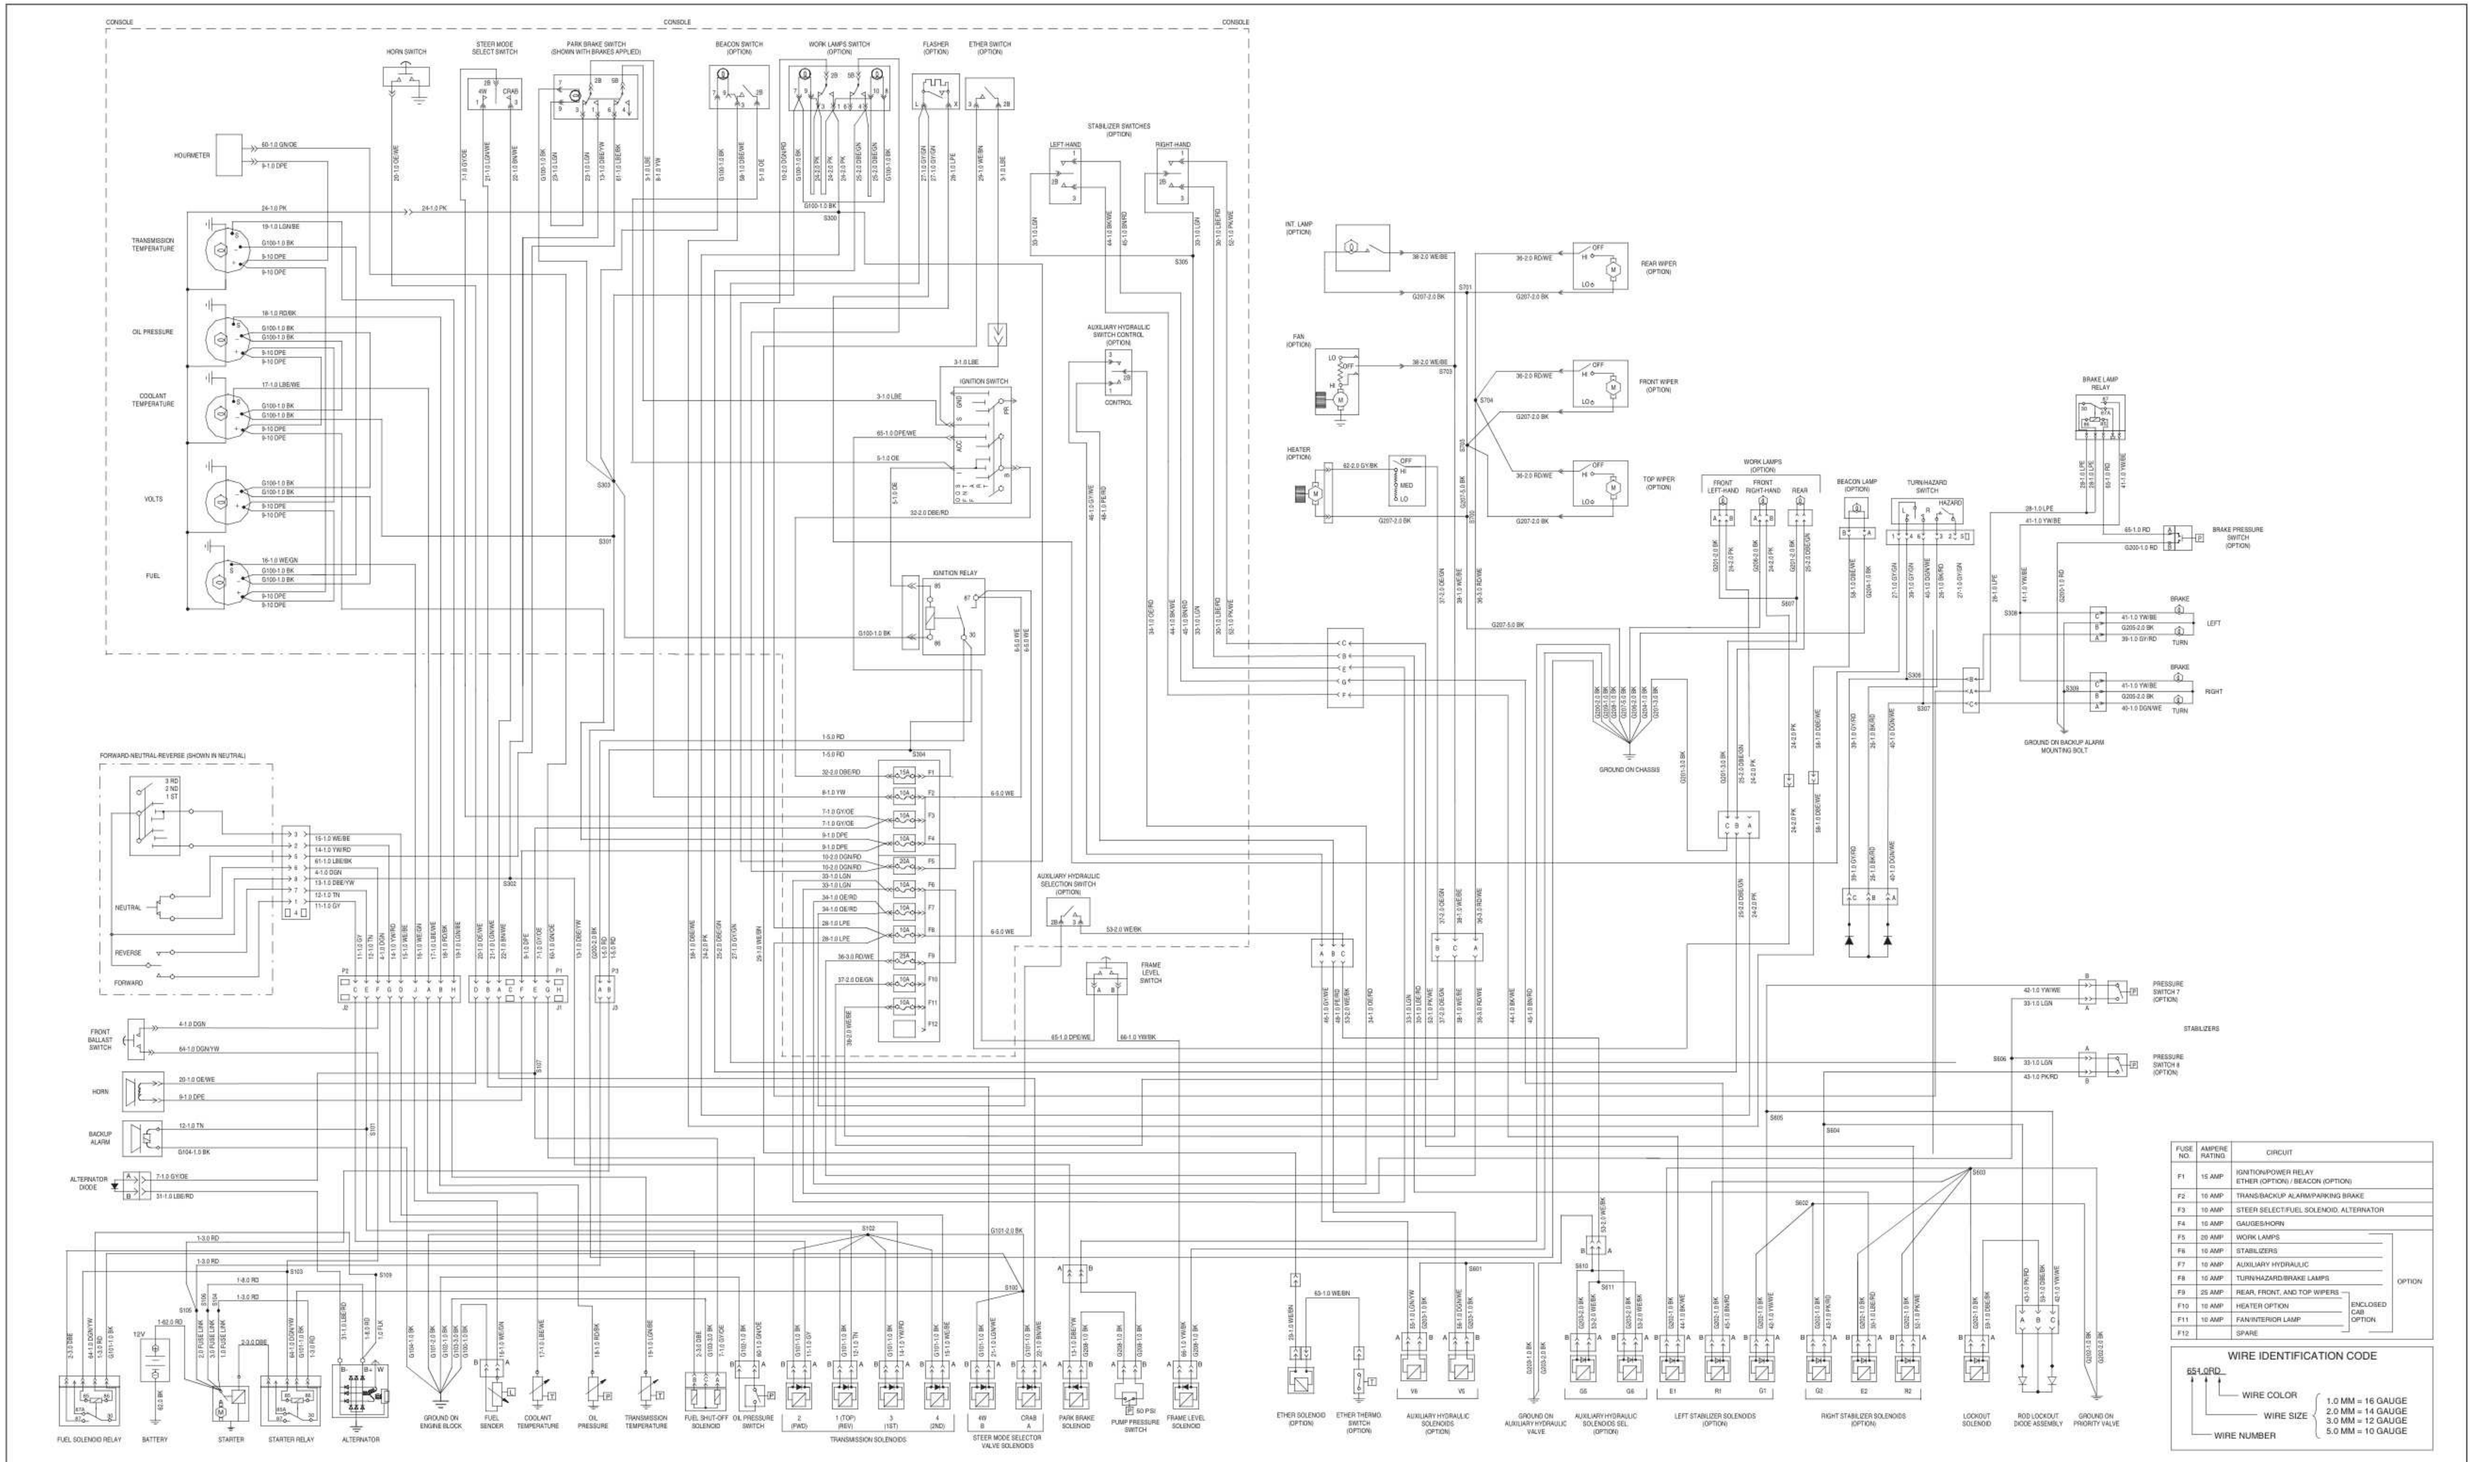

FUSE NO.	AMPERE RATING	CIRCUIT	
F1	15 AMP	IGNITION/POWER RELAY ETHER (OPTION) / BEACON (OPTION)	
F2	10 AMP	TRANS/BACKUP ALARM/PARKING BRAKE	
F3	10 AMP	STEER SELECT/FUEL SOLENOID, ALTERNATOR	
F4	10 AMP	GAUGES/HORN	
F5	20 AMP	WORK LAMPS	
F6	10 AMP	STABILIZERS	
F7	10 AMP	AUXILIARY HYDRAULIC	
F8	10 AMP	TURN/HAZARD/BRAKE LAMPS	
F9	25 AMP	REAR, FRONT, AND TOP WIPERS	OPTION
F10	10 AMP	HEATER OPTION	ENCLOSED CAB OPTION
F11	10 AMP	FAN/INTERIOR LAMP	
F12		SPARE	

WIRE IDENTIFICATION CODE

651 GR/D
- WIRE COLOR
- WIRE SIZE — 1.0 MM = 16 GAUGE; 2.0 MM = 14 GAUGE; 3.0 MM = 12 GAUGE; 5.0 MM = 10 GAUGE
- WIRE NUMBER

686G, 686GXR, and 688G Series 2 ELECTRICAL SCHEMATIC

Additional copies of this Hydraulic and Electrical Schematic can be ordered through Technical Publications Distribution System. The Part Number is 7-17200

BC09K081

Order the manual at mid-west-tech.com >