CASE

REPAIR MANUAL

CRAWLER EXCAVATOR

CX210

7-29041

MidWestTech | Case CX210 Crawler Excavator Service Manual | Publication 7-29041

Order the manual at mid-west-tech.com >

CX210 Crawler Excavators
Table of Contents

DIVISION/SECTION		SECTION N°	REFERENCE N°
1	**GENERAL INFORMATION**		
	Safety, general information and standard torque data	1001	7-28590
	General specifications and special torque setting	1002	7-28671
	Numerical value conversion table	1003	9-35540
2	**ENGINE**		
	Removal and installation of the engine	2000	[redacted]
	Radiator and oil-cooler	2001	[redacted]
	Engine specifications	*	
	Disassembly and assembly of the engine	*	
3	**FUEL SYSTEM**		
	Fuel tank	3001	7-27970GB
	Fuel engine system	*	
4	**ELECTRICAL SYSTEM**		
	Electrical system, electrical and electronic troubleshooting	4001	7-28631
	Inspection and maintenance of batteries and connecting a booster battery	4002	7-27921GB
5	**UNDERCARRIAGE**		
	Removal and installation of tracks	5001	7-27750GB
	Rollers	5003	7-27770GB
	Sprocket	5004	7-27781GB
	Idler wheel and tension shock absorber	5005	7-27801GB
6	**DRIVE TRAIN**		
	Drive motor and final drive transmission removal and installation	6001	7-27841GB
	Drive motor and final drive transmission disassembly and assembly	6002	7-28090GB
	Swing reduction gear, removal and installation	6003	7-27820GB
	Swing reduction gear, disassembly and assembly	6004	7-28370GB
7	**UNDERCARRIAGE HYDRAULICS**		
8	**UPPERSTRUCTURE HYDRAULICS**		
	Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	7-27951GB
	Specifications, troubleshooting, checks and hydraulic pressure settings	8001	7-28551
	Hydraulic reservoir removal and installation	8002	7-27990GB
	Main and pilot pumps, removal and installation	8003	[redacted]
	Main hydraulic control valve, removal and installation	8004	7-27890GB
	Attachment cylinders, removal and installation	8005	7-27791GB
	Hydraulic swivel, removal and installation	8006	7-27811GB
	Pilot blocs, removal and installation	8007	9-35590
	Swing motor, removal and installation	8008	7-28070GB
	Disassembly and assembly of the free swing valve	8009	9-35530
	Main hydraulic pump, disassembly and assembly	8010	[redacted]
	Main hydraulic control valve, disassembly and assembly	8011	[redacted]
	Attachment cylinders, disassembly and assembly	8012	9-35500
	Hand control levers, disassembly and assembly	8013	7-28110GB
	Foot control levers, disassembly and assembly	8014	7-28210GB
	Six-solenoid valves, disassembly and assembly	8015	7-27910GB
	Caution valve, disassembly and assembly	8016	7-27940GB
	Safety valve	8017	7-29630GB
	Hydraulic swivel, disassembly and assembly	8018	7-28080GB
	Swing motor, disassembly and assembly	8019	7-28010GB
	Hydraulic functions	8020	7-28610


Reprinted

Copyright © 2004 Case France
Printed in U.S.A.
February 2004

Case

Cre 9-35571

MidWestTech | Case CX210 Crawler Excavator Service Manual | Publication 7-29041 Order the manual at mid-west-tech.com >

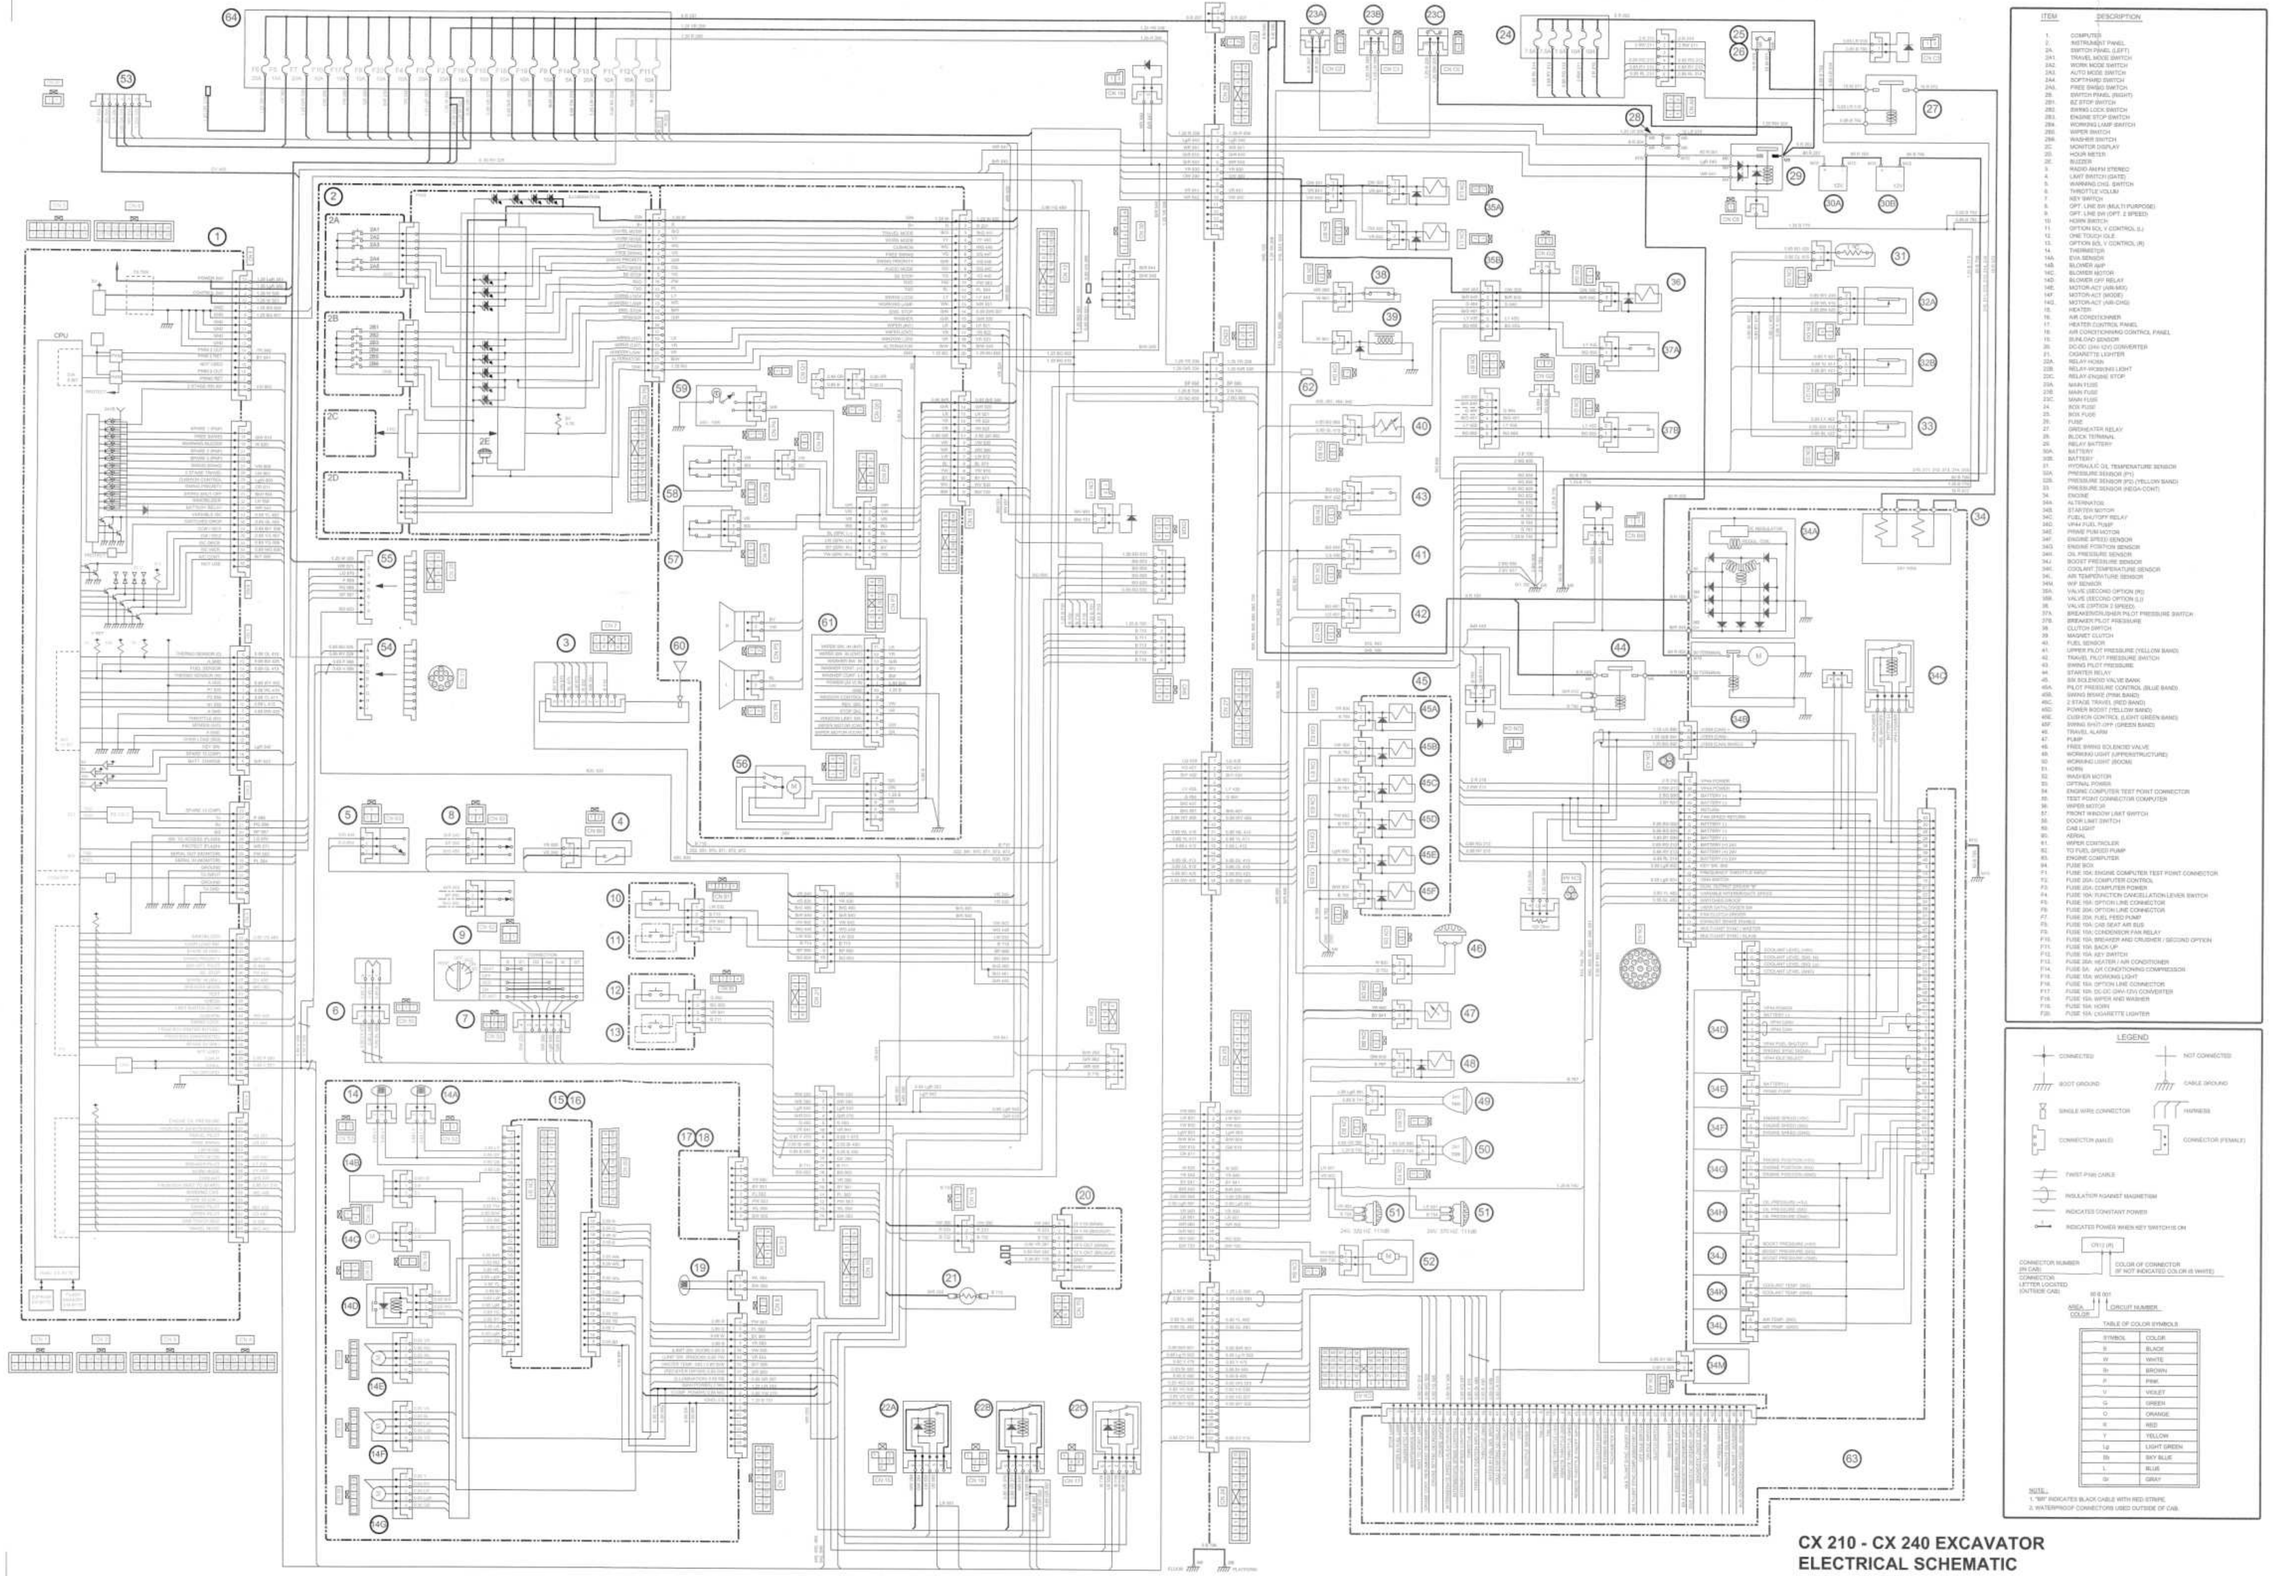

CX 210 - CX 240 EXCAVATOR
ELECTRICAL SCHEMATIC

Part Number 7-28530

Order the manual at mid-west-tech.com >