



Maintenance and Service Manual

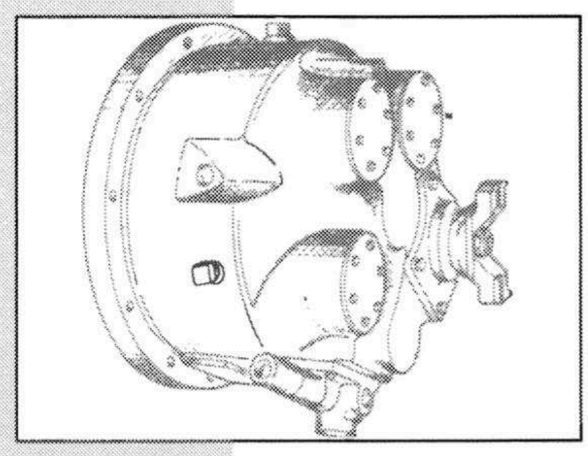

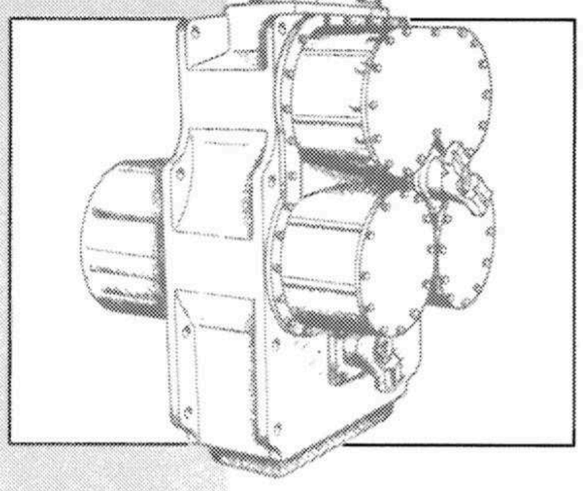

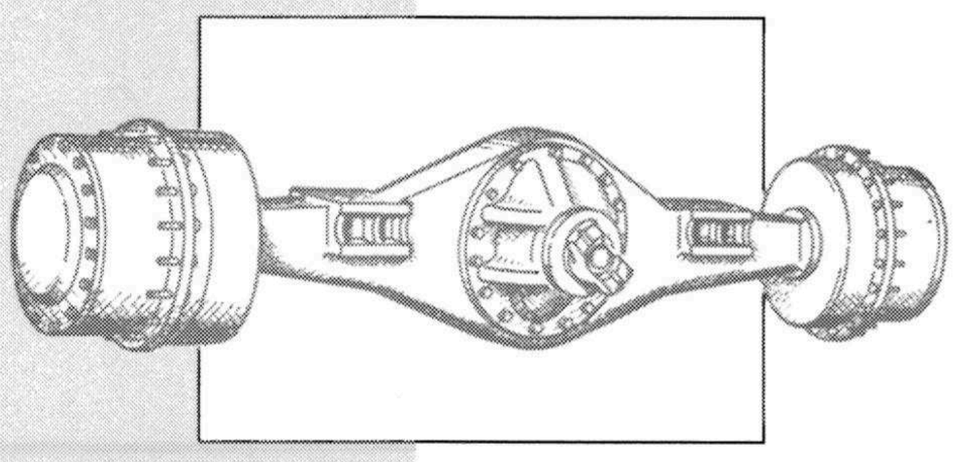

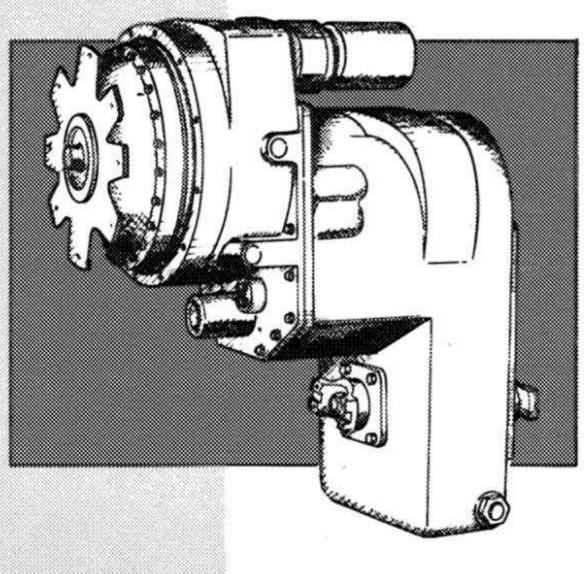

28000 Powershift Transmission

R-HR & MHR MODEL
4 SPEED LONG DROP

73160588

CLARK-HURTH COMPONENTS

Reprinted

SM R-HR-MHR284 Rev. 6-95

MidWestTech | Case Clark 280001 R-HR, MHR, 4 Speed Long Drop Powershift Transmission Service Manual | Publication 73160588

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

HOW THE UNITS OPERATE

SECTIONAL VIEWS AND PARTS IDENTIFICATION

- Basic Design Silhouette ..... Fig. A
- Converter Assembly ..... Fig. B
- Converter and Transmission Case Group ..... Fig. C
- Four Speed Case and Clutch Group ..... Fig. D
- Clutch Group ..... Fig. E
- Regulating Valve, Charging Pump and Filter Group ..... Fig. F
- Control Valve Assembly ..... Fig. G
- Axle Disconnect and Mechanical Parking Brake ..... Fig. H
- Typical 28,000 Cross Section ..... Fig. I
- External Plumbing Diagram ..... Fig. J
- Typical Four Speed Power Flow ..... Fig. K
- Clutch and Gear Arrangement ..... Fig. L
- Shielded Bearing Installation ..... Fig. M

DISASSEMBLY OF TRANSMISSION 1

CLEANING AND INSPECTION 14-15

REASSEMBLY OF TRANSMISSION 15

SERVICING MACHINE AFTER TRANSMISSION OVERHAUL 30

SPECIFICATION AND SERVICE DATA 31

LUBRICATION 31

TROUBLE SHOOTING GUIDE 32

RING GEAR INSTALLATION 35-36-37-38

R MODEL SECTION 39

LF MHR MODEL SECTION 47

DRIVE PLATE INSTALLATION 69-70

SPEED SENSOR BUSHING INSTALLATION 71

NOTE: Metric Dimensions Shown in Brackets [ ].

MidWestTech | Case Clark 280001 R-HR, MHR, 4 Speed Long Drop Powershift Transmissio... Order the manual at mid-west-tech.com >


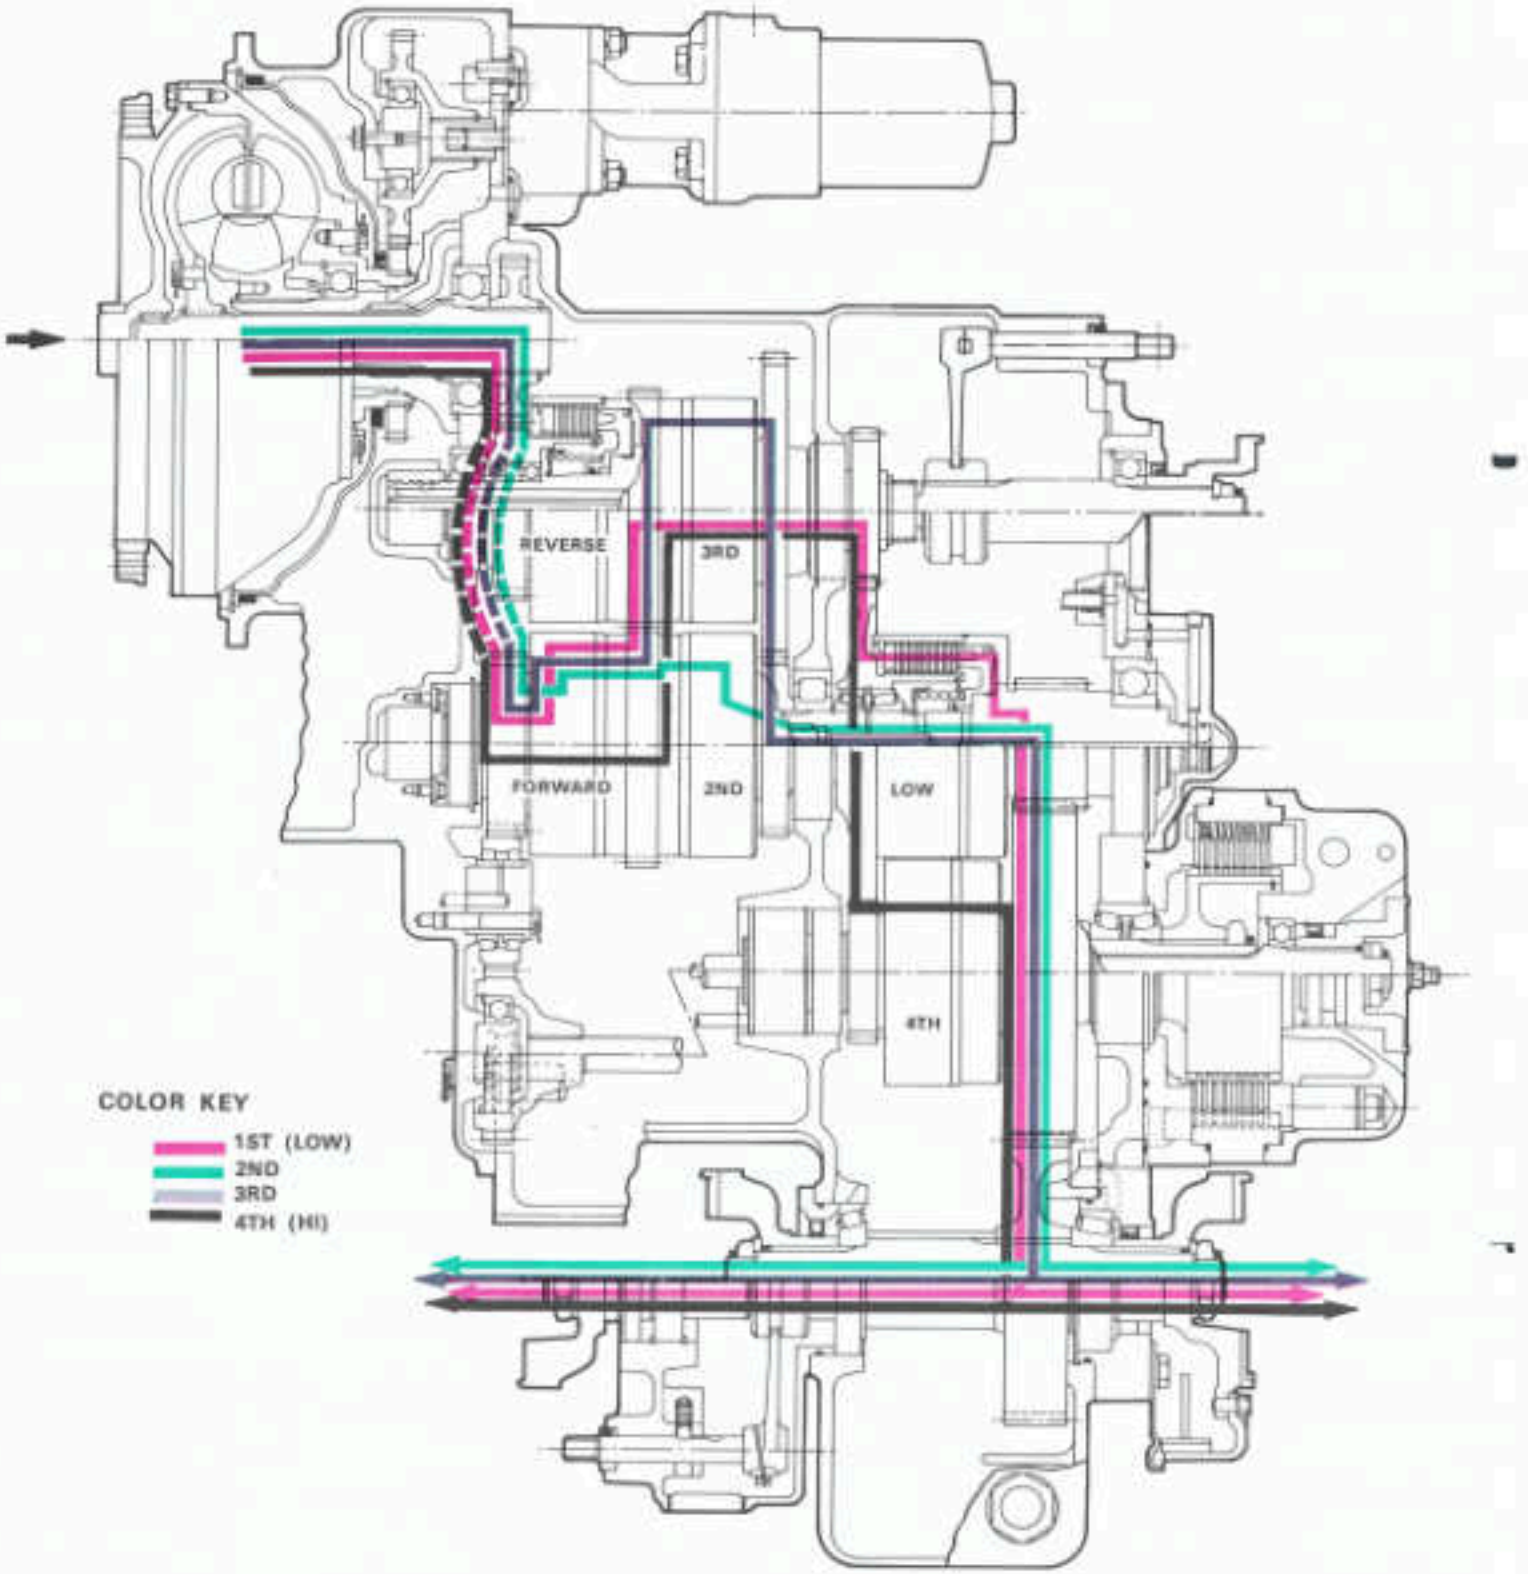


FIG. K 4 SPEED TRANSMISSION

MidWestTech | Case Clark 280001 R-HR, MHR, 4 Speed Long Drop Powershift Transmissio... Order the manual at mid-west-tech.com >

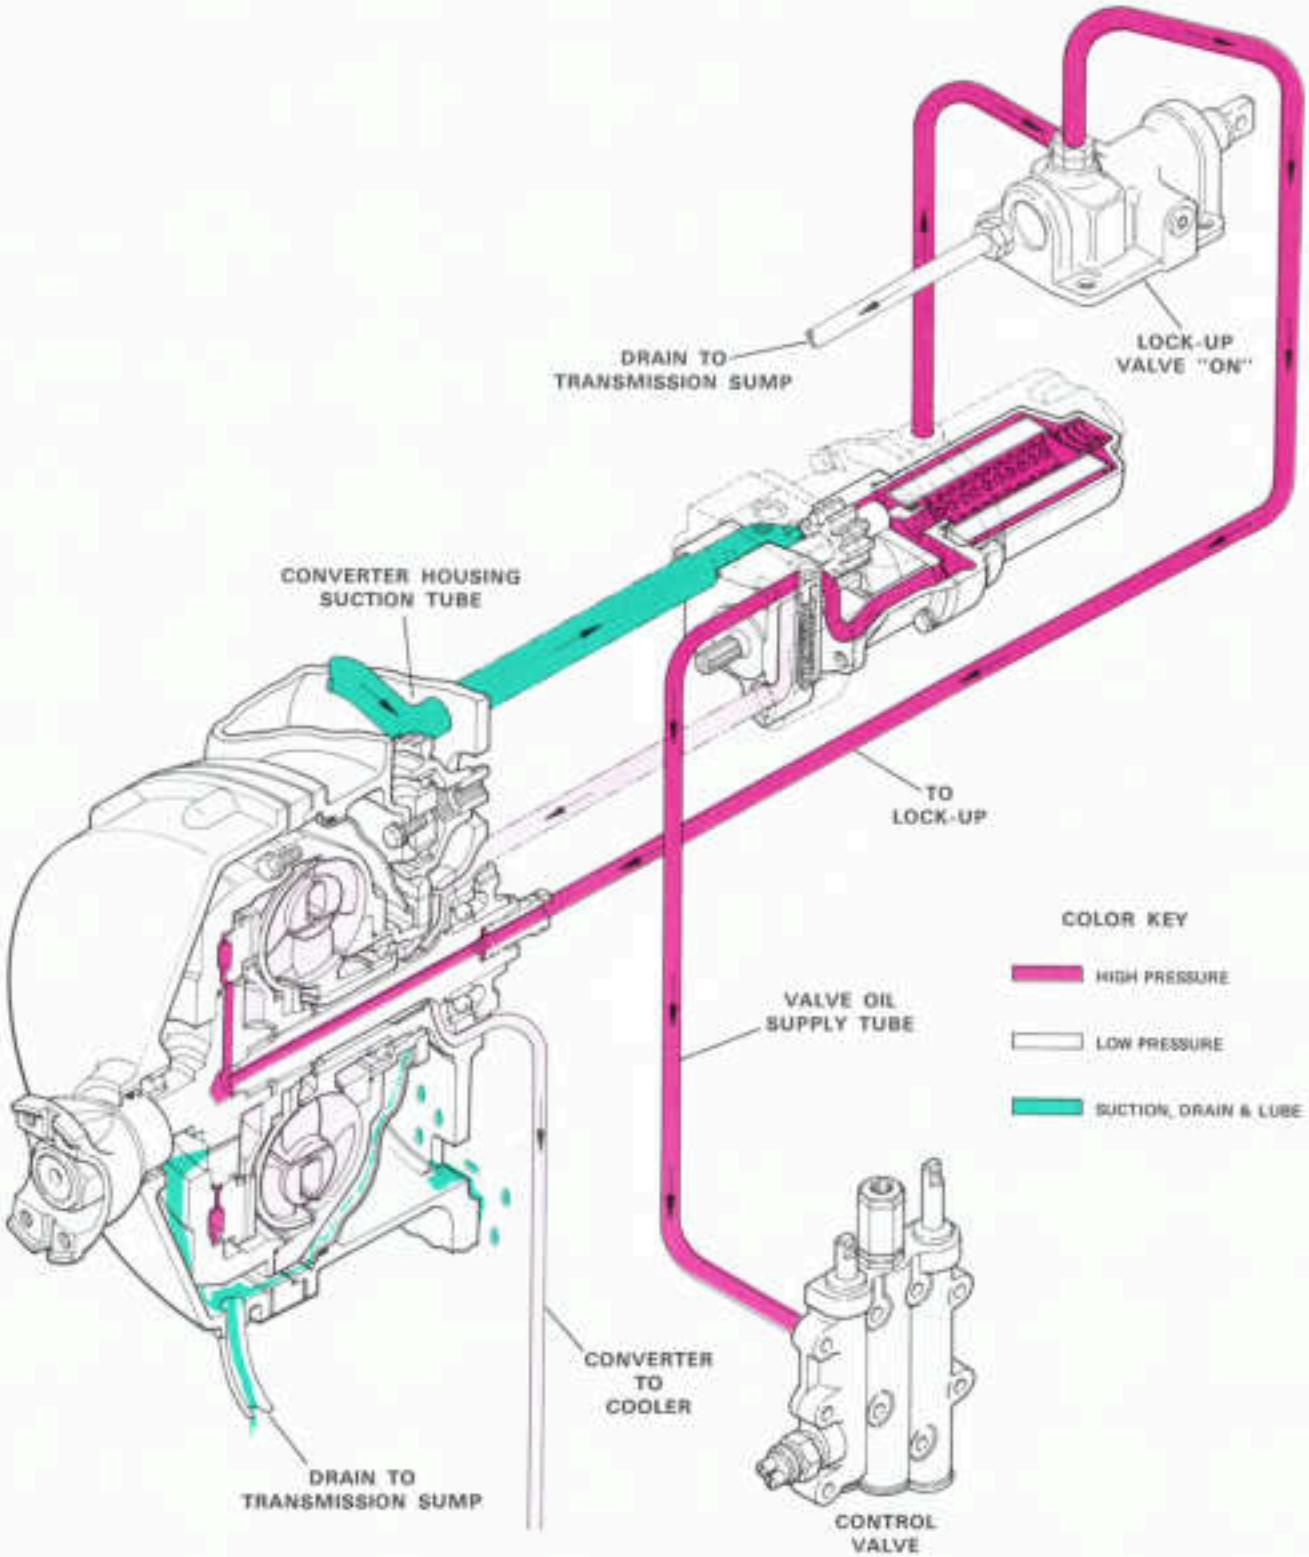

LMHR 28000 SERIES CONVERTER AND LOCK-UP OIL FLOW DIAGRAM

MidWestTech | Case Clark 280001 R-HR, MHR, 4 Speed Long Drop Powershift Transmissio... Order the manual at mid-west-tech.com >