
# OPERATOR'S MANUAL

## Excavator Crawlers EC160
## S/N 11811 - 11812

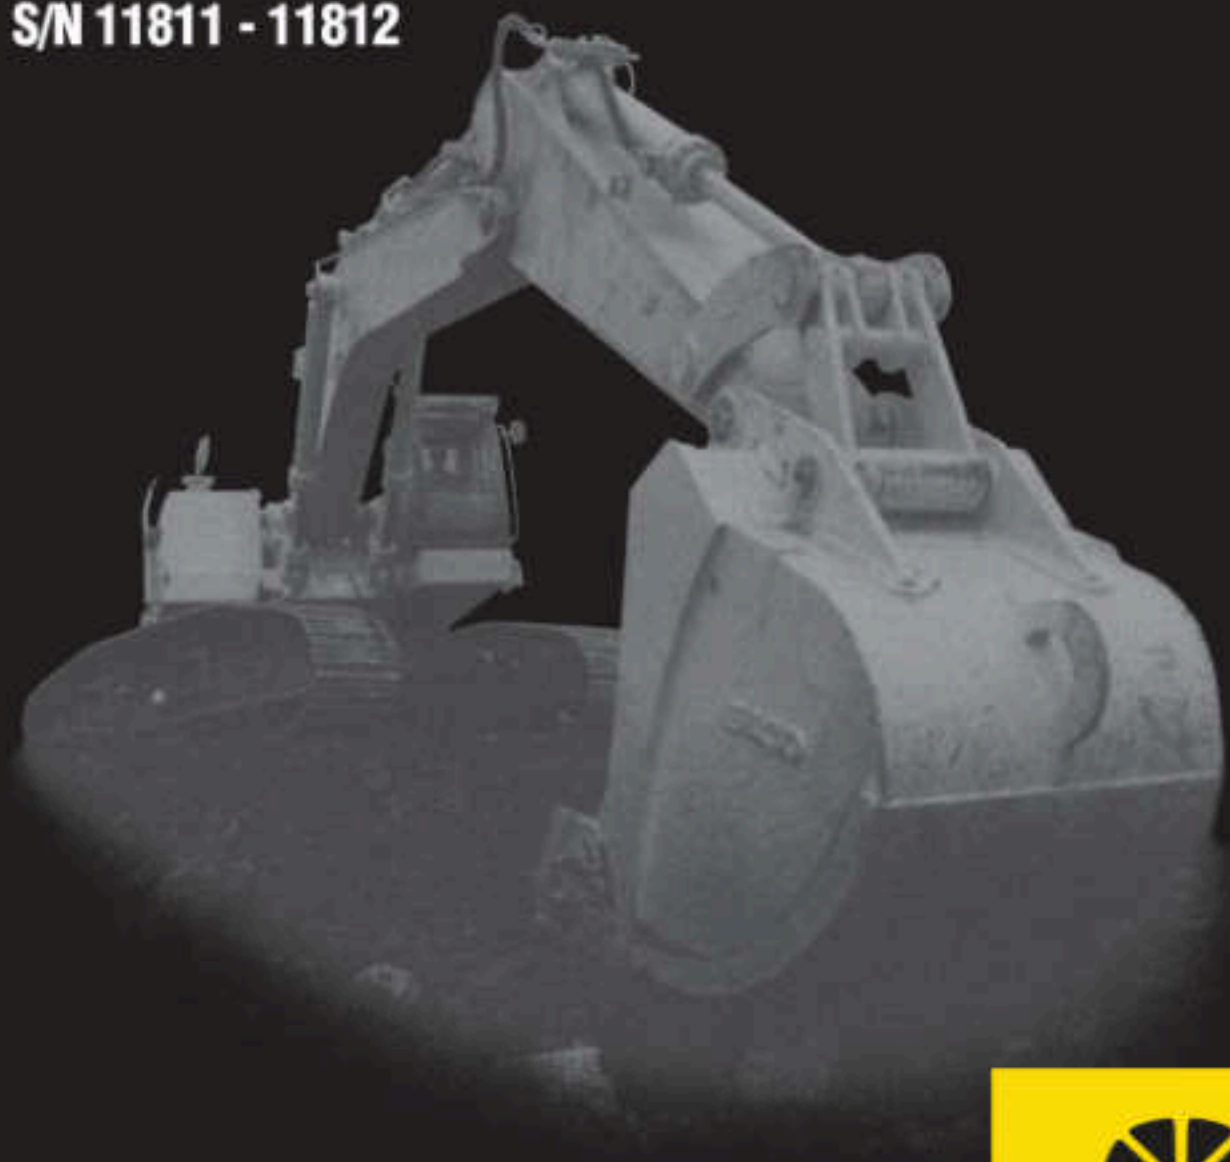

NEW HOLLAND
CONSTRUCTION

MidWestTech | New Holland EC160 Crawler Excavator Operator's Manual | Publication 731...

Order the manual at mid-west-tech.com >

## PART 1 - INTRODUCTION


**PREFACE** ..... 3

**Warnings and symbols** ..... 4

**DESIGNATED USE** ..... 4

**Organizational measures** ..... 5

**Selection and qualification of personnel - basic responsibilities** ..... 6

**Safety instructions governing specific operational phases**

Standard operation ..... 6

Special work in conjunction with utilization of the machine - maintenance and repairs during operation - disposal of parts and consumables ..... 7

**Warning of special dangers**

Electric energy ..... 8

Gas, dust, steam and smoke ..... 8

Hydraulic and pneumatic equipment ..... 9

Noise ..... 9

Oil, grease and other chemical substances ..... 9

**Transporting and towing - recommissioning** ..... 9

**California, Proposition 65 Warning** ..... 9

**SAFETY PRECAUTIONS FOR OPERATION** ..... 10

**General** ..... 10

**Before Operation** ..... 12


MidWestTech | New Holland EC160 Crawler Excavator Operator's Manual | Publication 731... Order the manual at mid-west-tech.com >

## PART 2 - OPERATION


**Operation - safety instructions** ..... 21

**DESCRIPTION OF THE MACHINE**

Machine layout ..... 25
Superstructure ..... 25
Undercarriage ..... 25
Working equipment ..... 25
Undercarriage ..... 25
Superstructure ..... 25
Hydraulic system ..... 25
Steering ..... 25
Crawler unit brake ..... 25
Electrical system ..... 25
Working equipment ..... 25

**SIGNS**

Warning and instruction signs ..... 27
Machine number ..... 27
Engine number ..... 27
Component numbers ..... 27

**DRIVERS'S CAB**

Climbing Up and Down ..... 28
Opening / Closing the Driver's Cab Door ..... 29
Opening the Door from Outside ..... 29
Opening the Door from Inside ..... 29
Closing the Door ..... 29
Adjustment of driver's seat ..... 30
Adjustment of seat suspension ..... 30
Fore and aft adjustment of seat ..... 30
Adjustment of seat position ..... 30
Adjustment of backrest inclination ..... 30
Adjustment of armrests ..... 30

**Adjusting the control console position**

Adjusting the Mirrors ..... 32
Opening and Closing the Windscreen ..... 32
Removing the Windscreen Lower Part ..... 33
Opening / closing side window ..... 33
Emergency exit ..... 33
Using the Sunshade ..... 34
Rolling out the Sunshade ..... 34
Rolling up the Sunshade ..... 34


MidWestTech | New Holland EC160 Crawler Excavator Operator's Manual | Publication 731... Order the manual at mid-west-tech.com >

Cab interior lamp - switching on and off ..... 35
Socket outlet in cab ..... 35

**MONITORING-, WARNING- AND CONTROL ELEMENTS**
Description of control panel ..... 36
Control panel operating instructions ..... 37

**Control panel** ..... 38

**Supplementary control panel** ..... 46

**Control elements (SAE-control)** ..... 48

**STARTING UP THE MACHINE** ..... 52

**Refuelling**
Refuelling, safety instructions ..... 52
Refuelling ..... 52

**Switching the electrical system on and off** ..... 53

**Electronic start inhibit function, entering the code**
Entering the code ..... 54

**Starting and stopping the engine**
Starting the engine ..... 55
Starting the engine with cold-starting aid ..... 56
Engine does not start ..... 57
Shutting off the engine ..... 57

**Ventilation and heating**
Ventilation ..... 58
Heating ..... 58
Adjusting the heating performance ..... 58
Defrosting the front and rear screens ..... 59
Switching the windscreen wiper / washer on and off ..... 59
To activate intermittent wiping ..... 59
To activate permanent wiping ..... 59
To de-activate the wiper ..... 59
To activate the wipe / wash function ..... 59

**DRIVING** ..... 60

**Driving - Safety instructions** ..... 60

**Seat belt**
Seat belt - safety instructions ..... 61

**Bringing the machine to basic position** ..... 62

MidWestTech | New Holland EC160 Crawler Excavator Operator's Manual | Publication 731... Order the manual at mid-west-tech.com >