
OPERATOR'S MANUAL

Excavator Crawlers EC130
S/N 12001 - UP

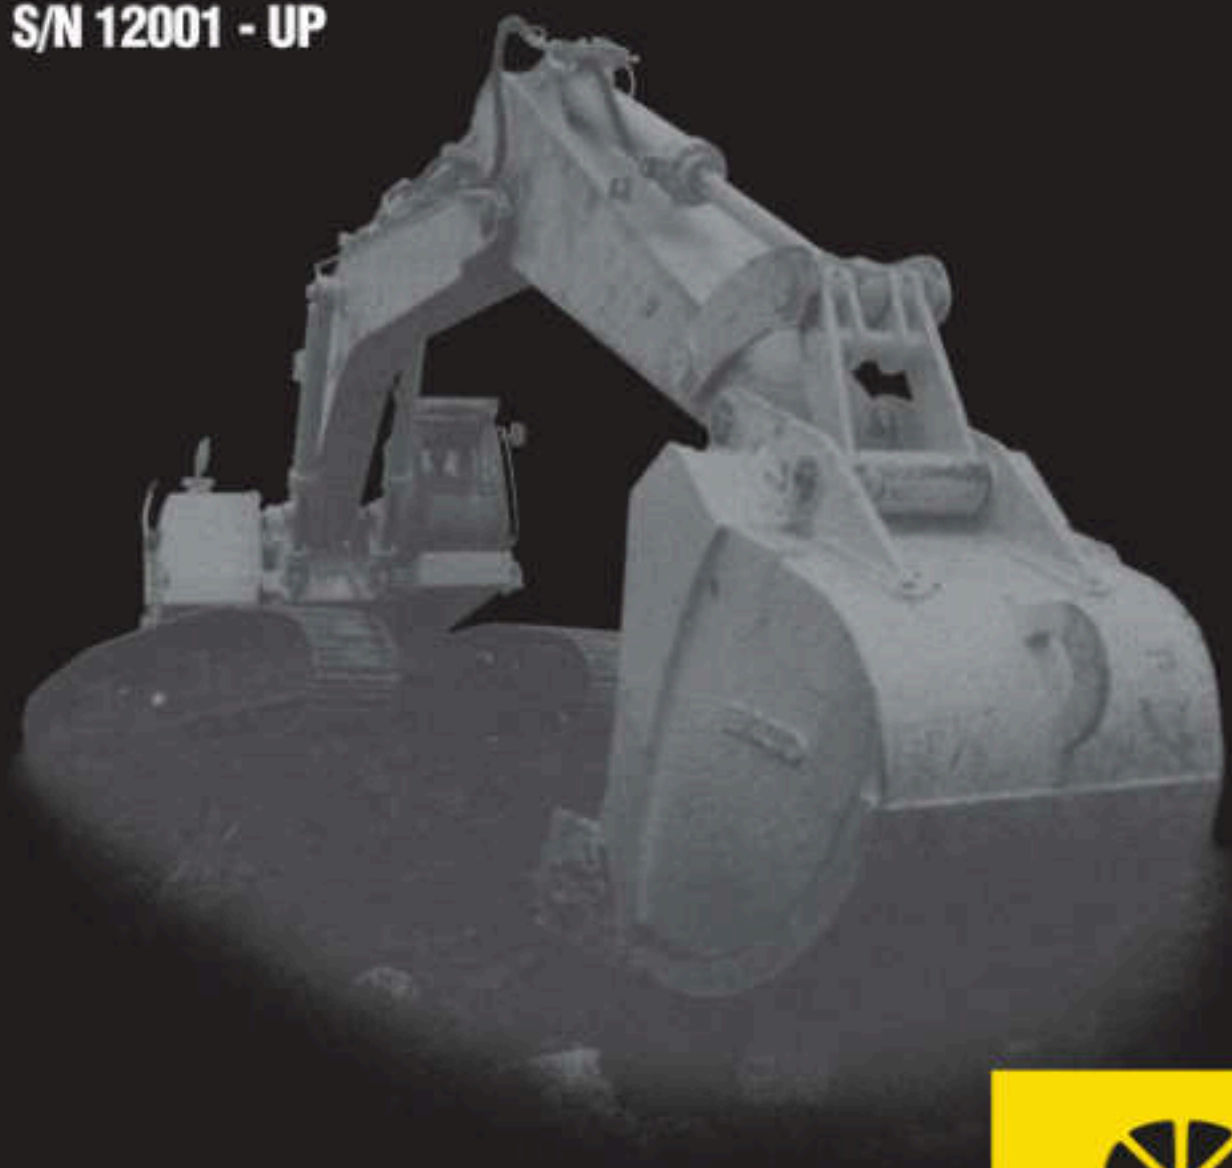

NEW HOLLAND
CONSTRUCTION

MidWestTech | New Holland EC130 Crawler Excavator Operator's Manual | Publication 731...

Order the manual at mid-west-tech.com >

Working with the hydraulic hammer, safety instructions 96

Working with a hydraulic hammer

Switching on the hydraulic hammer 97
Switching off the hydraulic hammer 97

SCRAP SHEARS 98

Working with scrap shears, safety instructions 98

Working with scrap shears

Switching on the scrap shears 99
Switching off the scrap shears 99

LIFTING-GEAR OPERATION 100

Lifting-gear operation - safety instructions 100

Loading hooks on backhoe buckets and couplers

Loading hook capacity 101
Excavator load capacity 101

Overload warning system

Function of overload warning system 102
Activating overload warning system 102
Testing the overload warning system 103
Deactivating overload warning system 103
Pipe-fracture safety system, function 104

OPTIONAL EQUIPMENT

Rotary beacon 105
Switch rotary beacon ON 105
Switch rotary beacon OFF 105
Switching on the floodlamps at the rear of the cab 106
Radio 107

Refuelling system

Refuelling with the refuelling system, safety instructions 108
Refuelling with the refuelling system 109

Driver's seat - adjusting the lumbar support

Adjusting the lumbar support 110

Driver's seat with pneumatic suspension and integrated heating

Adjusting the pneumatic suspension 111
Fore-and-aft adjustment 111
Adjusting the seat cushion 111
Adjusting the backrest 111

MidWestTech | New Holland EC130 Crawler Excavator Operator's Manual | Publication 731... Order the manual at mid-west-tech.com >

Adjusting the armrests 111
Adjusting the lumbar support 112
Switching on the seat heating 112
To switch on the seat heating: 112
To switch off the seat heating: 112

Air conditioning systems for excavators
Operating Instructions 113
Location of controls 113

Troubleshooting table for air conditioning systems 114

Causes of strongly diverging pressure measurements 117

Multi-position boom
Description of multi-position boom 118
Working with the multi-position boom 118
Lowering boom upper section 118
Raising boom upper section 118
Transporting the machine with multi-position boom 118

KEYBOARD, FURTHER FUNCTIONS
Service (key 16), function 119
Display (key 18), function 120
To indicate the engine revolutions 120
To indicate the time of day 120
Setting the time 121
Display, setting the contrast 122
Immobilizer, deactivate / activate 123

MidWestTech | New Holland EC130 Crawler Excavator Operator's Manual | Publication 731... Order the manual at mid-west-tech.com >

PART 3 - INSPECTION AND SERVICING

Inspection and servicing - safety instructions 127

Inspection and servicing plans - instructions

Plan V - Once before first commissioning 132
Plan N - After first commissioning 133
Plan T - every 10 OH or every working shift 134
Plan W - every 50 OH or weekly 134
Plan A - after every 250 OH or 6 months 135
Plan B - after every 500 OH 135
Plan C - after every 1000 OH 135
Plan D - after every 3000 OH 135

LUBRICATING CHART - GREASE

Lubricating chart - Grease 139

LUBRICATING CHART-GREASE

Lubricating chart - Grease 141
Filling quantities - grease 141
Joints and hinges 141

INSPECTION PLAN - OIL

Inspection plan - oil 143
Filling quantities for oil change 143
Other filling quantities 143

LUBRICANTS 144

Oils for internal combustion engines 144

Oils for hydraulic system, mineral 145

Oils for gearboxes 146

Greases for bearing points and swing rings 147

SERVICING

Draining hose for oil changes 148

ENGINE 149

Engine, safety instructions for inspection and servicing

Checking the engine oil level / topping up with oil 150
Checking the drive belts 151
Checking the coolant level 151

AIR-INTAKE SYSTEM

MidWestTech | New Holland EC130 Crawler Excavator Operator's Manual | Publication 731... Order the manual at mid-west-tech.com >