A TEREX BRAND

Parts Manual

Serial Number Range

Z-30/20N

Z-30/20N RJ

from SN 1932 to 15132

Part No. 74117

Rev L2

November 2018

MidWestTech | Terex Genie Z-30/20N, Z-30/20N RJ Articulated Boom Lift Parts Manual | Publication 74117

Order the manual at mid-west-tech.com >

Table of Contents

This manual is updated frequently. If you have a printed manual, you can keep it up to date by downloading new figures from the Genie website at www.genielift.com. For the most up-to-date parts information, visit the Parts Lookup System on the Genie website at www.genielift.com.

How to Read Your Serial Number....3
Parts Stocking List....7
How to Order Parts....8
Service Parts Fax Order Form....9

Electronic Version

Click on any page number to view the figure.

100 Decals
101.1 Decals (to SN 6289)....10
102.1 Decals with Words (from SN 6290 to 8332)....12
102.2 Decals with Words (from SN 8333)....14
103.1 Decals with Symbols (from SN 6290)....16

200 Chassis Components
201.1 Steer Axle Linkage, Wheels and Hubs (to SN 5840)..18
202.1 Steer Axle Linkage, Wheels and Hubs (from SN 5841)....20
203.1 Battery Charger (to SN 3446)....22
203.2 Battery Charger (from SN 3447)....24
204.1 Battery Packs (to SN 5840)....26
205.1 Battery Packs (from SN 5841)....28
206.1 Non-steer Axle....30
207.1 Electronic Control Module (to SN 3446)....34
208.1 Electronic Control Module (from SN 3447)....36
209.1 Power Cable Diagram (to SN 3446)....38
210.1 Power Cable Diagram (from SN 3447 to 10917)....40
210.2 Power Cable Diagram (from SN 10918)....42

300 Turntable Components
301.1 Turntable Rotator....44
302.1 Ground Controls Side (to SN 3446)....48
303.1 Ground Controls Side (from SN 3447 to 9825)....50
303.2 Ground Controls Side (from SN 9826)....52
304.1 Ground Control Panel....54
305.1 Power Unit Side (to SN 12039)....56
305.2 Power Unit Side (from SN 12040)....58
306.1 Turntable Covers (to SN 10538)....60
306.2 Turntable Covers (from SN 10539)....62
307.1 Wire Harness Diagram....64

400 Boom Components, Z-30/20N (Non-Rotating Jib)
401.1 Secondary Boom - View 1....66
402.1 Secondary Boom - View 2....68
403.1 Upper Pivot....70
404.1 Primary and Extension Booms....72
405.1 Cable Track....74
406.1 Jib Boom and Platform Rotator....76

500 Boom Components, Z-30/20NRJ (Rotating Jib)
501.1 Primary Boom Wear Pads (to SN 6456)....80
501.2 Primary Boom Wear Pads (from SN 6457)....82
502.1 Primary and Extension Booms....84
503.1 Rotating Jib Boom Assembly....86
504.1 Secondary Boom - View 1....88
505.1 Secondary Boom - View 2....90
506.1 Cable Track....92
507.1 Upper Pivot....94

600 Platform Components
601.1 Platform....96
602.1 Platform Controls - View 1 (to SN 4082)....100
603.1 Platform Controls - View 2 (to SN 4082)....102
604.1 Platform Controls - View 1 (from SN 4083 to 8354)..104
604.2 Platform Controls - View 1 (from SN 8355)....106
605.1 Platform Controls - View 2 (from SN 4083 to 11193).108
605.2 Platform Controls - View 2 (from SN 11194)....110
606.1 Joystick Controller (to SN 3446)....112
607.1 Joystick Controller (from SN 3447 to 14695)....114
607.2 Joystick Controller (from SN 14696)....116
608.1 Rotational Controller....118

700 Pumps and Manifolds
701.1 Steer/Brake Manifold (to SN 3446)....120
702.1 Function Manifold (to SN 3446)....122
703.1 Function Manifold (from SN 3447)....124
704.1 Jib Boom Manifolds....128

800 Hydraulic Hoses and Fittings
801.1 Drive Chassis....130
802.1 Turntable Components (to SN 3446)....132
803.1 Turntable Components (from SN 3447)....134
803.2 Turntable Components (from SN 12040)....136
804.1 Boom Components (to SN 11304)....138
804.2 Boom Components (from SN 11305)....140

900 Accessories
901.1 Flashing Beacon and Descent Alarm (to SN 10538).142

MidWestTech | Terex Genie Z-30/20N, Z-30/20N RJ Articulated Boom Lift Parts Manual | P... Order the manual at mid-west-tech.com >

901.2 Flashing Beacon and Descent Alarm (from SN 10539).....144
902.1 Air Line to Platform.....146
903.1 Platform Options - View 1.....148
904.1 Platform Options - View 2 (to SN 9308).....150
904.2 Platform Options - View 2 (from SN 9309).....152
905.1 Platform Overload (from SN 6291).....154
906.1 Inverter Option, 120V.....156
907.1 Drive Light Option.....158
909.1 Aircraft Protection (to SN 10885).....160
909.2 Aircraft Protection (from SN 10886).....162
910.1 Auxiliary Rail Assembly.....164
911.1 Hostile Environment, Primary Boom Wipers, Z-30N (from SN 12120).....166
912.1 Hostile Environment, Primary Boom Wipers, Z-30N RJ (from SN 12120).....168
913.1 Hostile Environment, Cylinder Bellows (from SN 12120).....170

Indices


Part Number Index.....172
Part Description Index.....177

Cross References


Fittings Cross Reference.....186

MidWestTech | Terex Genie Z-30/20N, Z-30/20N RJ Articulated Boom Lift Parts Manual | P... Order the manual at mid-west-tech.com >

901.2 Flashing Beacon and Descent Alarm (from SN 10539)

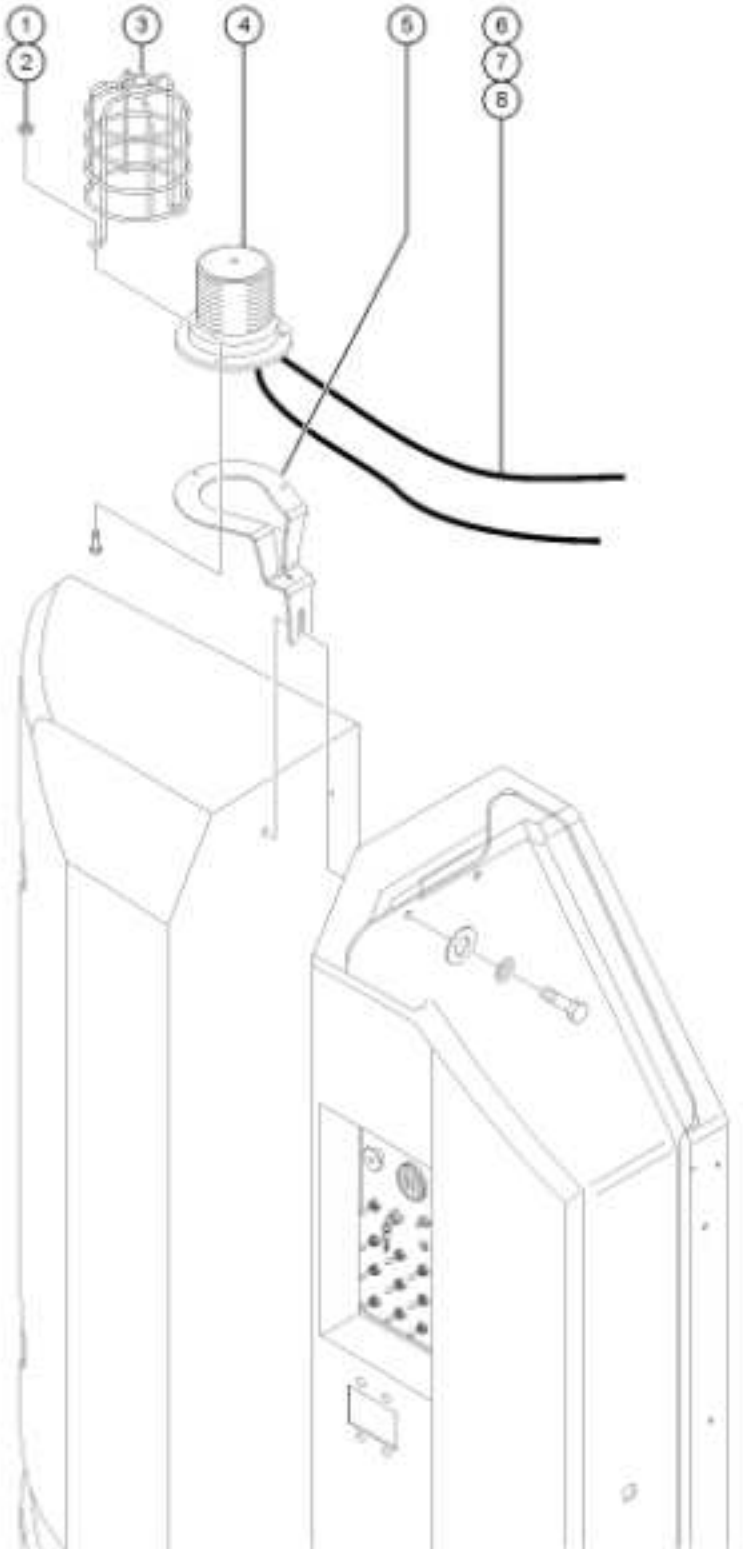


MidWestTech | Terex Genie Z-30/20N, Z-30/20N RJ Articulated Boom Lift Parts Manual | P... Order the manual at mid-west-tech.com >

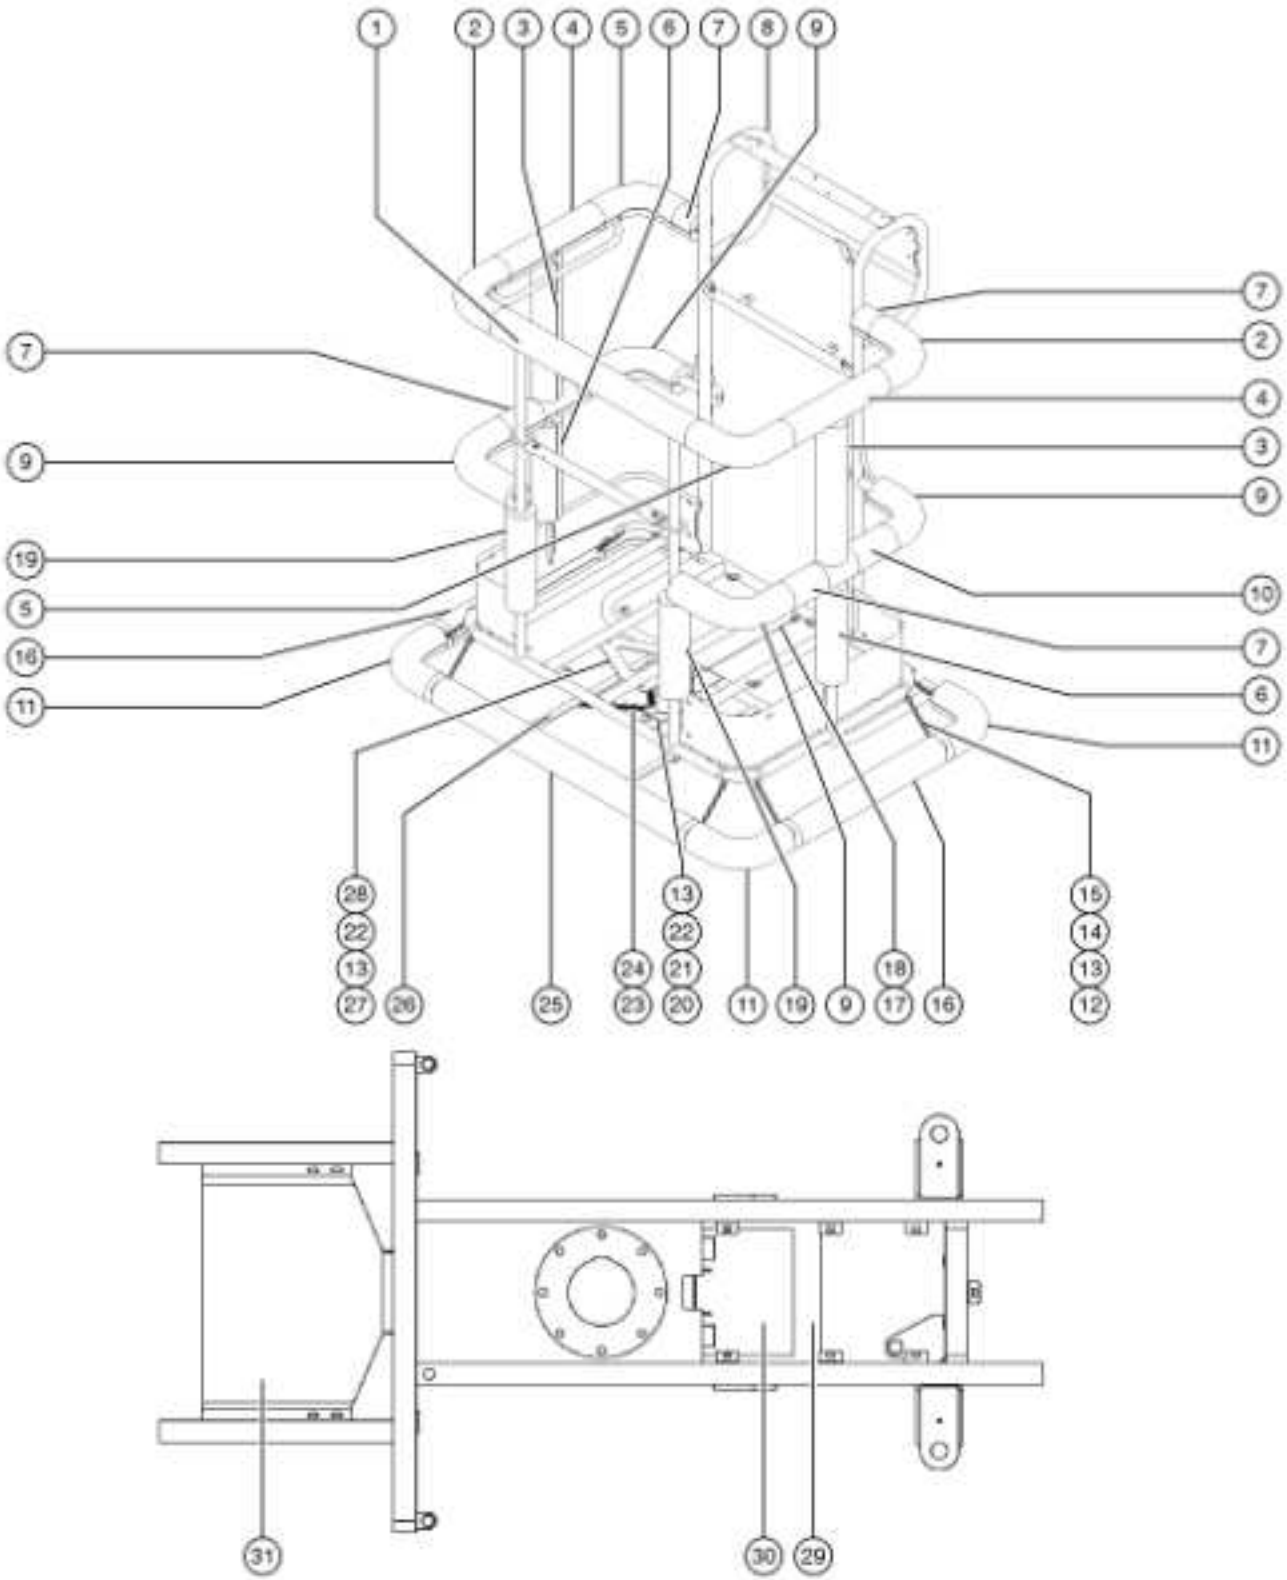

MidWestTech | Terex Genie Z-30/20N, Z-30/20N RJ Articulated Boom Lift Parts Manual | P... Order the manual at mid-west-tech.com >

913.1 Hostile Environment, Cylinder Bellows (from SN 12120)

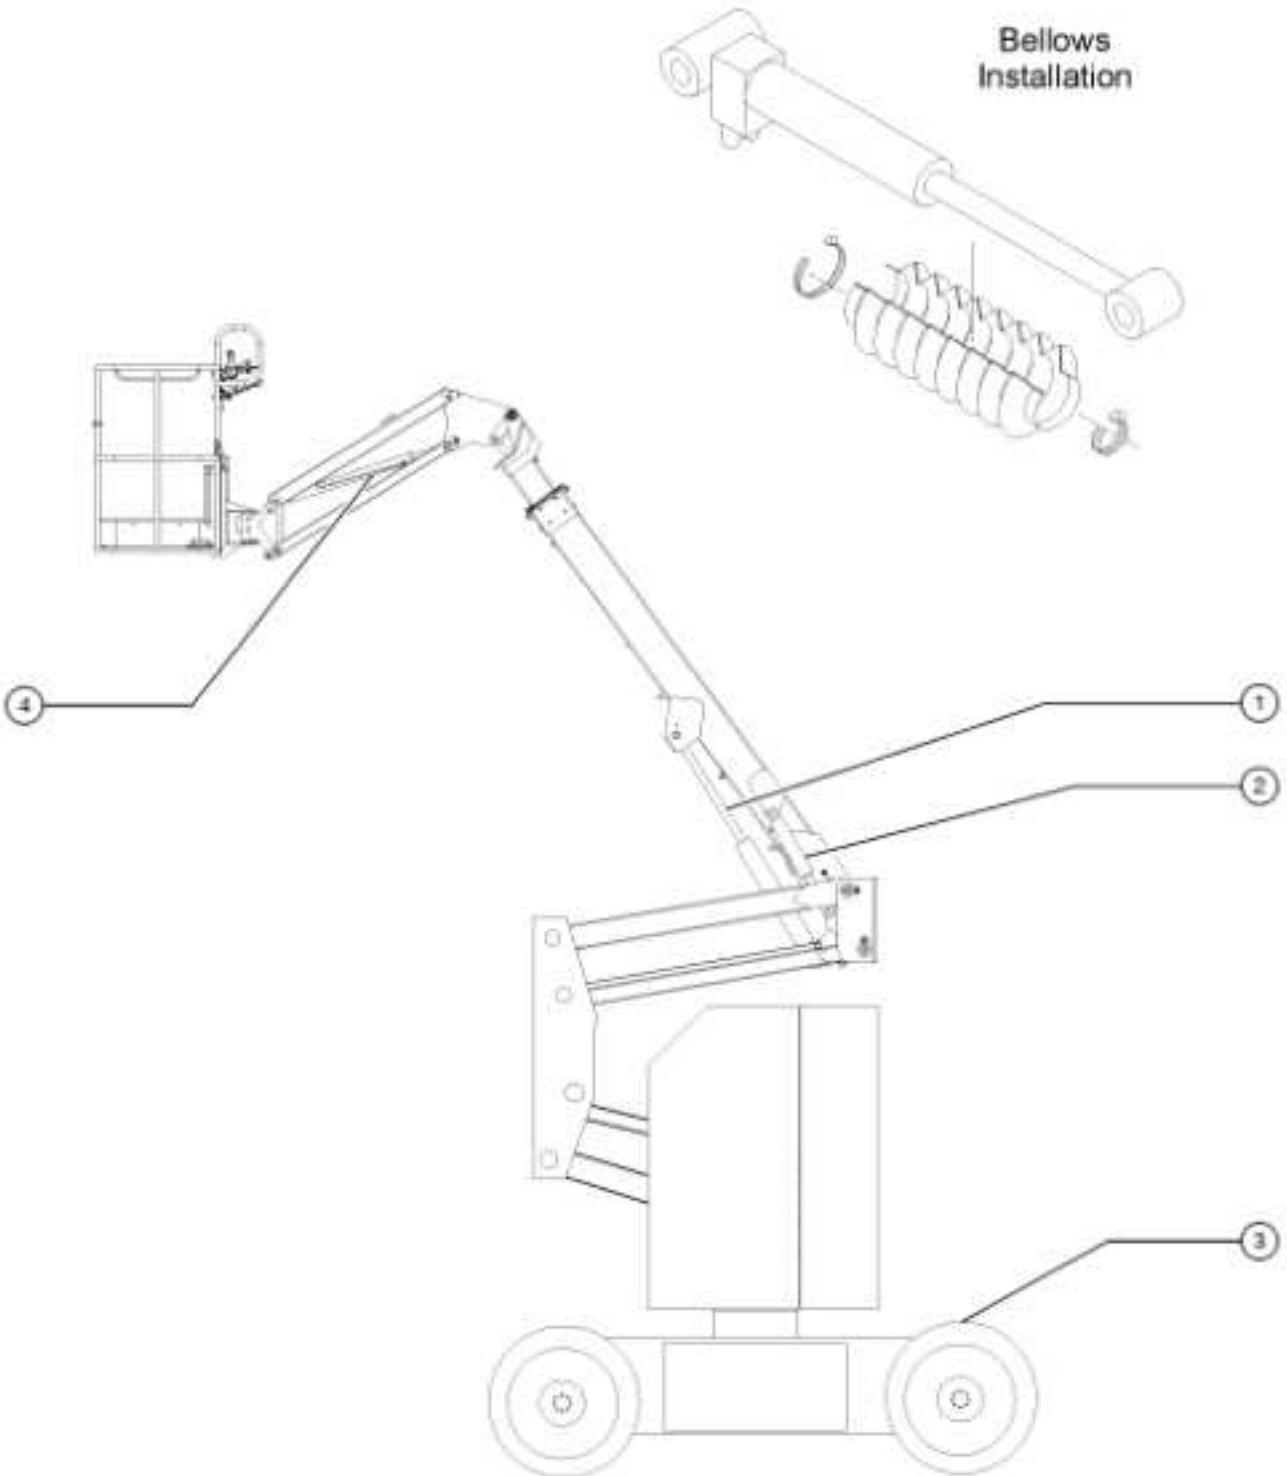

MidWestTech | Terex Genie Z-30/20N, Z-30/20N RJ Articulated Boom Lift Parts Manual | P... Order the manual at mid-west-tech.com >