9040
Excavator


Service Manual


7-44690

CASE
CONSTRUCTION

MidWestTech | Case 9040 Excavator Service Manual | Publication 7-44690

Order the manual at mid-west-tech.com >

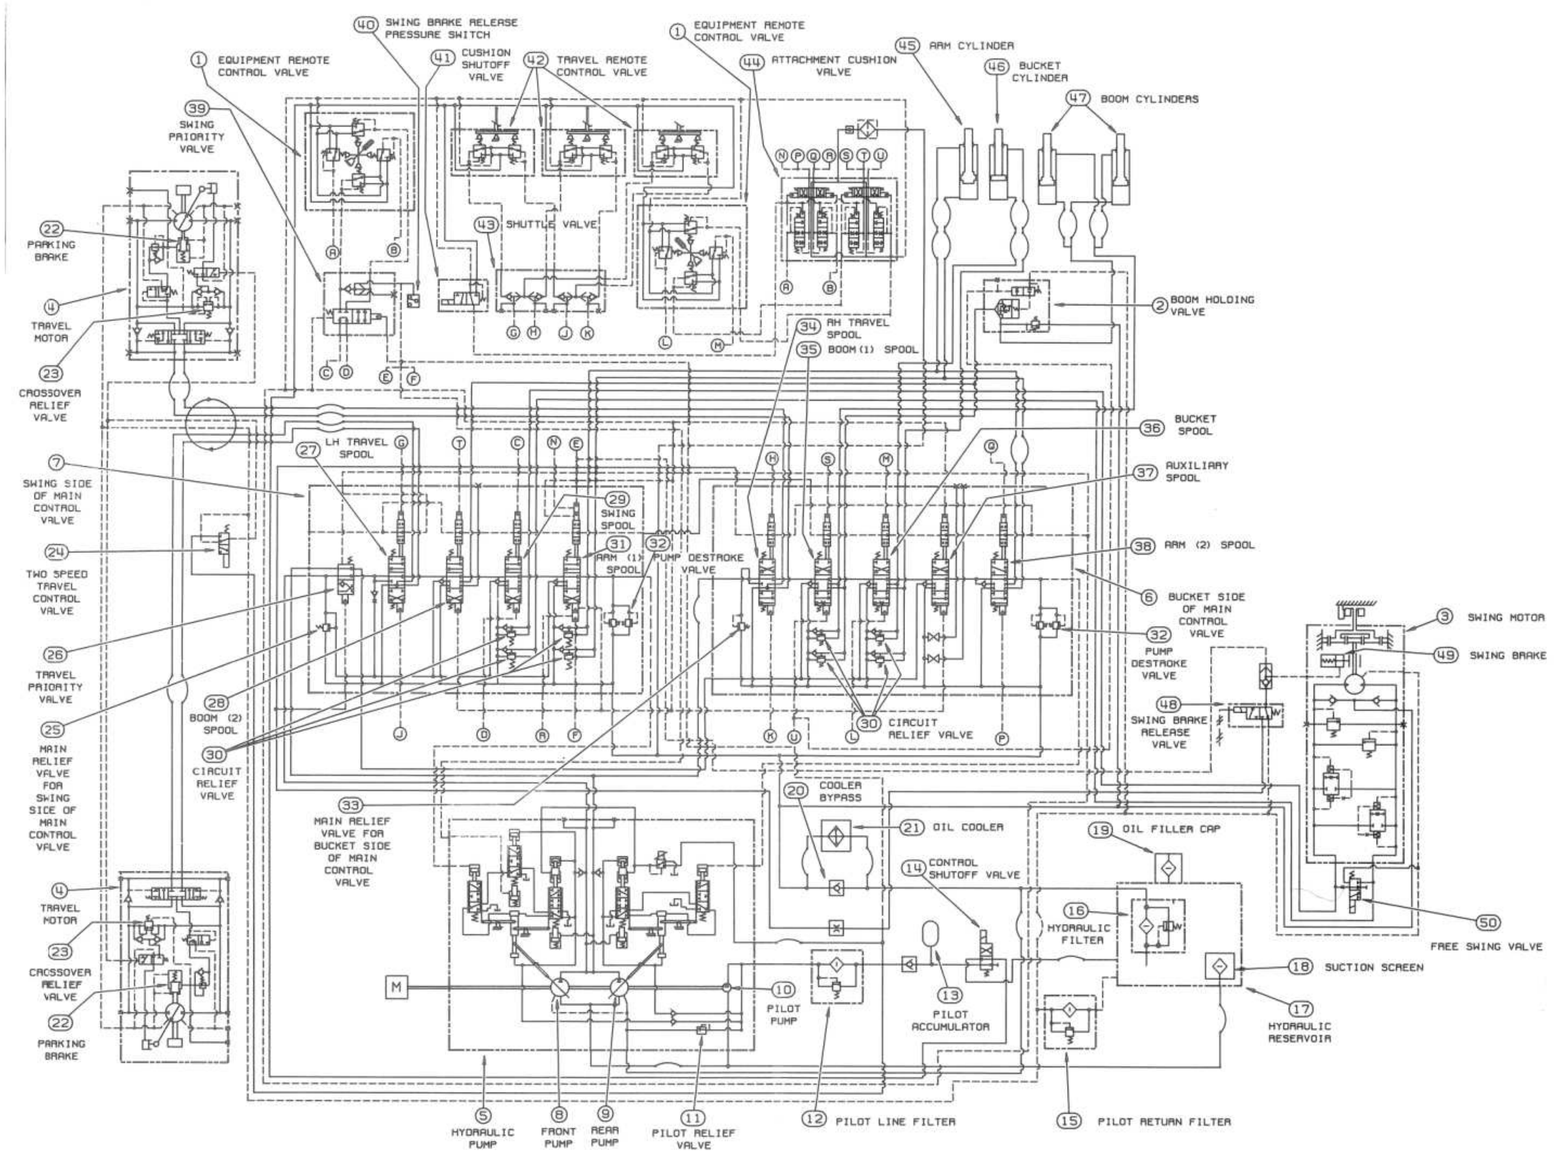

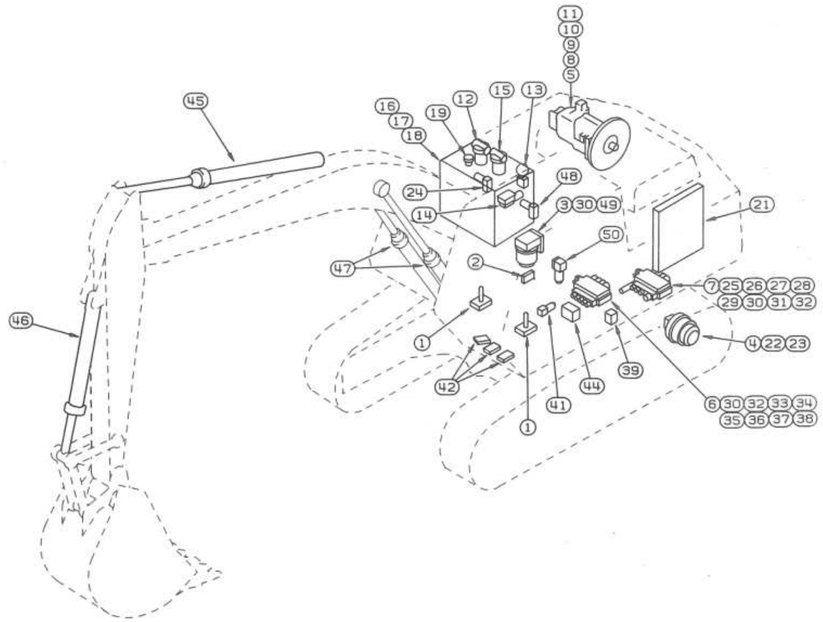

1. EQUIPMENT REMOTE CONTROL VALVE
2. BOOM HOLDING VALVE
3. SWING MOTOR
4. TRAVEL MOTOR
5. HYDRAULIC PUMP
6. BUCKET SIDE OF MAIN CONTROL VALVE
7. SWING SIDE OF MAIN CONTROL VALVE
8. FRONT PUMP
9. REAR PUMP
10. PILOT PUMP
11. PILOT RELIEF VALVE
12. PILOT LINE FILTER
13. PILOT ACCUMULATOR
14. CONTROL SHUTOFF VALVE
15. PILOT RETURN FILTER
16. HYDRAULIC FILTER
17. HYDRAULIC RESERVOIR
18. SUCTION SCREEN
19. OIL FILLER CAP
20. COOLER BYPASS
21. OIL COOLER
22. PARKING BRAKE
23. CROSSOVER RELIEF VALVE
24. TWO SPEED TRAVEL CONTROL VALVE
25. MAIN RELIEF VALVE FOR SWING SIDE OF MAIN CONTROL VALVE
26. TRAVEL PRIORITY VALVE
27. LH TRAVEL SPOOL
28. BOOM (2) SPOOL
29. SWING SPOOL
30. CIRCUIT RELIEF VALVE
31. ARM (1) SPOOL
32. PUMP DESTROKE VALVE
33. MAIN RELIEF VALVE FOR BUCKET SIDE OF MAIN CONTROL VALVE
34. RH TRAVEL SPOOL
35. BOOM (1) SPOOL
36. BUCKET SPOOL
37. AUXLIARY SPOOL
38. ARM (2) SPOOL
39. SWING PRIORITY VALVE
40. SWING BRAKE RELEASE PRESSURE SWITCH
41. CUSHION SHUTOFF VALVE
42. TRAVEL REMOTE CONTROL VALVE
44. ATTACHMENT CUSHION VALVE
45. ARM CYLINDER
46. BUCKET CYLINDER
47. BOOM CYLINDERS
48. SWING BRAKE RELEASE VALVE
49. SWING BRAKE
50. FREE SWING VALVE

9040 HYDRAULIC AND ELECTRICAL SCHEMATIC

Additional copies of this hydraulic and electrical schematic can be ordered through Technical Publications Distribution System. The part number is 7-46210.

89301413A

Order the manual at mid-west-tech.com >