9050B Excavator


Service Manual

7-64192

CASE

MidWestTech | Case 9050B Excavator Service Manual | Publication 7-44700

Order the manual at mid-west-tech.com >

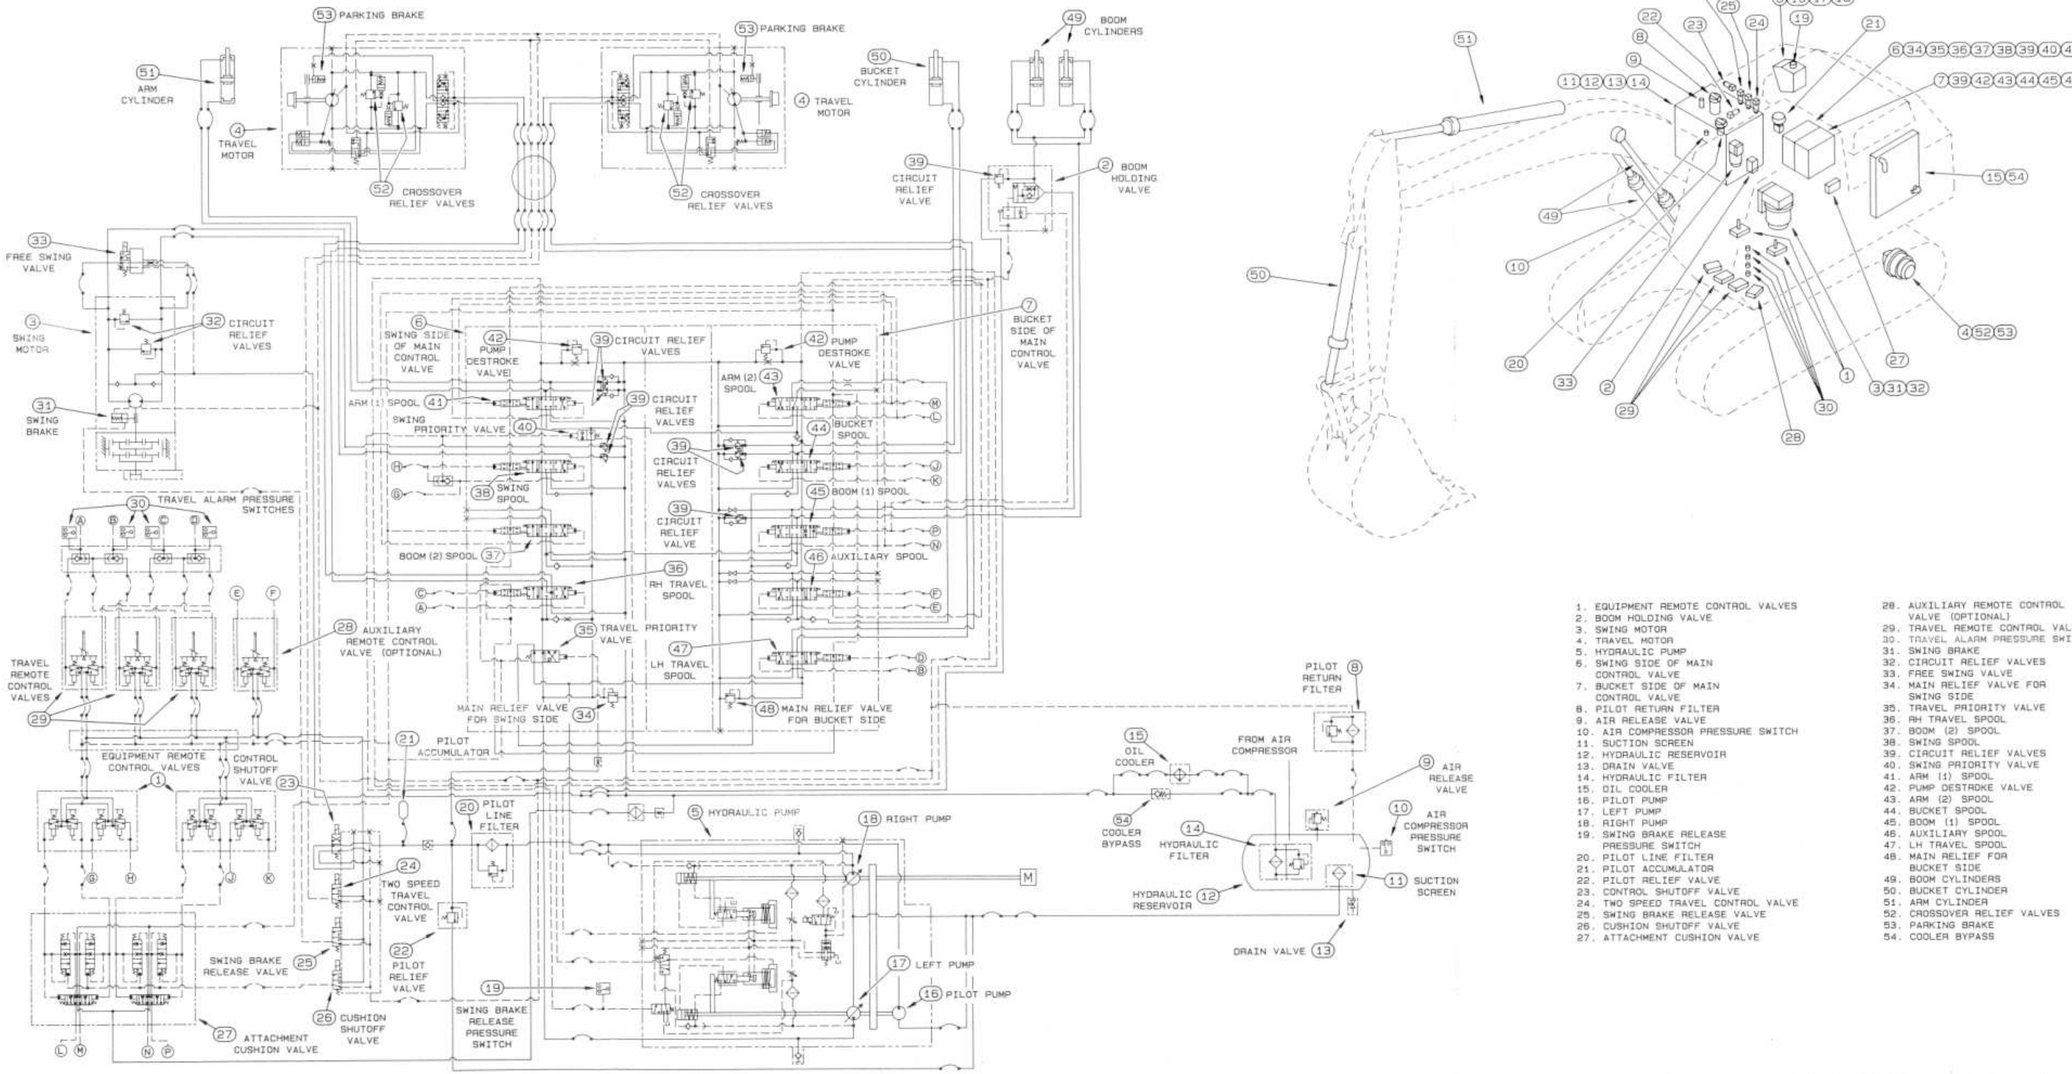

1. EQUIPMENT REMOTE CONTROL VALVES
2. BOOM HOLDING VALVE
3. SWING MOTOR
4. TRAVEL MOTOR
5. HYDRAULIC PUMP
6. SWING SIDE OF MAIN CONTROL VALVE
7. BUCKET SIDE OF MAIN CONTROL VALVE
8. PILOT RETURN FILTER
9. AIR RELEASE VALVE
10. AIR COMPRESSOR PRESSURE SWITCH
11. SUCTION SCREEN
12. HYDRAULIC RESERVOIR
13. DRAIN VALVE
14. HYDRAULIC FILTER
15. OIL COOLER
16. PILOT PUMP
17. LEFT PUMP
18. RIGHT PUMP
19. SWING BRAKE RELEASE PRESSURE SWITCH
20. PILOT LINE FILTER
21. PILOT ACCUMULATOR
22. PILOT RELIEF VALVE
23. CONTROL SHUTOFF VALVE
24. TWO SPEED TRAVEL CONTROL VALVE
25. SWING BRAKE RELEASE VALVE
26. CUSHION SHUTOFF VALVE
27. ATTACHMENT CUSHION VALVE
28. AUXILIARY REMOTE CONTROL VALVE (OPTIONAL)
29. TRAVEL REMOTE CONTROL VALVES
30. TRAVEL ALARM PRESSURE SWITCHES
31. SWING BRAKE
32. CIRCUIT RELIEF VALVES
33. FREE SWING VALVE
34. MAIN RELIEF VALVE FOR SWING SIDE
35. TRAVEL PRIORITY VALVE
36. RH TRAVEL SPOOL
37. BOOM (2) SPOOL
38. SWING SPOOL
39. CIRCUIT RELIEF VALVES
40. SWING PRIORITY VALVE
41. ARM (1) SPOOL
42. PUMP DESTROKE VALVE
43. ARM (2) SPOOL
44. BUCKET SPOOL
45. BOOM (1) SPOOL
46. AUXILIARY SPOOL
47. LH TRAVEL SPOOL
48. MAIN RELIEF VALVE FOR BUCKET SIDE
49. BOOM CYLINDERS
50. BUCKET CYLINDER
51. ARM CYLINDER
52. CROSSOVER RELIEF VALVES
53. PARKING BRAKE
54. COOLER BYPASS

9050 HYDRAULIC AND ELECTRICAL SCHEMATIC

Additional copies of this hydraulic and electrical schematic can be ordered through Technical Publications Distribution System. The part number is 7-45260.

8924268

Order the manual at mid-west-tech.com >