



Maintenance and Service Manual

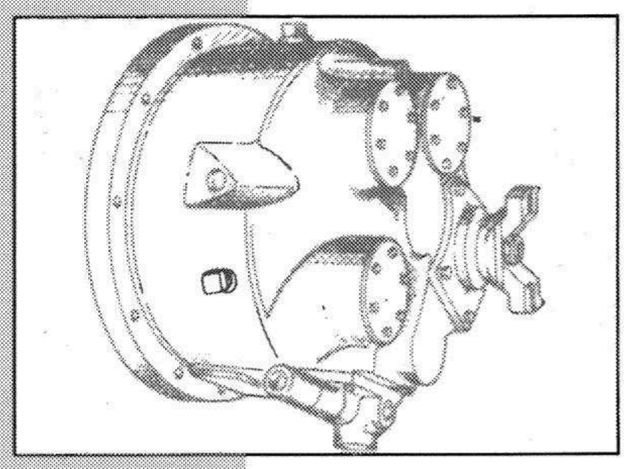

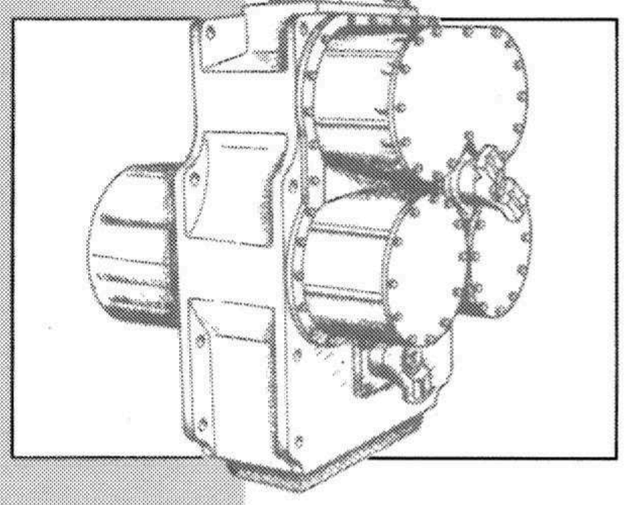

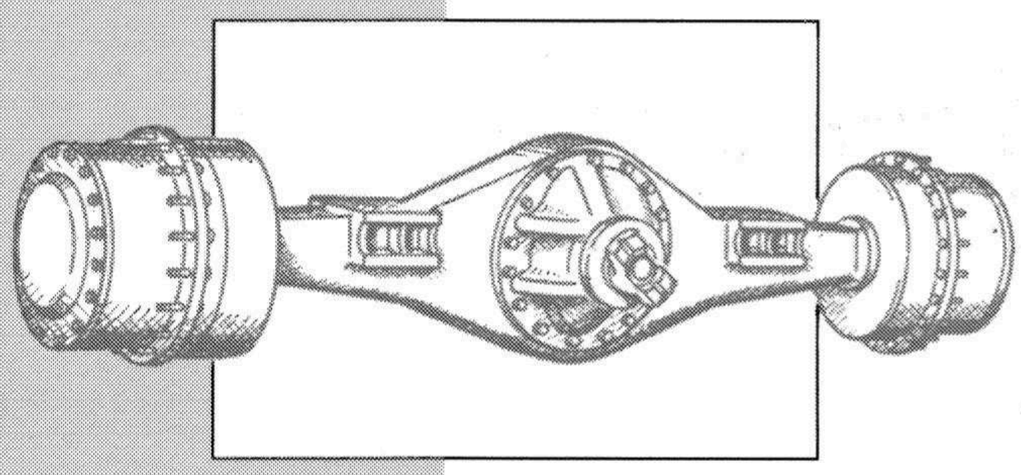

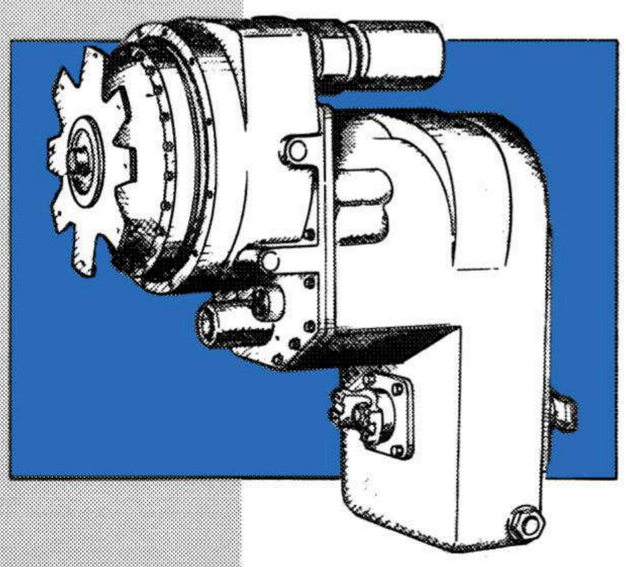

32000

Powershift Transmission

R & HR MODEL 4 SPEED LONG DROP

75128661

DANA

SPICER OFF-HIGHWAY PRODUCTS DIVISION

SM R-HR32-4LD 12-94

MidWestTech | New Holland Dana 32000 Powershift R, HR 4 Speed Long Drop Transmission Service Manual | Publication 75128661

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

HOW THE UNITS OPERATE

SECTIONAL VIEWS AND PARTS IDENTIFICATION

- Basic Design Silhouette ..... Fig. A
- Converter Group ..... Fig. B
- Converter and Transmission Case Group ..... Fig. C
- Reverse and 3rd and Forward and 2nd Clutch Group ..... Fig. D
- Low, 4th and Output Group ..... Fig. E
- Regulating Valve, Charging Pump and Filter Group ..... Fig. F
- Control Valve Assembly ..... Fig. G
- Axle Disconnect and Mechanical Parking Brake ..... Fig. H
- Assembly Instruction Illustration ..... Fig. I

DISASSEMBLY OF TRANSMISSION 1

CLEANING AND INSPECTION 17

REASSEMBLY OF TRANSMISSION 24

SERVICING MACHINE AFTER TRANSMISSION OVERHAUL 37

SPECIFICATION AND SERVICE DATA 38

LUBRICATION 38

TROUBLE SHOOTING GUIDE 39

RING GEAR INSTALLATION (16 SCREW) 44

TYPICAL FOUR SPEED POWER FLOW 47

EXTERNAL PLUMBING DIAGRAM 48-49

RING GEAR INSTALLATION (32 SCREW) 50

R-MODEL SECTION 52

CLUTCH AND GEAR ARRANGEMENT 59

SHIELDED BEARING INSTALLATION 59

CONVERTER DRIVE PLATE INSTALLATION 64

NOTE: Metric Dimensions Shown in Brackets [ ].

MidWestTech | New Holland Dana 32000 Powershift R, HR 4 Speed Long Drop Transmissio... Order the manual at mid-west-tech.com >