



Maintenance and Service Manual

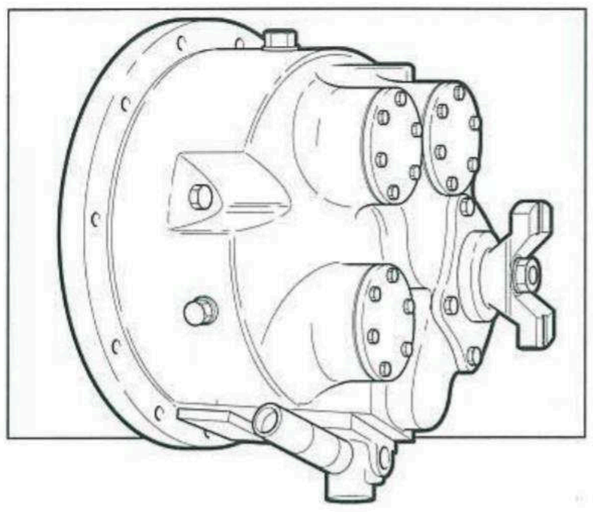

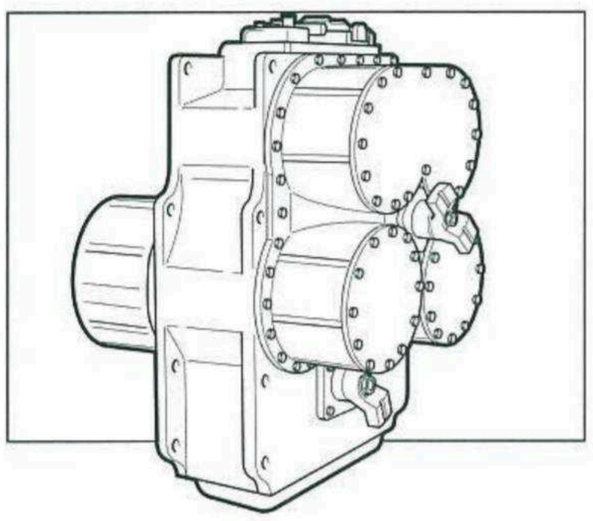

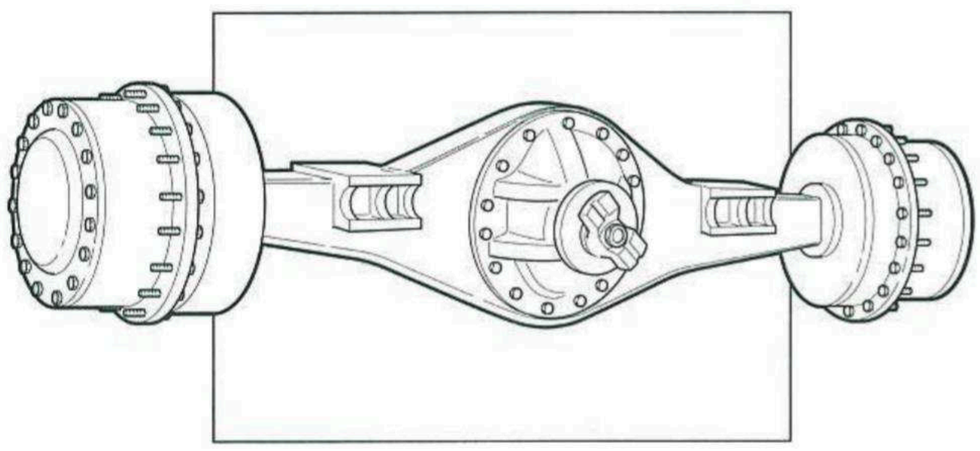

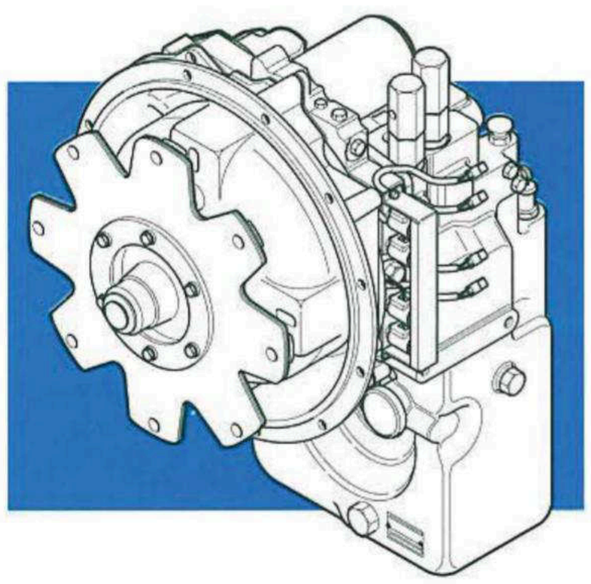

T12000 Powershift Transmission

3, 4 & 6 SPEED INTERMEDIATE DROP

SPICER® OFF HIGHWAY-PRODUCTS™

75128708

People Finding A Better Way®

814967

MidWestTech | New Holland Dana T12000 Powershift 3, 4 & 6 Speed Intermediate Drop Transmission Service Manual | Publication 75128708

Order the manual at mid-west-tech.com >

Table of Contents

1. SAFETY PRECAUTIONS

2. CLEANING, INSPECTION AND LEGEND SYMBOLS

2.1 CLEANING 2-1
2.1.1 Bearings 2-1
2.1.2 Housings 2-1
2.2 INSPECTION 2-1
2.2.1 Bearings 2-1
2.2.2 Oil Seals, Gaskets, Etc. 2-2
2.2.3 Gears and Shafts 2-2
2.2.4 Housing, Covers, etc. 2-2
2.3 LEGEND SYMBOLS 2-2

3. TECHNICAL SPECIFICATIONS

3.1 IDENTIFICATION OF THE UNIT 3-1
3.2 WEIGHT, DIMENSIONS, OIL CAPACITY 3-1
3.3 TIGHTENING TORQUES 3-2
3.3.1 Torque specifications for lubricated or plated screw threads 3-2
3.3.2 Pipe plug torque chart 3-3
3.3.3 Permanent metric plug torque chart 3-3
3.3.4 Coil and cartridge torque 3-3
3.4 PRESSURE AND TEMPERATURE SPECIFICATIONS 3-4
3.5 ELECTRICAL SPECIFICATIONS 3-5
3.6 HYDRAULIC COOLER AND FILTER LINE SPECIFICATIONS 3-5

4. MAINTENANCE

4.1 OIL SPECIFICATION 4-1
4.1.1 Recommended lubricants 4-1
4.2 MAINTENANCE INTERVALS 4-3
4.2.1 Daily 4-3
4.2.2 Normal drain period 4-3
4.3 SERVICING MACHINE AFTER COMPONENTS OVERHAUL 4-4
4.4 INSTRUCTIONS FOR LINING REPLACEMENT AND ADJUSTMENT OF PARKING BRAKE ASSEMBLY 4-5

5. INSTALLATION DETAILS

5.1 CONVERTER DRIVE COUPLING 5-1
5.2 TRANSMISSION TO ENGINE INSTALLATION PROCEDURE 5-2
5.3 EXTERNAL PLUMBING 5-3
5.3.1 Optional remote filter 5-3
5.3.2 Cooler & filter lines specifications 5-3
5.4 SPEED SENSOR INSTALLATION 5-4

MidWestTech | New Holland Dana T12000 Powershift 3, 4 & 6 Speed Intermediate Drop Tra... Order the manual at mid-west-tech.com >

6. OPERATION OF THE TRANSMISSION

6.1 THE TRANSMISSION ASSEMBLY 6-1
6.1.1 The converter, pump drive section and pressure regulating valve 6-2
6.1.2 The input shaft and directional clutches 6-3
6.1.3 The range clutches 6-4
6.1.4 The output section 6-4
6.1.5 The transmission controls (refer to hydraulic diagram) 6-5
6.2 ELECTRIC SOLENOID CONTROLS 6-6
6.2.1 3-Speed transmission 6-6
6.2.2 4-speed transmission 6-6
6.2.2.1 Standard 4-speed transmission 6-6
6.2.2.2 Alternative 4-speed transmission, ... 6-7
6.2.3 6-Speed transmission 6-7
6.3 POWERFLOWS, ACTIVATED SOLENOIDS AND HYDRAULIC CIRCUIT 6-8
6.3.1 3-Speed transmission 6-8
6.3.1.1 Neutral and 3rd clutch engaged 6-8
6.3.1.2 Forward 1st speed 6-10
6.3.1.3 Forward 2nd speed 6-12
6.3.1.4 Forward 3rd speed 6-14
6.3.1.5 Reverse 1st speed 6-16
6.3.2 4-Speed transmission 6-18
6.3.2.1 Standard 4-speed transmission 6-18
6.3.2.1.1 Neutral and 3rd clutch engaged 6-18
6.3.2.1.2 Forward 1st speed 6-19
6.3.2.1.3 Forward 2nd speed 6-21
6.3.2.1.4 Forward 3rd speed 6-24
6.3.2.1.5 Forward 4th speed 6-26
6.3.2.1.6 Reverse 1st speed 6-28
6.3.2.2 Alternative 4-speed transmission 6-30
6.3.2.2.1 Neutral and 3rd clutch engaged 6-30
6.3.2.2.2 Forward 1st speed 6-32
6.3.2.2.3 Forward 2nd speed 6-34
6.3.2.2.4 Forward 3rd speed 6-36
6.3.2.2.5 Forward 4th speed 6-38
6.3.2.2.6 Reverse 1st speed 6-40
6.3.3 6-Speed transmission 6-42
6.3.3. 1Neutral and 3rd clutch engaged 6-42
6.3.3.2 Forward 1st speed 6-44
6.3.3.3 Forward 2nd speed 6-46
6.3.3.5 Forward 4th speed 6-50
6.3.3.6 Forward 5th speed 6-52
6.3.3.7 Forward 6th speed 6-54
6.3.3.8 Reverse 1st speed 6-56
6.4 GEAR AND CLUTCH LAY-OUT (3-SPEED) 6-58
6.4 GEAR AND CLUTCH LAY-OUT (4-SPEED AND 6-SPEED) 6-59

7. TROUBLESHOOTING GUIDE FOR THE T12000 TRANSMISSION

7.1 T12000 TRANSMISSION 7-1
7.2 TROUBLESHOOTING PROCEDURES 7-1
7.2.1 Stall Test 7-1
7.2.2 Transmission pressure checks 7-2
7.2.3 Mechanical and electrical checks 7-2
7.2.4 Hydraulic checks 7-2

MidWestTech | New Holland Dana T12000 Powershift 3, 4 & 6 Speed Intermediate Drop Tra... Order the manual at mid-west-tech.com >

7.3 TROUBLESHOOTING GUIDE 7-3
7.3.1 Low clutch pressure 7-3
7.3.2 Low charging pump output 7-3
7.3.3 Overheating 7-3
7.3.4 Noisy converter 7-3
7.3.5 Lack of power 7-3
7.4 CHECK POINTS 7-4
7.5 ELECTRICAL WIRING 7-7
7.5.1 3-Speed transmission 7-7
7.5.2 Standard 4-Speed transmission 7-8
7.5.3 Alternative 4-Speed transmission 7-9
7.5.4 6-Speed transmission 7-10
7.6 SPEED SENSOR - STATIC STANDALONE TEST 7-11

8. SECTIONAL VIEWS AND PARTS IDENTIFICATION

GROUP - CONVERTER HOUSING 8-2
GROUP - TRANSMISSION CASE AND PLATE 8-4
GROUP - TORQUE CONVERTER 8-6
GROUP - PUMP DRIVE 8-8
GROUP - CHARGING PUMP 8-10
GROUP - REVERSE IDLER 8-12
GROUP - FORWARD AND REVERSE SHAFT 8-14
GROUP - 3RD SHAFT (FOR 3-SPEED TRANSMISSION ONLY) 8-16
GROUP - HIGH (4TH) AND 3RD SHAFT 8-18
GROUP - 1ST AND 2ND SHAFT 8-20
GROUP - OUTPUT SHAFT (REAR ONLY) 8-22
GROUP - OUTPUT SHAFT (FRONT ONLY) 8-24
GROUP - OUTPUT SHAFT (FRONT & REAR) 8-26
GROUP - DISC BRAKE 8-28
GROUP - CALIPER ASSEMBLY 8-30
GROUP - ELECTRIC CONTROL 8-32
GROUP - DRIVE PLATE 8-34

9. ASSEMBLY INSTRUCTIONS

10. DISASSEMBLY AND REASSEMBLY OF THE T12000 TRANSMISSION

11. OPTIONS

11.1 ELECTRIC CONTROL-SINGLE MODULATION HYDRAULIC ACTUATED INCHING 11-1
11.1.1 Sectional views and parts identification 11-1
11.1.2 Single modulation and hydraulic inching removal 11-6
11.1.3 Disassembly single modulator assembly 11-8
11.1.4 Reassembly single modulator assembly 11-10
11.1.5 Disassembly hydraulic inching actuator 11-12
11.1.6 Reassembly hydraulic inching actuator 11-14
11.1.7 Single modulation and hydraulic inching installation 11-16
11.2 MT SECTION 11-19
11.2.1 Sectional views and parts identification 11-19
11.2.2 Assembly instructions 11-21

MidWestTech | New Holland Dana T12000 Powershift 3, 4 & 6 Speed Intermediate Drop Tra... Order the manual at mid-west-tech.com >