OPERATOR'S MANUAL

Crawler Loader CL145

NEW HOLLAND
CONSTRUCTION


MidWestTech | New Holland CL145 Crawler Loader Operator's Manual | Publication 75131...

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

TITLE	PAGE
Safety rules	I-VII
Foreword	VIII
Identification data	2
SPECIFICATIONS	3
Preliminary instructions and break-in period period	6
OPERATION	7
Controls and instruments	8
Operating instructions	15
General notes	15
Fuel tank	15
Operator seat adjustment	16
Starting the engine	16
Idling	17
Working of the engine at minimum speed	17
Starting the engine at low outdoor temperatures (on request)	17
Starting the machine	18
Stopping the machine	18
Stopping the engine	18
Bucket control	19
Control of loader booms at maximum height	19
Cab tilting	20
Machine transport	21
Machine towing	21
Cold weather precautions	22
Storage of machine	22
MACHINE OPERATION	23
CAB	27
MAINTENANCE	31
Visual inspection	32
Maintenance operations	33
Service guide	34
Every 10 hours work	35
Every 100 hours work	35
Every 250 hours work	38
Every 500 hours work	42
Every 1000 hours work	46
Every 2000 hours work	49
When necessary	51
Periodic services	55
ELECTRICAL SYSTEM	57
Wiring diagram	59
FLUID CHARACTERISTICS	60
FLUID CAPACITIES	61

MidWestTech | New Holland CL145 Crawler Loader Operator's Manual | Publication 75131... Order the manual at mid-west-tech.com >

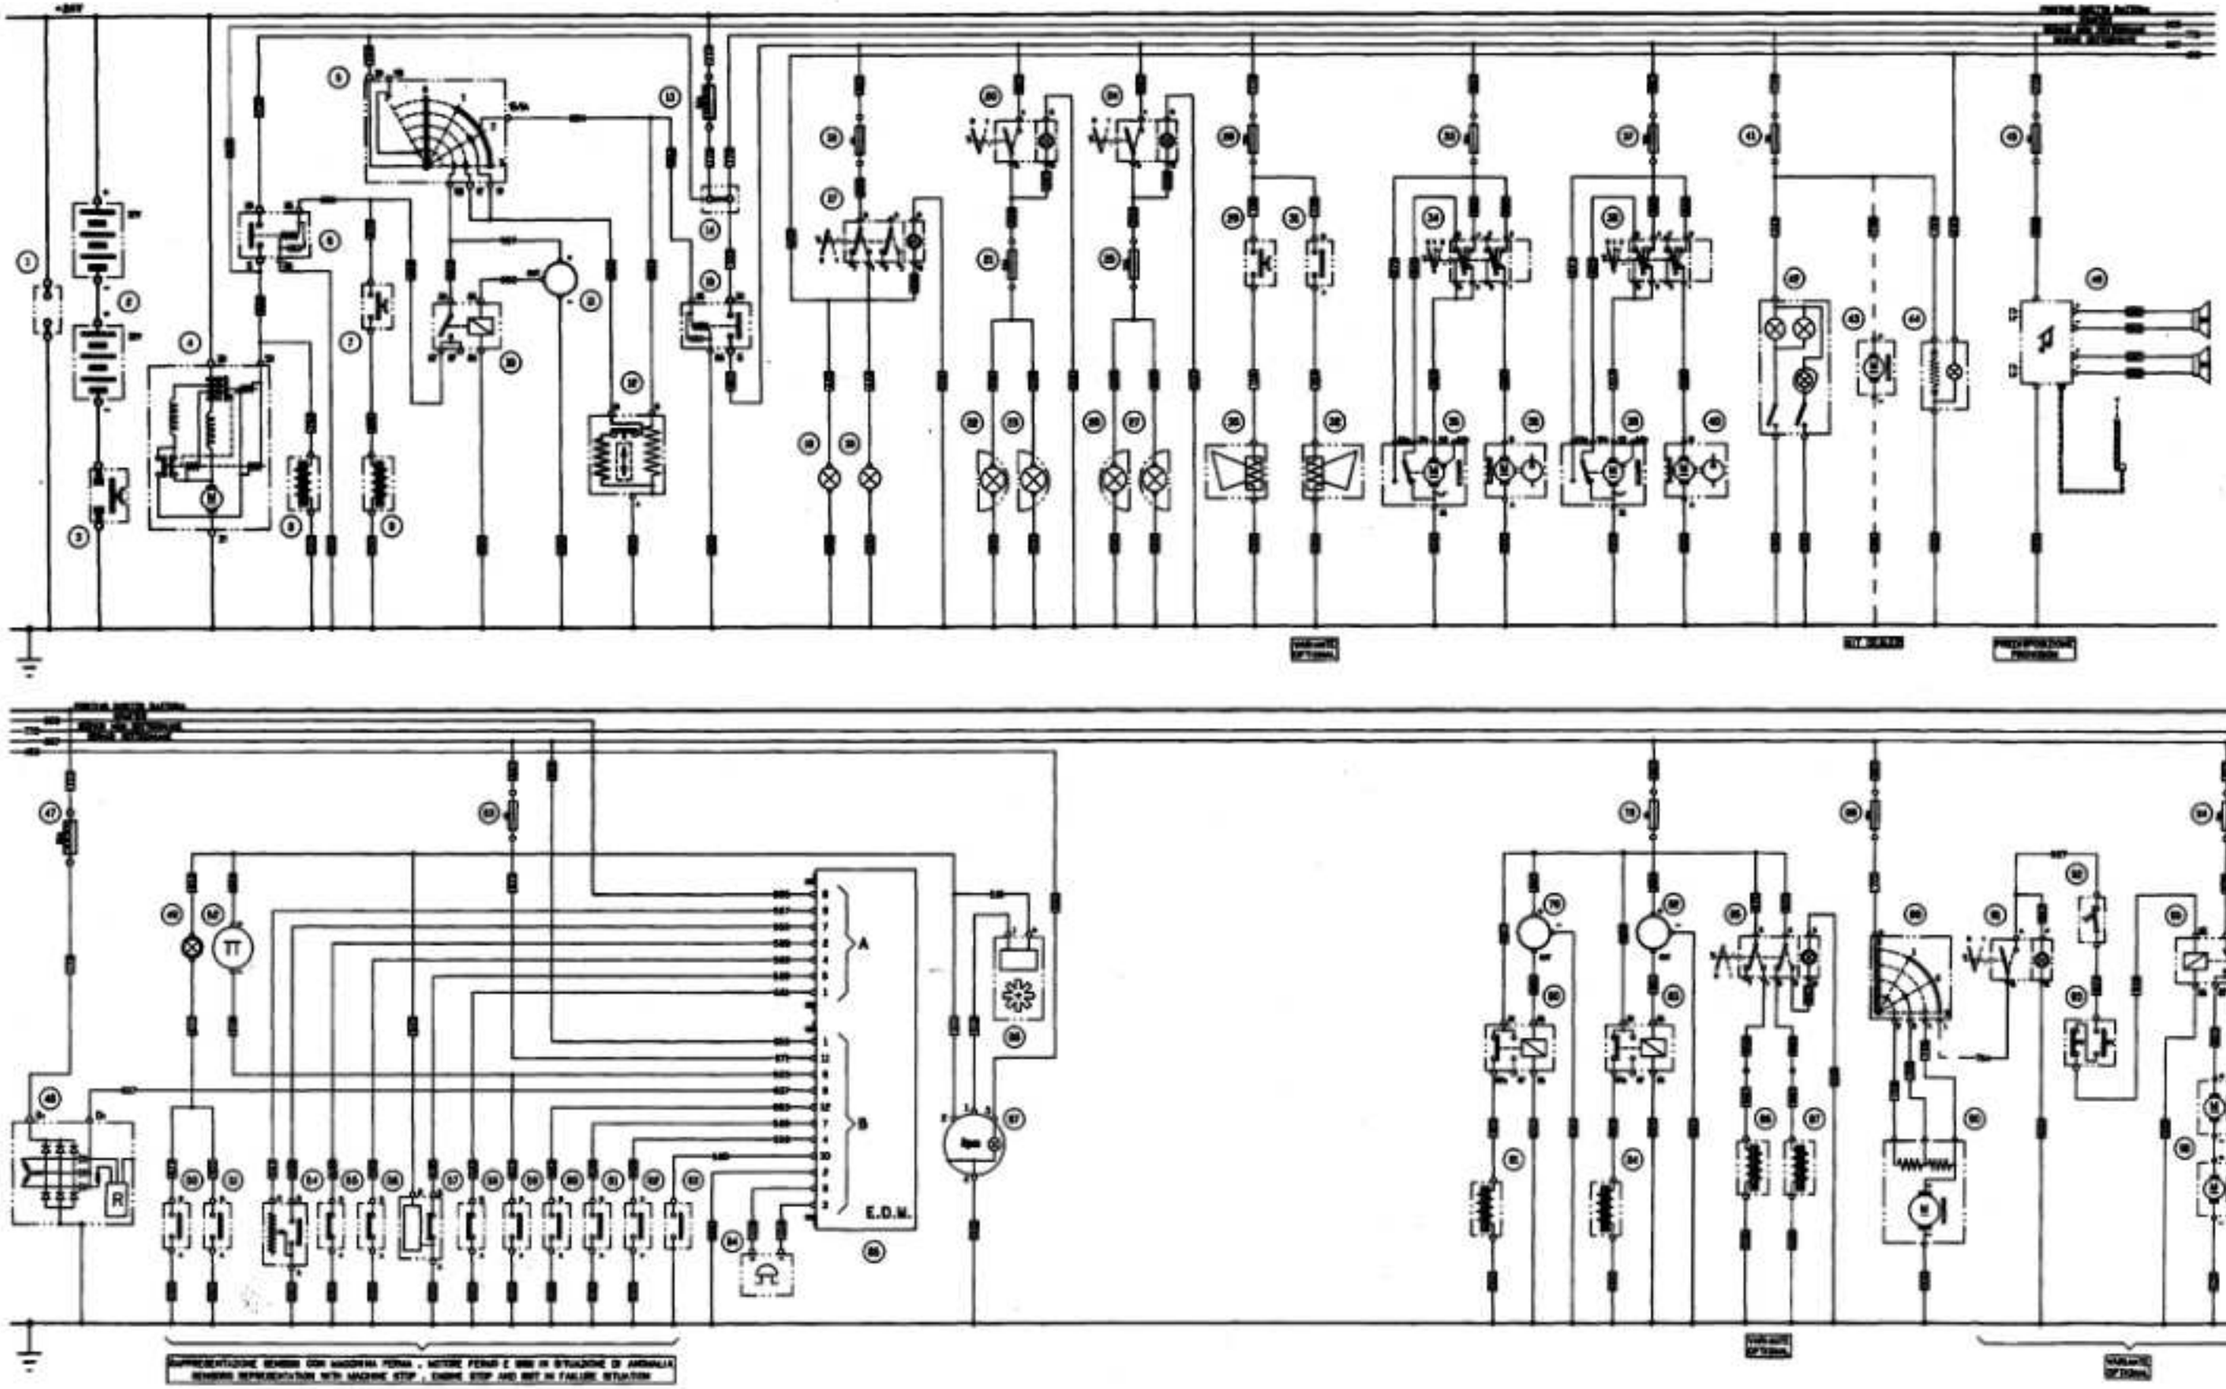

Order the manual at mid-west-tech.com >