NEW HOLLAND

# MOTOR GRADER

# G200

## OPERATOR'S MANUAL

75314454 NA

NEW HOLLAND

www.newhollandconstruction.com

MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 75314454...

Order the manual at mid-west-tech.com >

# INDEX

**Symbology** ..... 6

**Safety rules** ..... 8

Identification data ..... 24

Technical data ..... 25

Main dimensions ..... 28

Preliminary instructions ..... 29

Run-in period ..... 32

Operator's compartment ..... 33

Controls and instruments ..... 33

- LH lift cylinder control lever ..... 34
- Ripper control lever ..... 34
- Blade side displacement control lever ..... 34
- Blade tilt control lever ..... 34
- Circle rotation control lever ..... 34
- Headlights control lever ..... 35
- Electronic monitor ..... 34
- Optional differential lock ..... 37
- Gear and diagnosis indicator ..... 38
- Steering wheel tilt knob ..... 38
- Inching pedal ..... 38
- Console tilt pedal ..... 38
- Brake pedal ..... 38
- Accelerator and decelerator pedal ..... 38
- Circle side desplacement control lever ..... 38
- Machine articulation control lever ..... 38
- Wheel lean control lever ..... 39
- Blade raise lever ..... 39
- Alert sign ..... 39
- Caixa de fusiveis ..... 39
- Throttle control lever ..... 39



MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >

# INDEX



Electronic instrument cluster ..... 43
Master battery switch ..... 43
Auxiliary power outlet ..... 43
Starter switch ..... 43
Air conditioning ..... 44
Parking brake ..... 46
Cab ..... 46
Seat adjustment ..... 46
Preliminary inspection ..... 48
Operation ..... 49
- Engine starting ..... 49
- Engine stopping ..... 49
- Engine speed changes ..... 49
- Towing ..... 50
- Cutting a slope ..... 51
- Scarifying ..... 53
- Stopping the machine ..... 53
- Typical operations ..... 55

Maintenance ..... 58
- General note ..... 58
- Lubrification and service guide ..... 59
- Lubricant specifications ..... 61
- Key to tipe and grade of lubricants ..... 61
- Every 10 operating hours ..... 63
- Every 50 operating hours ..... 64
- Every 100 operating hours ..... 65
- Every 250 operating hours ..... 66
- Every 500 operating hours ..... 68
- Every 1000 operating hours ..... 71
- Every 2000 operating hours ..... 72
- Periodics services ..... 73
- Electrical schematic ..... 82




MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >

# MAIN DIMENSIONS

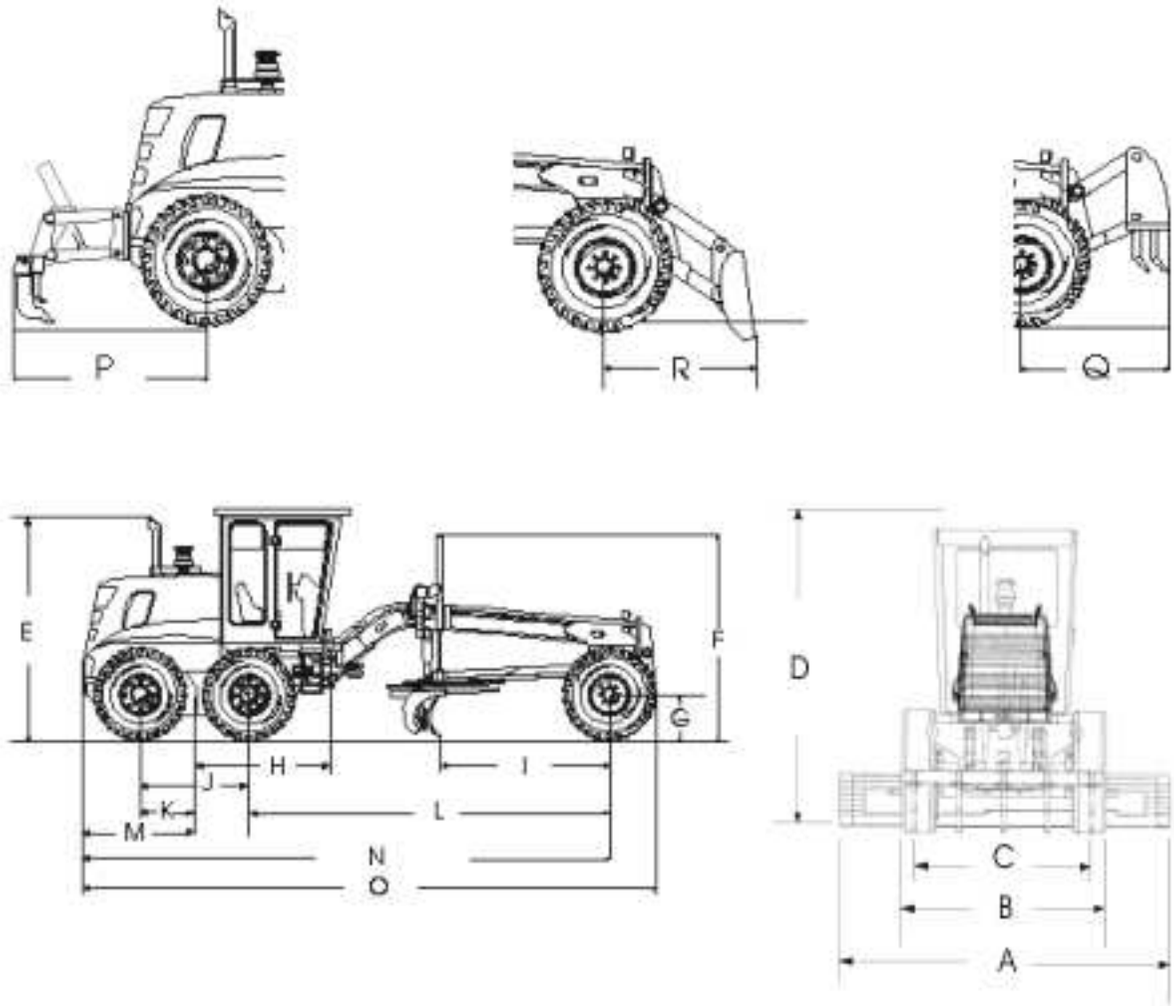


## DIMENSIONS

| | | | |
|---|---|---|---|
| A. | Blade width | 12' 0" | (3658 mm) |
| B. | Distance outside tires | 8' 3" | (2510 mm) |
| C. | Distance between tire centres | 7' 0" | (2134 mm) |
| D. | Maximum machine height | 10' 11,5" | (3340 mm) |
| E. | Height to the top of the exhaust | 10' 10.8" | (3323 mm) |
| F. | Height to top of blade cylinder | 10' 0" | (3047 mm) |
| G. | Stationary tire radius | 2' 0" | (610 mm) |
| H. | Distance from tandem axle to frame articulation pivot | 6' 5" | (1958 mm) |
| I. | Blade base | 8' 5" | (2562 mm) |
| J. | Distance between tandam axles | 5' 2" | (1594 mm) |
| K. | Distance between tandem center and wheels | 2' 7" | (797 mm) |
| L. | Distance between wheels | 20' 5" | (6219 mm) |



MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >

# OPERATOR´S COMPARTMENT

## 3 - WHEEL ANGLE CONTROL LEVER

The front wheel angle control lever, tilts the wheels to the left or to the right, thereby maintaining the stability to dump or dig, and to facilitate or decrease the machine´s turning radius. Move the lever forward to tilt the wheels to the left or to the rear to tilt the wheels to the right. After reaching the desired position, release the lever and will return to neutral.

## 4 - BLADE RAISE LEVER

Use this lever to raise or lower the right end of the blade. Move the lever forward to lower or to the rear to raise. After reaching the desired height, release the lever and it will return to neutral.


## 5 - WARNING BUZZER

Operate this buzzer whenever the machine is in hazardous situations.



*GROUP 4*

*Fuse box, hand throttle control lever, transmission control lever, switch panel, instrument panel (electronic), master battery switch, power outlet and ignitition swictch.*

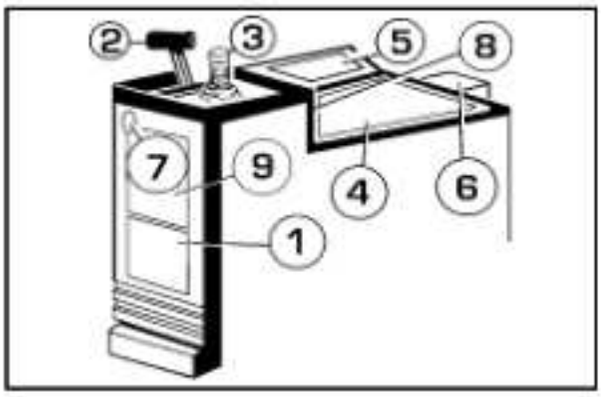



1- Fuse box
2- Hand throttle control lever
3- Transmission control lever
4- Switch panel
5- Instrument cluster (electronic)
6- Master battery switch
7- Power outlet
8- Ignition switch
9- Transmission inspection points

## 1 - FUSE BOX

The fuse box houses all machine fuses, as shown below.
For proper identiication of the location of each fuse, check the electrical wiring diagram.




## 2 - HAND THROTTLE CONTROL LEVER

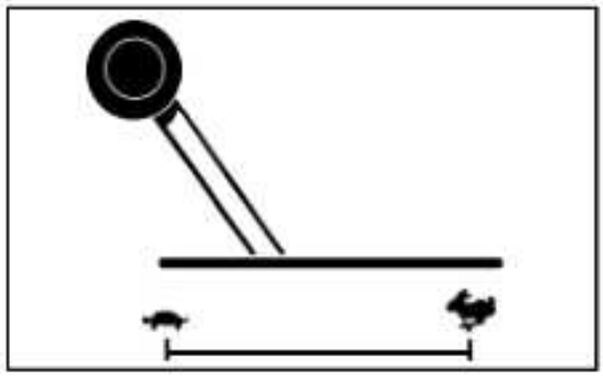


Engine speed will be low with the throttle lever all the way to the rear and high with the lever all the way forward.



MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >

# MAINTENANCE

13- BLADE ADJUSTMENT ARTICULATION
*Lubricate*

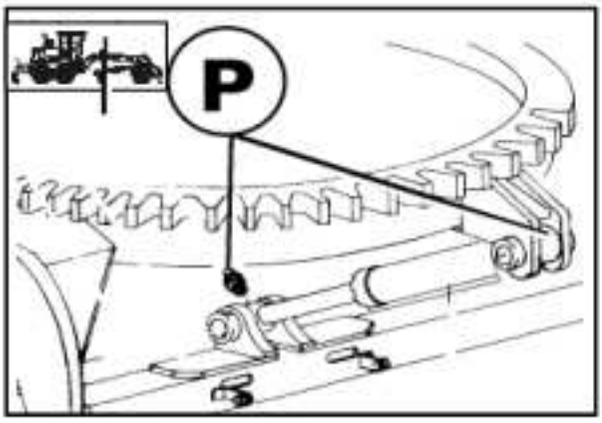


There are two lubrication points. Apply 04 to 06 grease shots.

14- FRONT AXLE PIVOT PIN
*Lubricate*



Front wheel swivel pin

There are four lubrication points, two each side. Apply 04 to 6 grease shots.

15- STEERING ROD
*Lubricate*




There are four lubrication points, two each side. Apply 04 to 6 grease shots.

16- FRONT AXLE ROD PIN
*Lubricate*



There are two lubrication points. Apply 04 to 6 grease shots.


17- FRONT WHEEL ANGLE CYLINDER
*Lubricate*

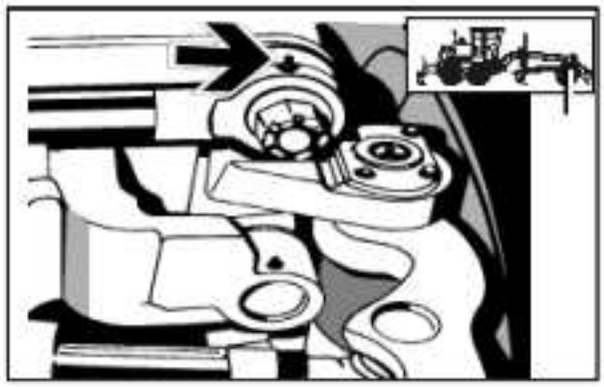

Front wheel swivel pin

There are two lubrication points. Apply 04 to 6 grease shots.

18- ENGINE DRIVE BELT
*Check*

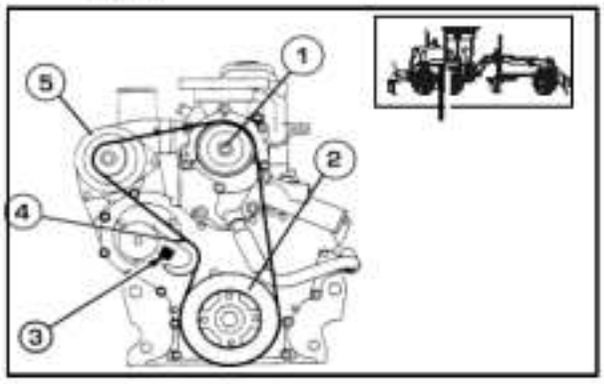


Belt tension



MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >

## INSTRUÇÕES DE OPERAÇÃO / QUICK OPERATION INSTRUCTIONS



**Chave de Ignição (Key switch) Chave geral (Master switch)**

**Dar partida no motor:**
a)Alavanca de marcha em neutro e acelerador em marcha lenta.
b)Ligar a chave geral.
c)Dar partida na chave de ignição.


**Engine starting**
a)Gear selector lever in neutral position and throttle lever at low position.
b)Turn on master switch.
c)Turn on key switch.




**Alavanca de marchas (Gear selector lever):**

**Movimentar a máquina:**
a)Acionar o pedal da embreagem.
b)Soltar o freio de mão.
c)Levantar a trava da alavanca de marchas e movimentar a alavanca para frente ou para trás.
d)Soltar o pedal da embreagem lentamente.

**To move the machine:**
a)Press inching pedal.
b)Release parking brake lever.
c)Lift gear selector lever lock and move the lever to forward or reverse.
d)Release inching pedal slowly.

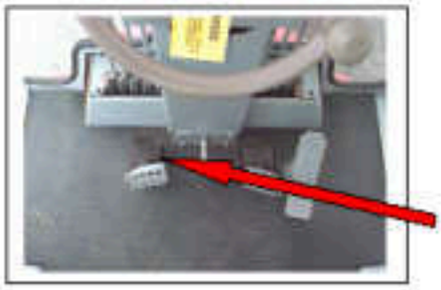

**Pedal da Embreagem (Inching Control Pedal)**

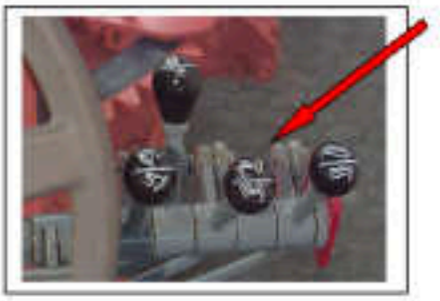

**Alav. de inclinação das rodas e articulação do chassis:**
**(Wheel lean control lever and frame articulation lever)**
**Atenção:** Não acionar a alavanca de inclinação das rodas com o parafuso trava montado na barra de inclinação e também a alavanca de articulação chassis com o pino de travamento montado nos chassis.
**Warning:** Do not move the wheel lean lever with lock bolt locked and do not move the articulation frame lever with the lock pin locked on frames.




**Parafuso Trava – Eixo Dianteiro**
**(Lock Bolt – Front Axle)**

**Alavanca de Controle da Lâmina:**
**(Blade Control Lever)**
**Atenção:** Cuidado ao deslocar a lâmina para não danificar a escada / pneus.

**Warning:** Be careful when moving the moldboard to avoid step / tires damage.



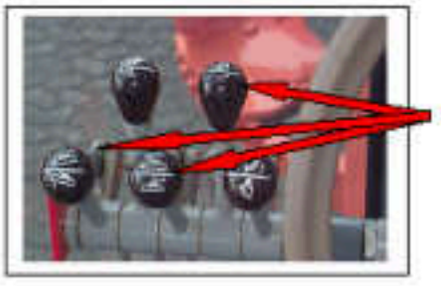

**Alavancas de controle da lâmina**
**(Blade control levers)**


**Pino travamento chassis**
**(Frames lock pin)**





MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >

# MAINTENANCE

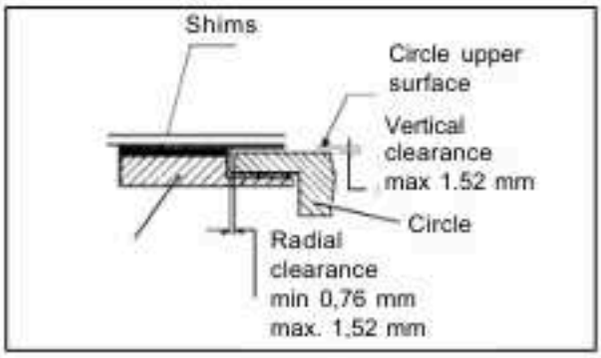


Locate the swing motor pinion such as to achieve an engaging position.


Make sure that the center line of the circle turn motor pinión, that the center circle are aligned.


Supporting one of the sides of the referenced pinion tooth against the side of one circle tooth, act on the front guide radial clearance adjusting bolt to provide a 0.76 mm clearance between the non-supported side of the pinion engaged tooth and the circle tooth. Note that during adjustment of the teeth clearance, the front guide wear plate should rest on the innner race of the circle.

After adjustment of the radial clearance of the front guide is completed and all nuts tightened, adjust the two rear guides to provide a maximum clearance of 0.76 mm between the inner circle race and the guide wear plates (curved), at the adjusting bolts of the wear plates.

Lock adjusting bolts with their lock nuts. Tighten the guide nuts and operate the circle to check for 360° free rotation.

If the circle does not rotate freely, redo the adjusment, by gradually increasing clearance between the sides of the teeth until the specified limit is achieved.

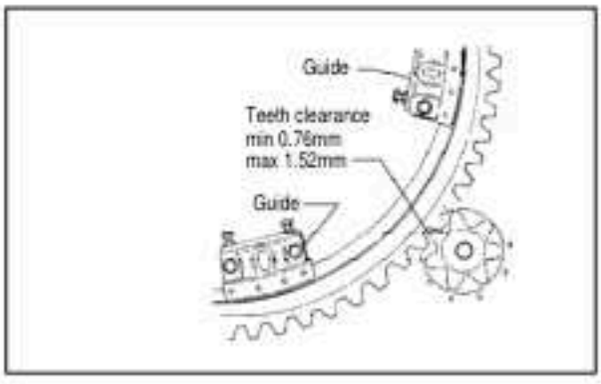


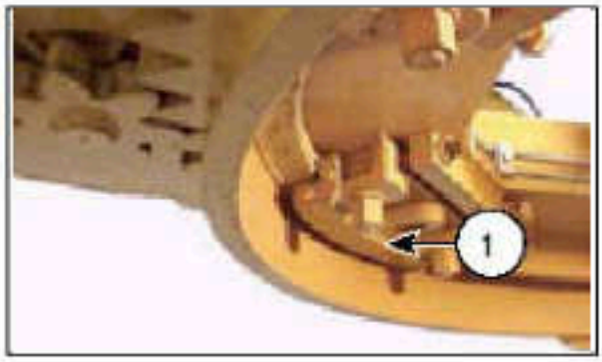



**39**- CIRCLE CARRIER BAR BALL NUTS
*Check*

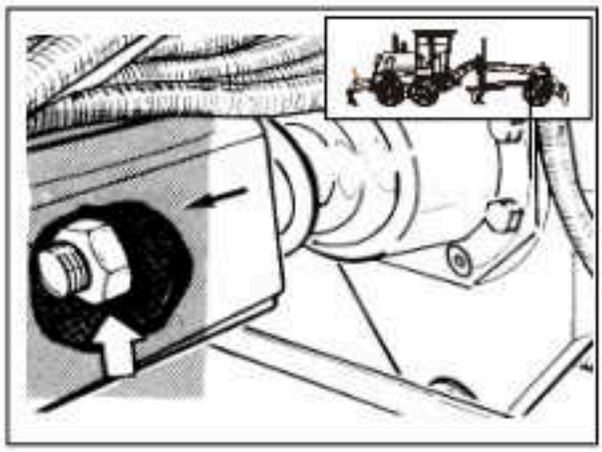

Check coupling ball nuts.
Torque to 75 to 91 kgm (540 to 660 lbs.ft).



MidWestTech | New Holland G200 Motor Grader Operator's Manual | Publication 7531... Order the manual at mid-west-tech.com >