1085 and 1086 Cruz-Air

Parts Catalog


8-2110

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

PICTORIAL INDEX

		CODE PAGES
GENERAL	1	1-9
ENGINE	2	10-21
FUEL	3	22-33
ELECTRICAL	4	34-97
STEERING	5	98-109
POWER TRAIN	6	110-165
BRAKES	7	166-211
HYDRAULIC	8	212-335
CHASSIS	9	336-433
NUMERICAL INDEX	10	435

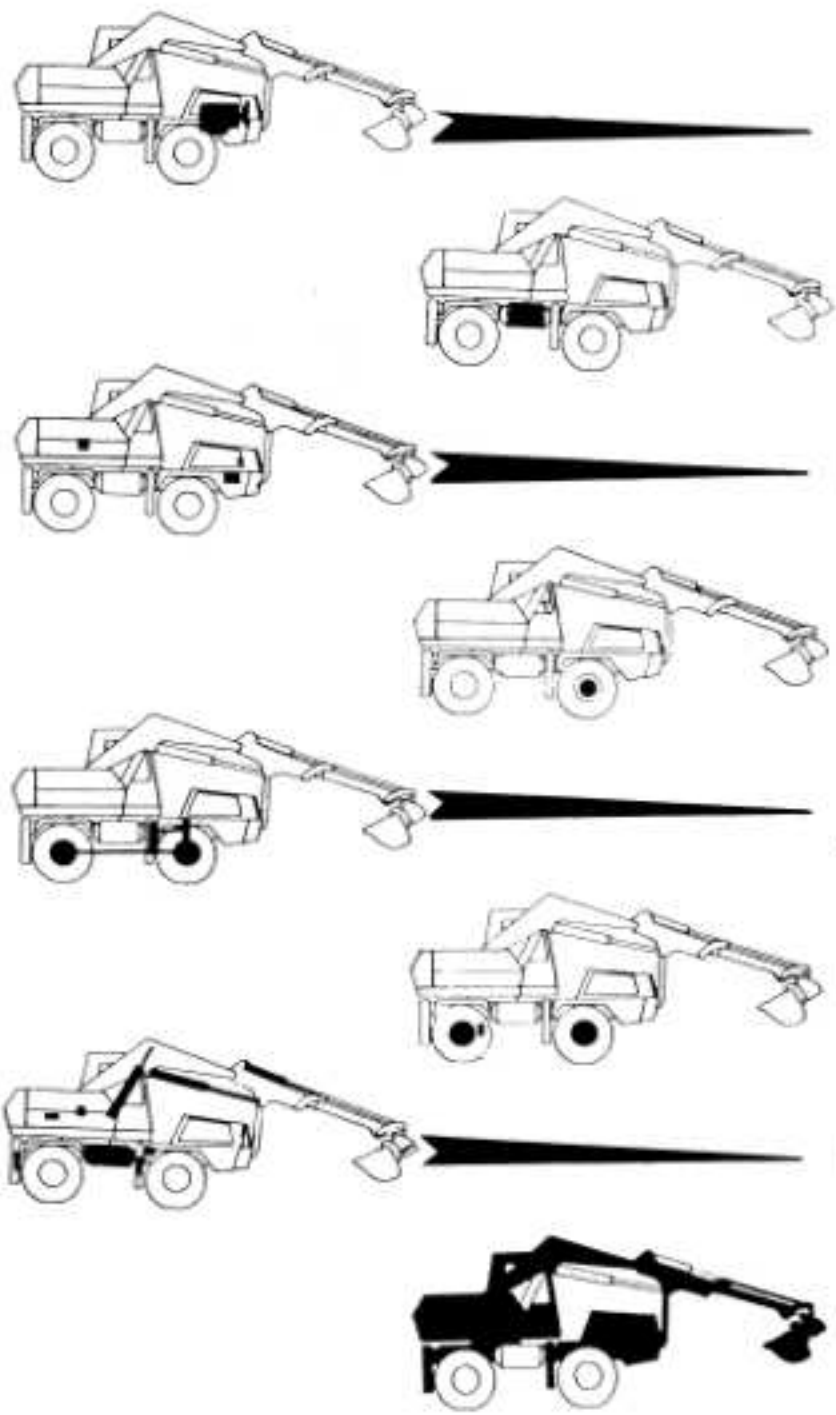

Printed in U.S.A.

Issued September 1983

MidWestTech | Case 1085, 1086 Cruz Air Excavator Parts Catalog | Publication 8-2110 Order the manual at mid-west-tech.com >

1085 AND 1086 CRUZ-AIR
ALPHABETICAL INDEX

A

Accelerator Lock Valve 31
Accelerator Master Cylinder 29
Accelerator Pedal and Linkage 25
Accelerator and Shut Off Linkage 27
Accelerator Slave Cylinder 31
Accelerator Swivel 33
Actuator, brake 205
Actuator, steering 103,105
Air Brake Valve, treadle 195
Air Brake Relay Valve 189
Air Brake Safety Valve 197
Air Brake Tubing:
- Actuator to Wheels (Hydraulic) 179
- Air Swivel to Brake Valve and Control Valves 181,183
- Compressor to Reservoir 175,177
- Fast Hoist Controls 215
- Hi-Low Shifter Controls 217
- Outrigger Pneumatic Controls 213
- Reservoir to Actuator 175,177

Air Chamber, maxibrake 203
Air Check Valve 197,199
Air Cleaners 15,17
Air Cleaner and Attaching Parts 15
Air Compressor 171,173
Air Compressor Cooling Tubing 169
Air Compressor Governor 187
Air Quick Release Brake Valve 185
Air Solenoid Valves 61
Air Swivel 185
Air Valves, digging brake, parking brake 193
Alarm, back-up 97
Alcohol Evaporation Kit 167
Alternator 67,69
Alternator Mounting 71
Arms, outrigger 343
Arrestor, spark 21
Axle Lockout 345
Axle Identification:
- Front 111
- Rear 111

B

Back-Up Alarm 97
Battery, Cables and Hold Down Bracket 35
Bearing, turntable 347
Boom:
- "E" 419
- "Y" 421

Boom Support 351
Brackets:
- Alternator Mounting 71
- Heater Mounting 81,87

B

Brakes 207,209,211
Brake Actuator 205
Brake, Air Valve 195
Brake Relay Valve 189
Brake, swing 433
Brake, swing control 431
Brake Wheel Cylinder 201
Buckets:
- Backhoe 397
- Concrete Removal 405
- Ditch 399
- Front Loader 401
- 4-In-1 403

C

Cab 375-381
Cab Insulation 375
Cab Window Glass 375
Center Swivel Group 191
Circuit Relief Valve 251
Cleaner, air 17
Cleaner, air, attaching parts 15
Cold Weather Starter Kit 19
Column, steering 99
Control Linkage:
- Auxiliary, fast hoist 331
- Crowd 329
- Hoist and Auxiliary 327
- Swing 325
- Tool 323

Control Valve, main 239-247
Converter, torque 135-139
Cooler, oil 11
Counterweight and turntable 347
Cross-Over Relief Valves 253,255
Cylinder, accelerator master 29
Cylinder, hydraulic:
- Crowd 303
- Grapple 307,309
- Hoist 303
- Outrigger 301
- Steering 109
- Tool 305
- Wrist-O-Twist 311
- 4-In-1 313

Cylinder, accelerator slave 31

Order the manual at mid-west-tech.com >

D

Decals 361-367
Defroster 91
Drive Shaft:
Torque Converter to Transmission 159
Transmission to Front Axle 161
Transmission to Rear Axle 163

E

Electrical Wiring Harness:
Back-up Alarm 43
Cab Main 41
Collector Ring 59
Console Wiring 47,49
Electrical Pin and Socket Contacts 59
Engine 45
Engine Hood Instrument Panel 51
Fast Hoist 43
Instrument Panel 47,49
Lower Main Harness 37
Outrigger 39
Turn Signal Switch 43
Work Lights 53
Engine and Fan 13
Engine Mounting Brackets 341
Engine Shrouding 353
Engine Shrouding Insulation 369
Exhaust System 21

F

Fan, Engine 13
Fast Hoist Control 215
Filters:
Hydraulic Oil 223
Torque Converter 143
Floor Mat 393
Floor Plate 393
Foot Valve for Air Brakes 195
Frame and Attaching Parts, main 339
Fuel Tank and Lines 23

G

Governor, air compressor 187

H

Heaters 73-87
Heater Mounting Brackets 81,87
Heater Shrouding 89
Hi-Low Shifter Air Control 217
Hi-Low Shifter Air Cylinder 219

H

Hydraulic Cylinders:
Crowd 303
Grapple 307,309
Hoist 303
Outrigger 301
Steering 109
Tool 305
Wrist-O-Twist 311
4-In-1 313
Hydraulic Oil Filter:
Hydraulic System 223
Torque Converter 143
Hydraulic Pump, main 225,227
Hydraulic Swivel 319
Hydraulic Oil Tank and Attaching Parts 221
Hydraulic Tubing:
Auxiliary 287
Crowd Cylinder:
"E" Boom 279
"Y" Boom 281
Fast Hoist 277
Hoist Cylinder 275
4-In-1 Bucket 291
Oil Cooler 237
Oil Tank to Pump To Outrigger Valve
To Swivel 233
Oil Tank To Pump To Swivel 229,231
Outrigger 267-271
Power Sensing 265
Swing Motor 273
Swivel To Valves 235
Tool Cylinder:
"E" Boom 283
"Y" Boom 285
Wrist-O-Twist 289

I

Index, numerical 435
Instrument Panels 63,65
Insulation, engine instrument panel 369

L

Lights, work 55
Lockout, axle 345

Printed in U.S.A.

Issued September, 1983

MidWestTech | Case 1085, 1086 Cruz Air Excavator Parts Catalog | Publication 8-2110 Order the manual at mid-west-tech.com >