TEREX

Parts Manual

Serial Number Range

AL5HT

from SN AL5HT12-101 to AL5HT16-245

from SN AL5HT16J-246 to AL5HT16J-1499

from SN AL5HTJ-1500

Part No. 826028

Rev A11

November 2018

Order the manual at mid-west-tech.com >

Table of Contents

This manual is updated frequently. If you have a printed manual, you can keep it up to date by downloading new figures from the Genie website at www.genielift.com. For the most up-to-date parts information, visit the Parts Lookup System on the Genie website at www.genielift.com.

How to Read Your Serial Number....3
Parts Stocking List....7
How to Order Parts....8
Service Parts Fax Order Form....9

Electronic Version

Click on any page number to view the figure.

100 Decals
101.1 Decals with Words, Roadside....10
102.1 Decals with Words, Curbside....12
103.1 Decals with Symbols, Roadside....14
104.1 Decals with Symbols, Curbside....16

200 Chassis Components
201.1 Chassis Components....18
202.1 Fuel Tank and Hoses, Models Without Spill Containment....20
203.1 Fuel Tank and Hoses, Models With Spill Containment....22
204.1 Axles and Brakes....24
205.1 Hitches....26
206.1 Ballast Assembly....28
207.1 Cabinet, View 1....30
208.1 Cabinet, View 2....32
209.1 Hydraulic Pump Installation....34

300 Engines and Generators
301.1 Kubota D1105-E3BG, View 1....36
302.1 Kubota D1105-E3BG, View 2....38
303.1 Kubota D1105-E3BG, View 3....40
304.1 Kubota D1105-E3BG, View 3....42
305.1 Kubota V1505 T41, View 1....44
306.1 Kubota V1505 T41, View 2....46
307.1 Isuzu 4LE2, 1800R, View 1....48
308.1 Isuzu 4LE2, 1800R, View 2....50
309.1 Isuzu 4LE2, 1800R, Radiator Assembly....52
310.1 Generator, Marathon 8 Kw....54
311.1 Generator, Marathon 12 Kw and 20 Kw....56

400 Electrical Components
401.1 Control Box Assembly, View 1....58
402.1 Control Box Assembly, View 1....60
403.1 Control Box Assembly, External Power Access....62


500 Mast Components
501.1 Mast Base Assembly....64
502.1 Mast Assembly, Section #1....66
503.1 Mast Assembly, Section #2....68
504.1 Mast Assembly, Section #3....70
505.1 Light Bar Attachment....72
506.1 Light Bar Assembly, 4 Light....74
507.1 Light Bar Assembly, 8 Light....76
508.1 Light Fixture Assembly....78

600 Accessories
601.1 Chassis Options....80
602.1 Outrigger Options....82
603.1 Engine Options, View 1....84

Indices
Part Number Index....86
Part Description Index....89


Cross References

MidWestTech | Terex AL5HT Light Tower Parts Manual | Publication 826028 Order the manual at mid-west-tech.com >

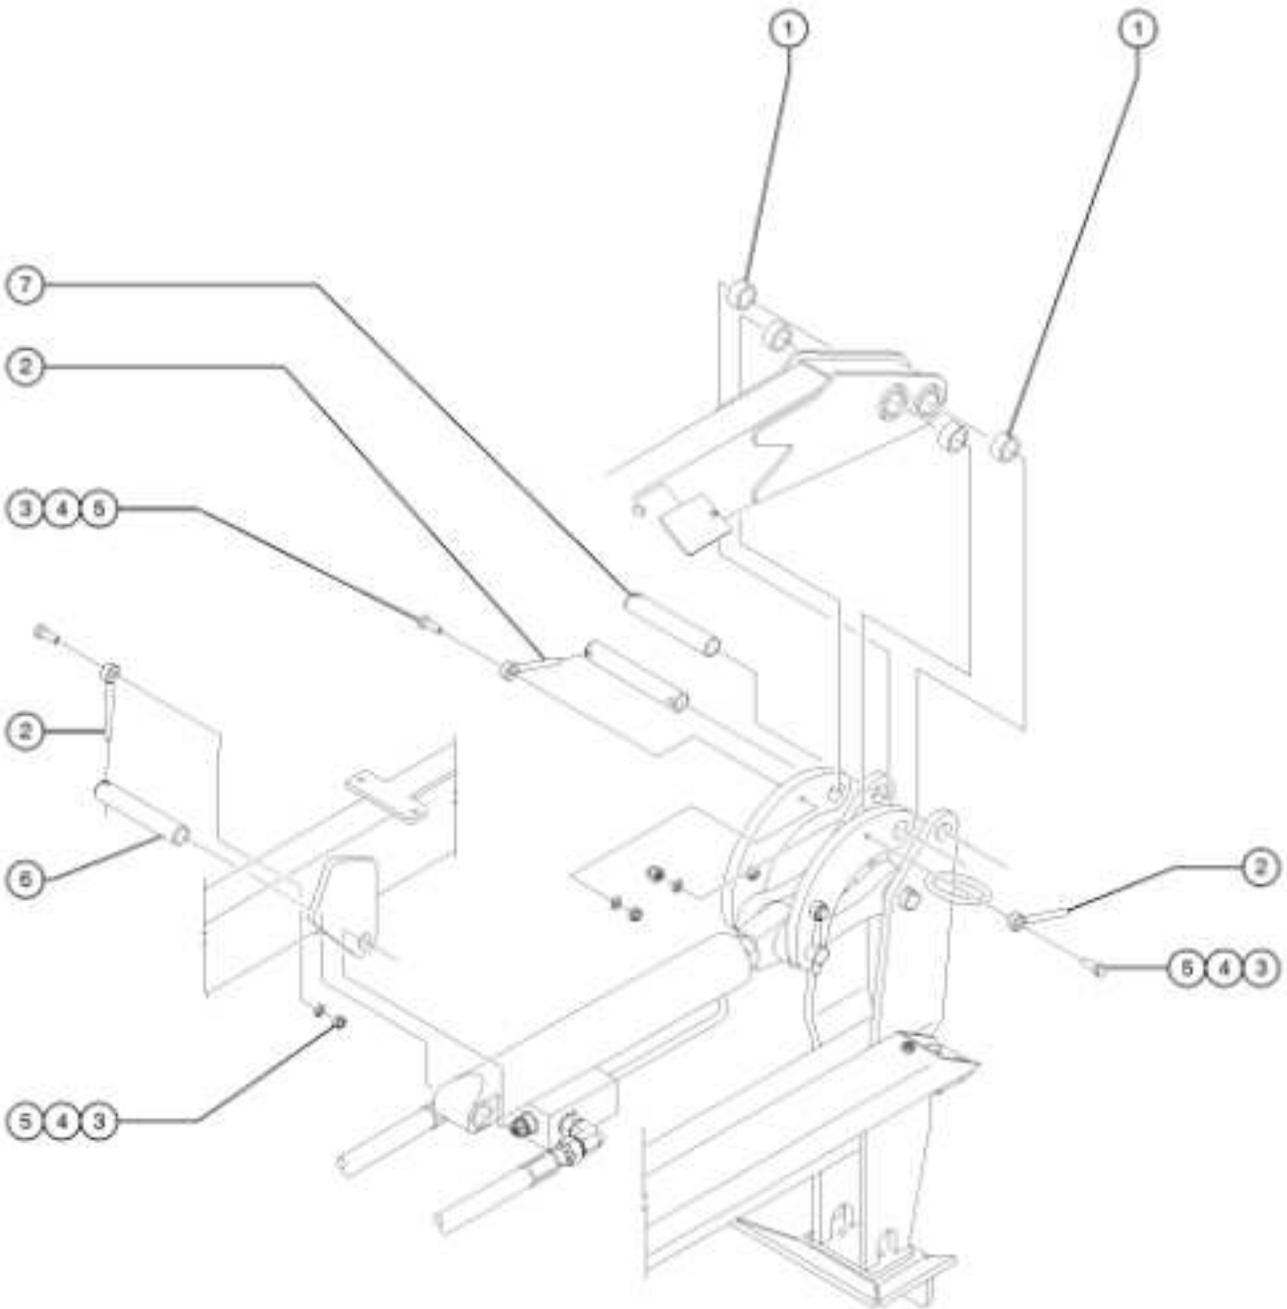



MidWestTech | Terex AL5HT Light Tower Parts Manual | Publication 826028 Order the manual at mid-west-tech.com >

508.1 Light Fixture Assembly

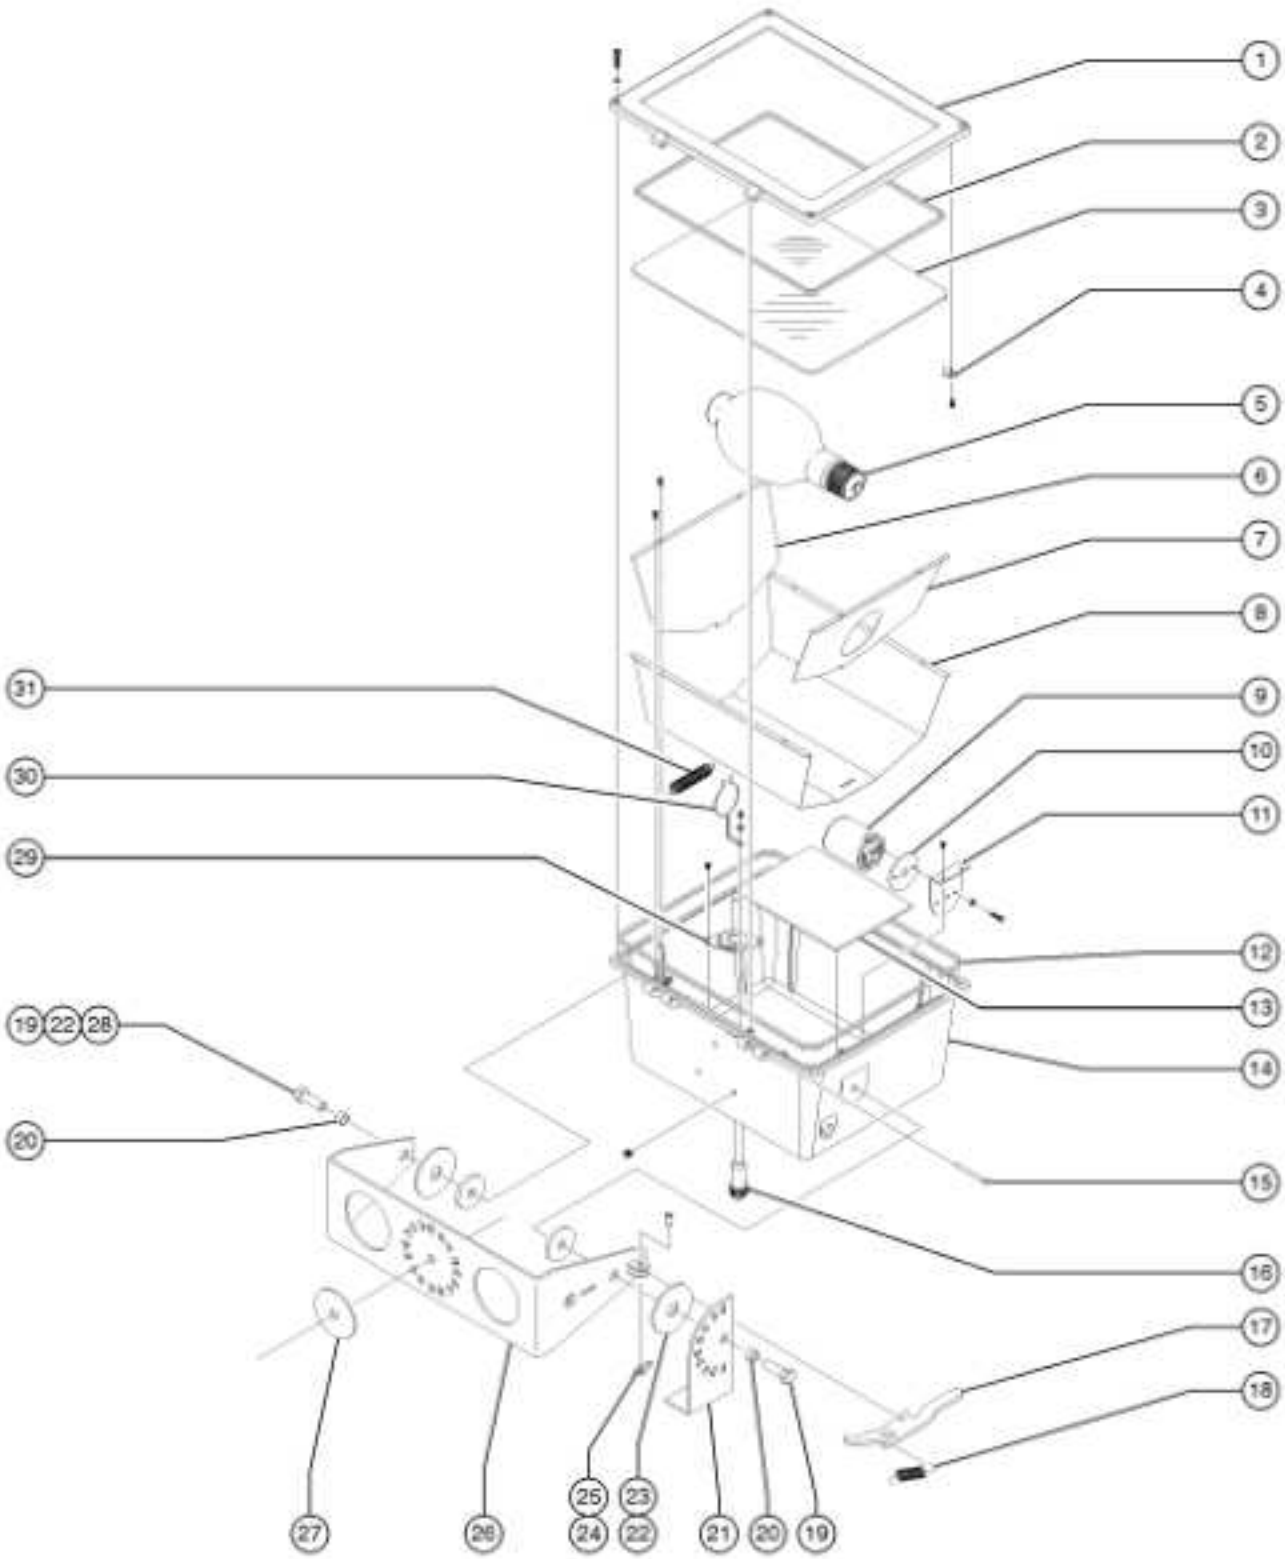

MidWestTech | Terex AL5HT Light Tower Parts Manual | Publication 826028 Order the manual at mid-west-tech.com >

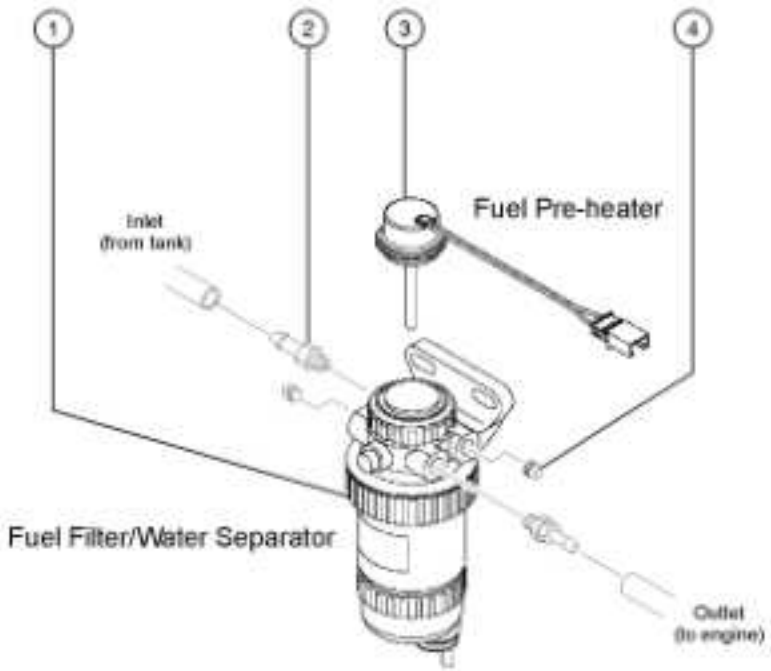

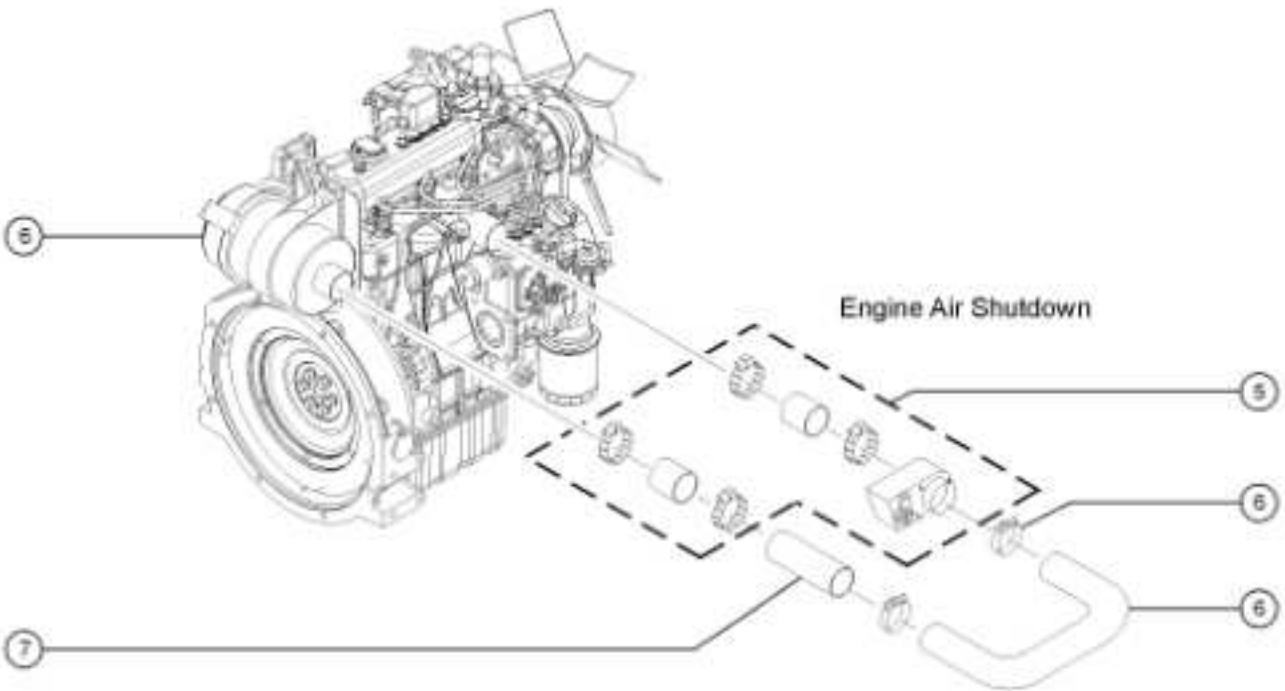

MidWestTech | Terex AL5HT Light Tower Parts Manual | Publication 826028 Order the manual at mid-west-tech.com >