A TEREX COMPANY

Service Manual

Serial Number Range

S-40™
S-45™
S-40 TRAX™
S-45 TRAX™

from S4012-17232
to S4015-20504

Part No. 826364

Rev C1

October 2014

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii
Serial Number Legend iv

Section 1 **Safety Rules**

General Safety Rules v

Section 2 **Specifications**

Machine Specifications ..... 2 - 1
Hydraulic Oil Specifications ..... 2 - 2
Manifold Component Specifications ..... 2 - 5
Valve Coil Resistance Specifications ..... 2 - 5
Ford MSG-425 EFI Engine Specifications ..... 2 - 6
Deutz D2011L03i Engine Specifications ..... 2 - 8
Deutz D 2.9 L4 Engine Specifications ..... 2 - 10
Perkins 404D-22 Engine Specifications ..... 2 - 12
Perkins 404F-22 Engine Specifications ..... 2 - 13
Machine Torque Specifications ..... 2 - 15
TRAX Torque Specifications ..... 2 - 15
Hydraulic Hose and Fitting Torque Specifications ..... 2 - 16
SAE and Metric Fastener Torque Chart ..... 2 - 18

Section 3 **Scheduled Maintenance Procedures**

Introduction ..... 3 - 1
Pre-Delivery Preparation ..... 3 - 3
Maintenance Inspection Report ..... 3 - 5

Checklist A Procedures

A-1 Inspect the Decals and Manuals ..... 3 - 7
A-2 Perform Pre-operation Inspection ..... 3 - 8
A-3 Perform Function Tests ..... 3 - 8
A-4 Perform Engine Maintenance- Ford Models ..... 3 - 9

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures,** continued

A-5 Perform Engine Maintenance - Perkins Models ..... 3 - 9
A-6 Perform Engine Maintenance - Deutz Models ..... 3 - 10
A-7 Inspect the Track Components, TRAX option ..... 3 - 10
A-8 Check the High Pressure Hydraulic Filter Condition Indicator ..... 3 - 11
A-9 Test the Oscillate Axle (if equipped ..... 3 - 11
A-10 Perform 30 Day Service ..... 3 - 12
A-11 Replace the Drive Hub Oil ..... 3 - 12
A-12 Perform Engine Maintenance - Ford Models ..... 3 - 13
A-13 Perform Engine Maintenance - Perkins Models ..... 3 - 13
A-14 Perform Engine Maintenance - Ford Models ..... 3 - 14
A-15 Grease the Turntable Rotation Bearing and Rotate Gear ..... 3 - 14
A-16 Perform Engine Maintenance - Ford Models ..... 3 - 15

Checklist B Procedures

B-1 Inspect the Battery ..... 3 - 16
B-2 Inspect the Electrical Wiring ..... 3 - 17
B-3 Check the Exhaust System ..... 3 - 19
B-4 Perform Engine Maintenance - Perkins Models ..... 3 - 20
B-5 Check the Oil Cooler and Cooling Fins - Deutz Models ..... 3 - 20
B-6 Inspect the Tires, Wheels and Lug Nut Torque ..... 3 - 22
B-7 Confirm the Proper Brake Configuration ..... 3 - 22
B-8 Check the Drive Hub Oil Level and Fastener Torque ..... 3 - 23
B-9 Test the Ground Control Override ..... 3 - 23
B-10 Check the Directional Valve Linkeage ..... 3 - 24
B-11 Test the Platform Self-leveling ..... 3 - 24
B-12 Test the Engine Idle Select ..... 3 - 25
B-13 Test the Fuel Select Operation - Ford Models ..... 3 - 26

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures,** continued

B-14 Test the Drive Brakes ..... 3 - 27
B-15 Test the Drive Speed - Stowed Position ..... 3 - 28
B-16 Test the Drive Speed - Raised or Extended Position ..... 3 - 29
B-17 Test the Alarm Package (if equipped) and the Descent Alarm ..... 3 - 30
B-18 Perform Hydraulic Oil Analysis ..... 3 - 31
B-19 Inspect the Fuel and Hydraulic Tank Cap Venting System ..... 3 - 32
B-20 Check the Track Tension and Fastener Torque - TRAX Option ..... 3 - 33
B-21 Test the Emergency Power System ..... 3 - 34
B-22 Perform Engine Maintenance - Ford Models ..... 3 - 35

Checklist C Procedures

C-1 Grease the Platform Overload Mechanism (if equipped) ..... 3 - 36
C-2 Test the Platform Overload Mechanism (if equipped) ..... 3 - 36
C-3 Replace the Engine Air Filter - All Models ..... 3 - 40
C-4 Perform Engine Maintenance - Perkins Models ..... 3 - 41
C-5 Perform Engine Maintenance - Perkins Models ..... 3 - 41
C-6 Perform Engine Maintenance - Deutz Models ..... 3 - 42
C-7 Check and Adjust the Engine RPM - Perkins 404D and Deutz 2011 Models ..... 3 - 42
C-8 Perform Engine Maintenance Ford Models ..... 3 - 44

Checklist D Procedures

D-1 Check the Boom Wear Pads ..... 3 - 46
D-2 Check the Turntable Rotation Bearing Bolts ..... 3 - 47
D-3 Inspect for Turntable Bearing Wear ..... 3 - 48
D-4 Replace the Drive Hub Oil ..... 3 - 50
D-5 Check the Free-wheel Configuration ..... 3 - 50
D-6 Replace the Hydraulic Filters ..... 3 - 52
D-7 Perform Engine Maintenance - Perkins Models ..... 3 - 53
D-8 Perform Engine Maintenance - Deutz Models ..... 3 - 54
D-9 Perform Engine Maintenance - Deutz Models ..... 3 - 54

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service... Order the manual at mid-west-tech.com >

SPECIFICATIONS

Ford MSG-425 EFI Engine

Displacement	152.5 cu in 2.5 liters
Number of cylinders	4
Bore & stroke	3.50 x 3.94 inches 89 x 100 mm
Horsepower	
Continuous horsepower	60 @ 2500 rpm
Continuous horsepower	44.7 kW @ 2500 rpm
Firing order	1 - 3 - 4 - 2
Idle speed (computer controlled)	1000 rpm
Low function idle (computer controlled)	1600 rpm
High function idle (computer controlled)	2500 rpm
Governor	Electronic
Compression ratio	9.7:1
Compression pressure (approx.) Pressure (psi or bar) of lowest cylinder must be at least 75% of highest cylinder	
Lubrication system	
Oil pressure (at operating temperature @ 2500 rpm)	29 to 39 psi 2 to 2.7 bar
Oil capacity (including filter)	6.7 quarts 6.4 liters
Oil switch pressure point	7-9 psi 0.48 to 0.62 bar
Electronic fuel pump	
Fuel pressure, static	60 psi 4.14 bar
Fuel flow rate	0.43 gpm 1.6 L/min
Ignition system	
Spark plug type	Motorcraft AGSF-32-FEC
Spark plug gap	0.049 to 0.053 inches 1.244 to 1.346 mm
Engine coolant	
Capacity	10 quarts 9.5 liters
Operating pressure	13-18 psi
Normal operating temperature	205° F
Cylinder head temperature sending unit	
Fault code set temperature	280°F 138°C
Engine shut-down temperature	300°F 149°C

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice.

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service... Order the manual at mid-west-tech.com >

Control System Fault Codes

Control System

How to Retrieve Control System Fault Codes

At least one fault code is present when the alarm at the platform controls produces two short beeps every 30 seconds for 10 minutes.

Perform this procedure with the engine off, the key switch turned to platform controls and the red Emergency Stop button pulled out to the on position at both the ground and platform controls.

1 Open the platform control box lid.

⚠WARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

2 Locate the red and yellow fault LEDs on the ALC-500 circuit board inside the platform control box. Do not touch the circuit board.

NOTICE Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. If the circuit board does need to be handled, maintain firm contact with a metal part of the machine that is grounded at all times when handling the printed circuit board OR use a grounded wrist strap.

3 **Determine the error source:** The red LED indicates the error source and will flash two separate codes. The first code will indicate the first digit of the two digit code, flashing once per second. It will then pause for 1.5 seconds and flash the second digit once per 0.5 second.

Note: When the red LED is flashing the code, the yellow LED will be on solid.


4 **Determine the error type:** The yellow LED indidates the error type and will flash two separate codes. The first code will indicate the first digit of the two digit code, flashing once per second. It will then pause for 1.5 seconds and flash the second digit once per 0.5 second.

Note: When the yellow LED is flashing the code, the red LED will be on solid.

5 Use the fault code table on the following pages to aid in troubleshooting the machine by pinpointing the area or component affected.

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service... Order the manual at mid-west-tech.com >

Hydraulic Generator Option Wiring Diagram- MTE

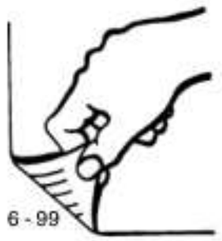

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service Manual | Publication 826364 Order the manual at mid-west-tech.com >

SPECIFICATIONS

SAE FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

SIZE	THREAD	Grade 5				Grade 8				A574 High Strength Black Oxide Bolts	
		LUBED		DRY		LUBED		DRY		LUBED	
		in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
1/4	20	80	9	100	11.3	110	12.4	140	15.8	130	14.7
	28	90	10.1	120	13.5	120	13.5	160	18	140	15.8
		LUBED		DRY		LUBED		DRY		LUBED	
		ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
5/16	18	13	17.6	17	23	18	24	25	33.9	21	28.4
	24	14	19	19	25.7	20	27.1	27	36.6	24	32.5
3/8	16	23	31.2	31	42	33	44.7	44	59.6	38	51.5
	24	26	35.2	35	47.4	37	50.1	49	66.4	43	58.3
7/16	14	37	50.1	49	66.4	50	67.8	70	94.7	61	82.7
	20	41	55.5	55	74.5	60	81.3	80	108.4	68	92.1
1/2	13	57	77.3	75	101.6	80	108.4	110	149	93	126
	20	64	86.7	85	115	90	122	120	162	105	142
9/16	12	80	108.4	110	149	120	162	150	203	130	176
	18	90	122	120	162	130	176	170	230	140	189
5/8	11	110	149	150	203	160	217	210	284	180	244
	18	130	176	170	230	180	244	240	325	200	271
3/4	10	200	271	270	366	280	379	380	515	320	433
	16	220	298	300	406	310	420	420	569	350	474
7/8	9	320	433	430	583	450	610	610	827	510	691
	14	350	474	470	637	500	678	670	908	560	759
1	8	480	650	640	867	680	922	910	1233	770	1044
	12	530	718	710	962	750	1016	990	1342	840	1139
1 1/8	7	590	800	790	1071	970	1315	1290	1749	1090	1477
	12	670	908	890	1206	1080	1464	1440	1952	1220	1654
1 1/4	7	840	1138	1120	1518	1360	1844	1820	2467	1530	2074
	12	930	1260	1240	1681	1510	2047	2010	2725	1700	2304
1 1/2	6	1460	1979	1950	2643	2370	3213	3160	4284	2670	3620
	12	1640	2223	2190	2969	2670	3620	3560	4826	3000	4067

METRIC FASTENER TORQUE CHART


• This chart is to be used as a guide only unless noted elsewhere in this manual •

Size	Class 4.6				Class 8.8				Class 10.9				Class 12.9			
(mm)	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
5	16	1.8	21	2.4	41	4.63	54	6.18	58	6.63	78	8.84	68	7.75	91	10.3
6	19	3.05	36	4.07	69	7.87	93	10.5	100	11.3	132	15	116	13.2	155	17.6
7	45	5.12	60	6.83	116	13.2	155	17.6	167	18.9	223	25.2	1.95	22.1	260	29.4
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
8	5.4	7.41	7.2	9.88	14	19.1	18.8	25.5	20.1	27.3	26.9	36.5	23.6	32	31.4	42.6
10	10.8	14.7	14.4	19.6	27.9	37.8	37.2	50.5	39.9	54.1	53.2	72.2	46.7	63.3	62.3	84.4
12	18.9	25.6	25.1	34.1	48.6	66	64.9	88	69.7	94.5	92.2	125	81	110	108	147
14	30.1	40.8	40	54.3	77.4	105	103	140	110	150	147	200	129	175	172	234
16	46.9	63.6	62.5	84.8	125	170	166	226	173	235	230	313	202	274	269	365
18	64.5	87.5	86.2	117	171	233	229	311	238	323	317	430	278	377	371	503
20	91	124	121	165	243	330	325	441	337	458	450	610	394	535	525	713
22	124	169	166	225	331	450	442	600	458	622	612	830	536	727	715	970
24	157	214	210	285	420	570	562	762	583	791	778	1055	682	925	909	1233

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service... Order the manual at mid-west-tech.com >

Engine Wire Harness

Ford MSG-425 EFI Models

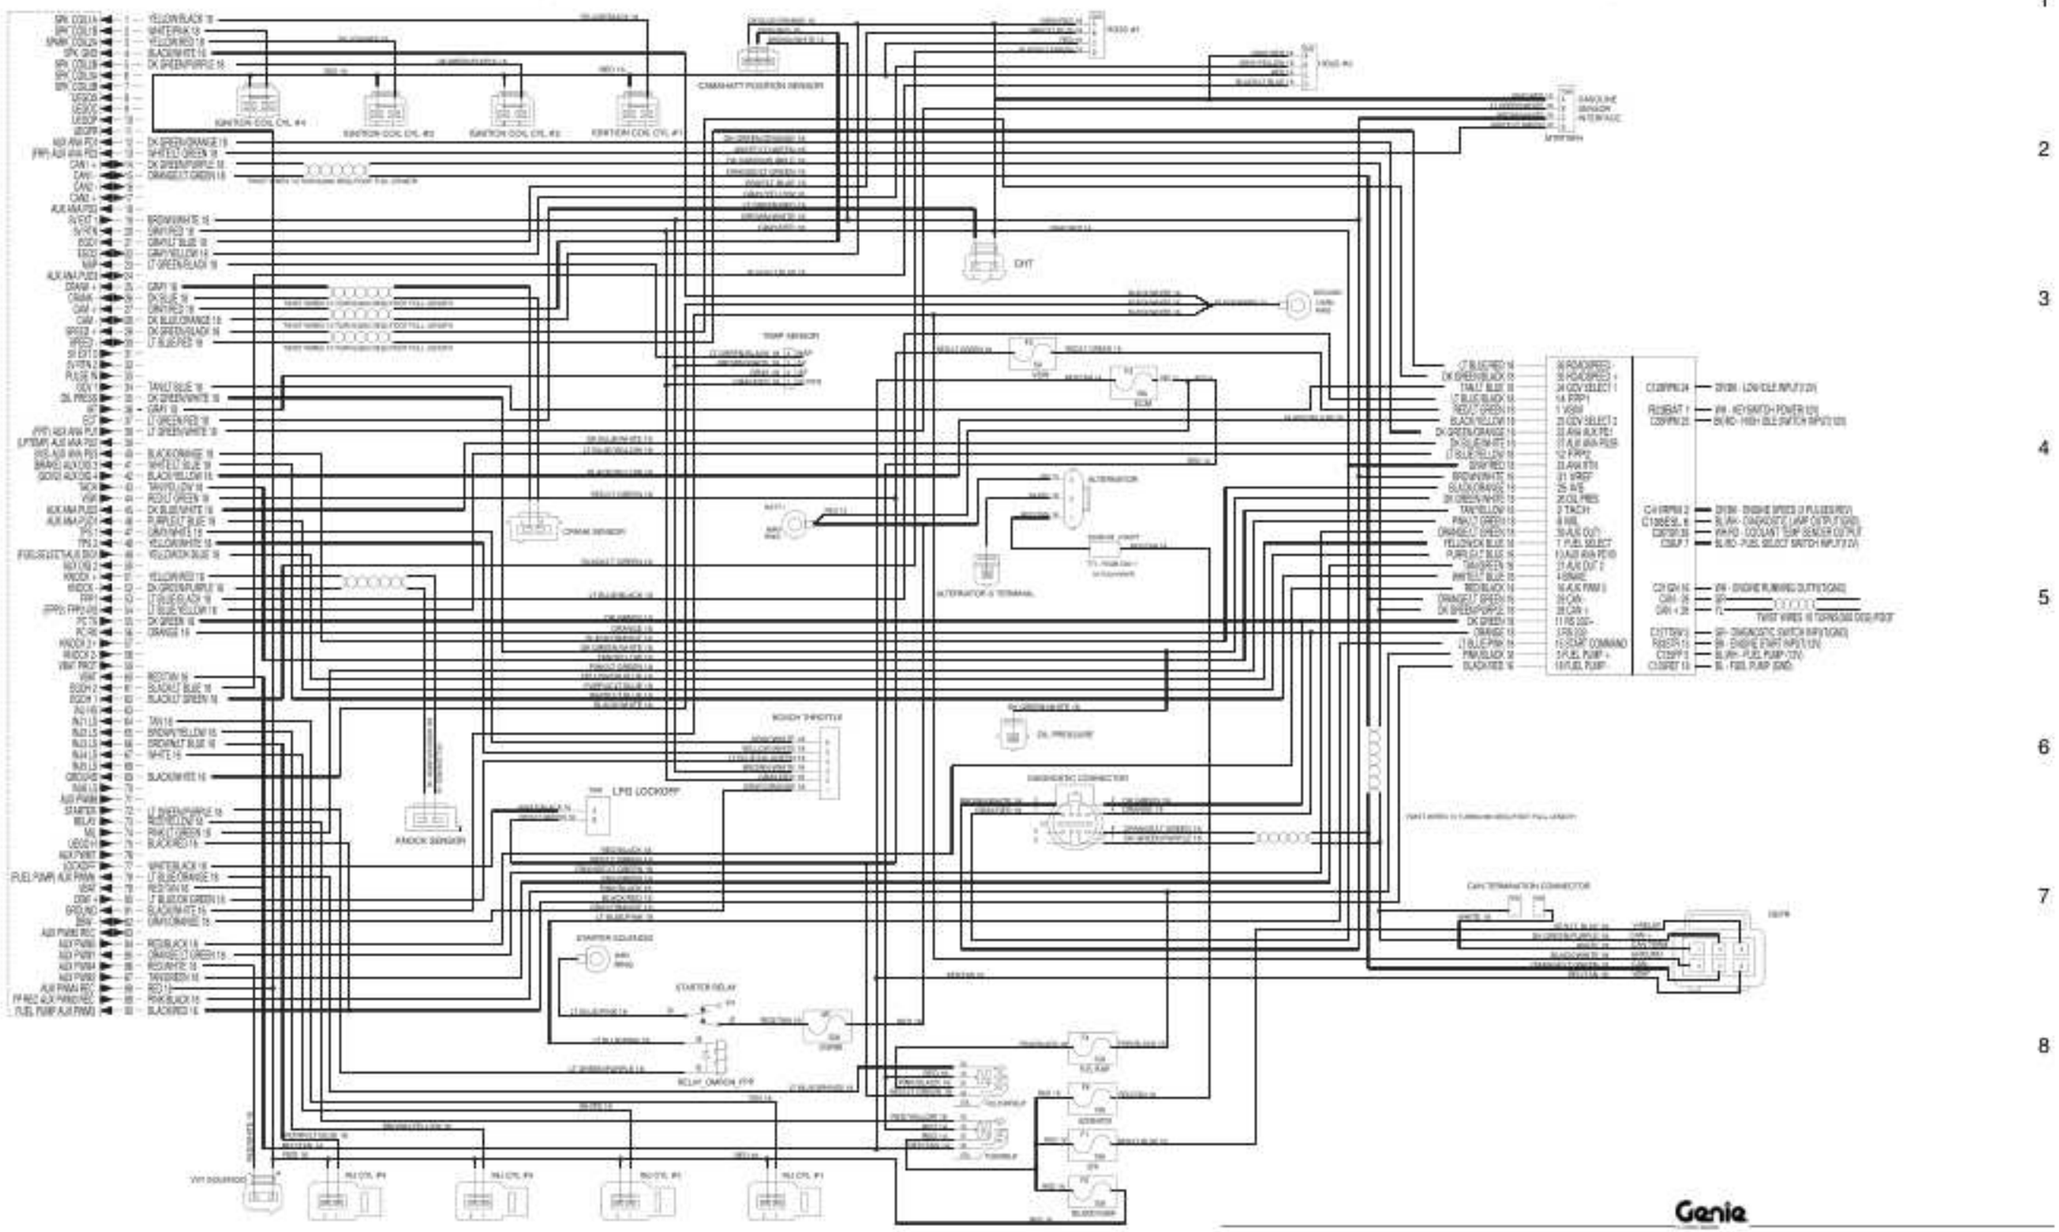

MidWestTech | Terex Genie S-40, S-45, S-40 Trax, S-45 Trax Telescopic Boom Lift Service Manual | Publication 826364

Order the manual at mid-west-tech.com >