# 1150E and 1155E Crawler

# Parts Catalog

**Bur 8-2685**

CASE CONSTRUCTION



Order the manual at mid-west-tech.com >

# PICTORIAL SECTION INDEX



GENERAL 1


ENGINE 2



FUEL SYSTEM 3



ELECTRICAL 4

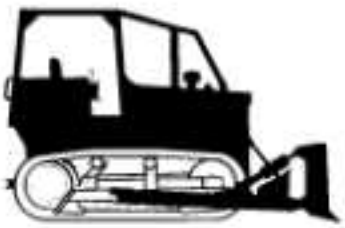

STEERING/
TRACK 5



POWER TRAIN 6



BRAKES 7



HYDRAULIC 8



CHASSIS 9

NUMERICAL
INDEX 10



MidWestTech | Case 1150E, 1155E Crawler Parts Catalog | Publication 8-2685 Order the manual at mid-west-tech.com >

# GENERAL INFORMATION

## Indexes

Section 1 of this catalog contains a SN and P.I.N. location guide, alphabetical index, pictorial index of the sections included, and pictorial index(es) for quick location of hoses and tubes (and other system components in some catalogs). An alphabetical index also appears at the beginning of each section. Section 10 is the Numerical Index which lists all part numbers in alpha/numeric order with their page location and reference number.

## Illustrations

The arrangement of this parts catalog is for easy identification of parts. All parts are illustrated in "exploded views" in proper relation to each other. Reference numbers used in the illustrations refer to those on the text pages. The text pages list reference number, part number, part description and the quantity required.

## Abbreviations

P.I.N. "Product Identification Number"

SN "Serial Number"

NSS "Not Serviced Separately" in the part number column indicates this part is not available for service.

REF "Reference" in the part number column indicates this part has special service information. The page where this information can be found is given in the part description column.

UAR "Use As Required" in the quantity required column indicates the number of parts used is determined by service needs.

## Right-Hand and Left-Hand Identification

The reference to right-hand and left-hand in this catalog is identified by the operator standing at the rear of the basic unit (without rear attachment), looking toward the front of the machine (in normal forward travel). For pages covering any machine attachments, right-hand and left-hand are defined by the operator sitting in the position for proper operation of the attachment.

## Catalog Revisions and Supplements

Changes to the product may make it necessary to revise or add pages to this catalog. A cover sheet will list all pages released in a revision or supplement. Each new or revised page will have a new issue date. All revised and new pages must be put into the parts catalog as soon as they are received.

## Parts Orders

Orders must specify product model, all necessary serial numbers, correct part number, complete description, quantity required, method of shipment, and shipping address.

## Text Format Explanation

An assembly may contain service items. The component parts of an assembly or subassembly are indented. The quantity required column lists the number of assemblies required for a completed machine, and the number of components required in a complete assembly or subassembly.

The example below illustrates the use of indents and other text page elements explained on this page.

# HYDRAULIC FILTER

| REF. | PART NO. | DESCRIPTION | REQ'D. |
|---|---|---|---|
| 1 | D4356734 | FILTER ASSEMBLY - hydraulic oil, P.I.N. 7534840 and after | 1 |
| | D61903 | HEAD ASSEMBLY - filter | 1 |
| 2 | NSS | HEAD - filter, order D61903 head assembly | 1 |
| 3 | D58199 | VALVE - bypass | 1 |
| | D43800 | KIT - filter element, replaces D35700 element kit | 1 |
| 4 | NSS | ELEMENT - filter, order D43800 element kit | 1 |
| 5 | A27994 | O-RING - filter | 1 |
| 6 | D61948 | HOUSING -filter | 1 |
| 7 | REF | CANOPY - ROPS, order from Machinery Price List | 1 |
| 8 | 843065C1 | HOSE - 132 inch (3353 mm) long, reservoir to pump | 1 |
| 9 | 113-323 | BOLT - hex, 7/16 NC x 1-3/4 inch | 2 |
| 10 | 814-8030 | BOLT - hex, 8 - 1.25 x 30 mm | 4 |

MidWestTech | Case 1150E, 1155E Crawler Parts Catalog | Publication 8-2685 Order the manual at mid-west-tech.com >

# ALPHABETICAL INDEX


A

Adjuster - track ..... 5-15
Air Cleaner Assembly ..... 2-135
Air Cleaner Mounting ..... 2-129,2-133
Air Conditioning ..... 9-109,9-127
Air Restriction Indicator ..... 2-137
Air Venting System -
  radiator, dozer models ..... 2-121
Alarm - backup ..... 4-59
Alternator Assembly ..... 4-15,4-17
Alternator Mounting Parts ..... 2-111,2-113
Armrests ..... 9-69

B

Backup Alarm ..... 4-59
Batteries and Cables ..... 4-25,4-27
Belt
  Air Conditioning Compressor ..... 9-119,9-125
  Alternator ..... 2-111,2-113
  Fan ..... 2-111,2-113
  Seat ..... 9-69
Blade
  ATP Dozer Models ..... 9-21
  Long Track AT Dozer Models ..... 9-27
  Tilt Dozer Models ..... 9-15
Block - cylinder, engine ..... 5-53,2-83
Block Heater - engine ..... 2-55,2-75
Blower - air conditioning condenser ..... 9-113
Blower - cab, inside cab roof ..... 9-101,9-103
Brake System
  Brake Assembly - transmission ..... 7-3,7-5
  Parking - manual ..... 7-11
  Power ..... 7-7,7-9
Brush Screens - ROPS ..... 9-81,9-83
Bucket and Teeth - loader ..... 9-9,9-11

C

Cab
  Air Conditioning ..... 9-109,9-127
  Air Filter ..... 9-99
  Blower - inside cab roof ..... 9-101,9-103
  Compressor - air conditioning ..... 9-119,9-127
  Condenser - air conditioning ..... 9-109,9-111
  Condenser Blower - cooling ..... 9-113
  Control Panel ..... 4-47,4-53
  Door ..... 9-91
  Electrical ..... 4-47,4-53,9-109,9-127
  Frame and Mounting ..... 9-89
  Glass ..... 9-95,9-97
  Headliner ..... 9-99
  Heating System ..... 9-105,9-107
  Screen - rear ..... 9-93
  Window - door ..... 9-93

C

Cab - cont.
  Windshield Wipers ..... 4-55,4-57
Camshaft - engine ..... 2-49,2-51
Canopy - ROPS ..... 9-81,9-83
Carrier Roller Assembly ..... 5-19
C-frame - dozer ..... 9-17,9-19,9-25
Chain - track ..... 5-25,5-27
Clutch - transmission ..... 6-17,6-21
Cold Start System ..... 4-63
Compressor - air conditioning ..... 9-119,9-127
Connecting Rods - engine ..... 2-85,2-99,2-101
Controls
  Brake - manual and power ..... 7-7,7-11
  Cab Accessories ..... 4-47,4-53
  Engine Throttle ..... 3-3,3-5
  Equipment - levers
    and linkage ..... 8-83,8-93,8-97,8-105
  Forward, Reverse and Steering ..... 6-61
  Fuel Shut-Off ..... 4-23
  Selector Valve ..... 8-47
Control Tower - transmission ..... 9-51,9-53
Control Valve - equipment ..... 8-107,8-117
Control Valve Mounting - equipment ..... 8-81,8-95
Coolant Conditioning System - radiator ..... 2-121
Coolant Recovery System - radiator ..... 2-119,2-123
Cooling System - transmission ..... 6-53,6-55
Counterweights ..... 9-33
Cover - rear, battery access ..... 9-49
Crankshaft - engine ..... 2-85,2-89
Cylinders - hydraulic
  Clam Bucket ..... 8-61
  Dozer Angle ..... 8-75,8-77
  Dozer Lift ..... 8-63,8-67
  Dozer Tilt ..... 9-69,8-73
  Loader Bucket Tilt ..... 8-59
  Loader Lift ..... 8-57
  Ripper ..... 8-79

D

Decals ..... 9-129,9-131
Dipstick
  Engine Oil ..... 2-115
  Transmission Oil ..... 6-13
Dome Lamp - cab ..... 4-47,4-53
Door - cab ..... 9-91
Door - rear access ..... 9-49
Dozer
  Beam - push, tilt dozer models ..... 9-13
  Blade ..... 9-15,9-21,9-27
  C-frame ..... 9-17,9-19,9-25
Drawbar ..... 9-33
Drive Shaft ..... 6-9




MidWestTech | Case 1150E, 1155E Crawler Parts Catalog | Publication 8-2685 Order the manual at mid-west-tech.com >