1620
1640
1660
1680
1688
1600
Axial Flow Combines


SERVICE MANUAL


8-29186

CASE IH AGRICULTURE

MidWestTech | Case 1620, 1640, 1660, 1680, 1688, 1600 Axial Flow Combine Service Manual | Publication 8-29186

Order the manual at mid-west-tech.com >

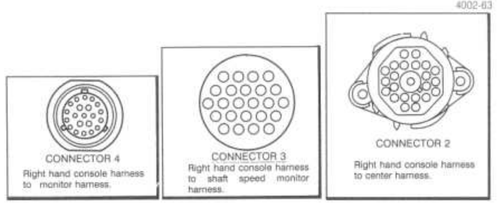

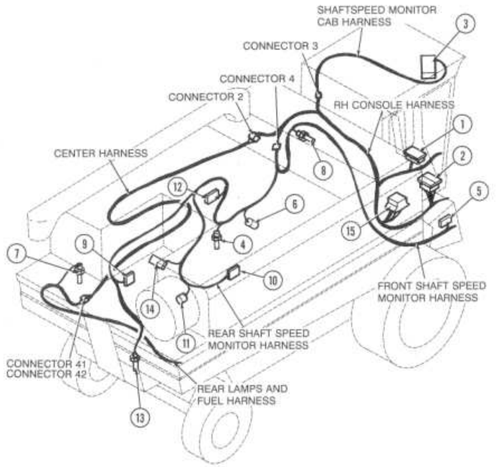

Rac 8-95860

Issued 8-90 Printed in U.S.A.

CONNECTOR 42
Rear lamps and fuel harness to center harness.

CONNECTOR 41
Rear lamps and fuel harness to center harness.

FUSE
Protects the electrical system from high output or a ground in the electrical system.

SPLICE
Connects one or more circuits that do the same function.

CHASSIS GROUND
Completes battery circuit.

SENSOR
Transmits an impluse to a command center.


CONNECTOR
Connects one harness to another harness.

FEEDBACK MODULE
A power source or a ground source for electronic components (Junction Block).

MODULE
A self contained electronic unit

Digital Tachometer Wiring

Shaft Speed Monitor Wiring

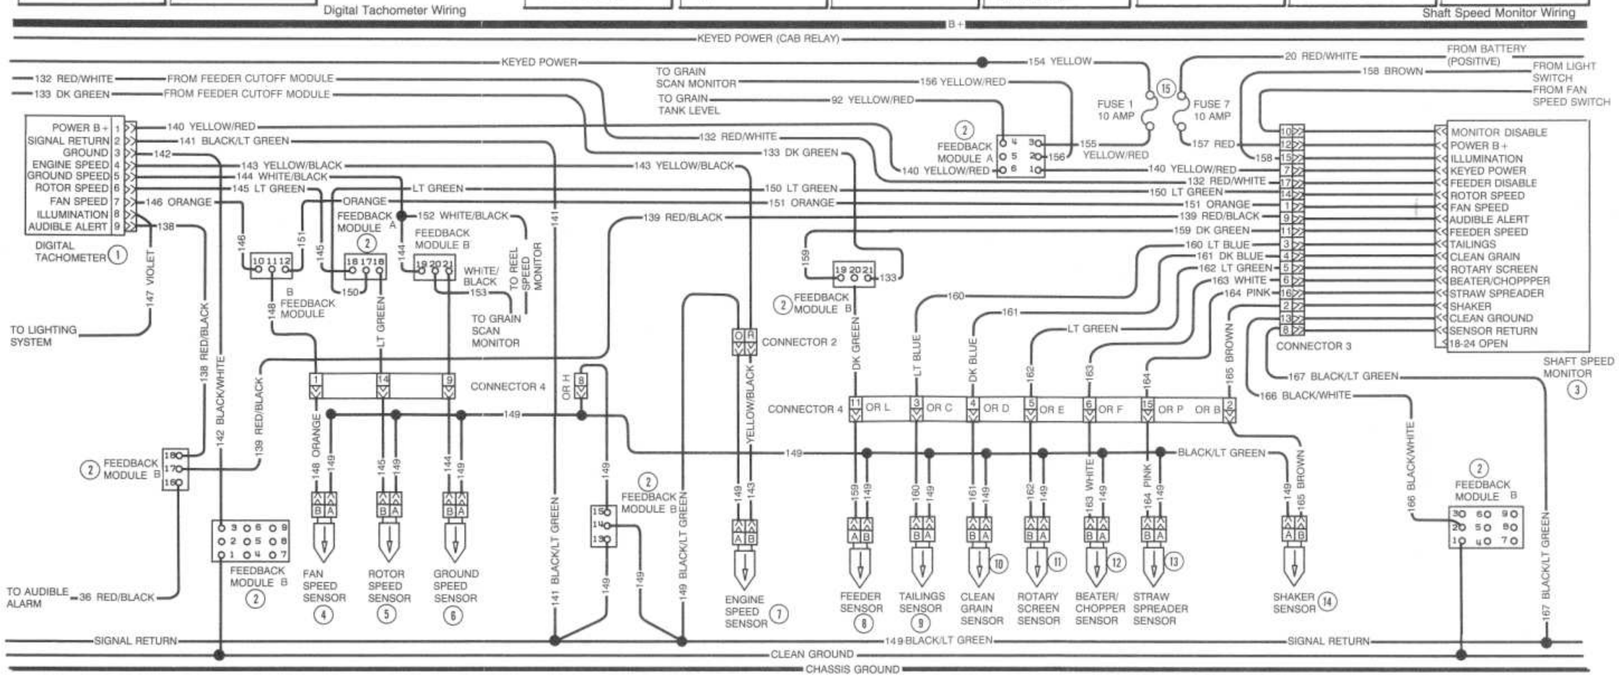

Order the manual at mid-west-tech.com >