# 1620, 1640, 1660, 1670, 1680, 1688 Axial-Flow Combines


## Service Manual


Don 8-29206

CASE IH

MidWestTech | Case 1620, 1640, 1660, 1670, 1680, 1688 Axial-Flow Combine Service Manual | Publication 8-29206

Order the manual at mid-west-tech.com >

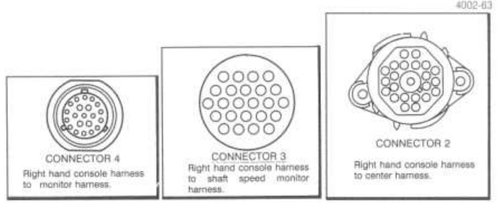

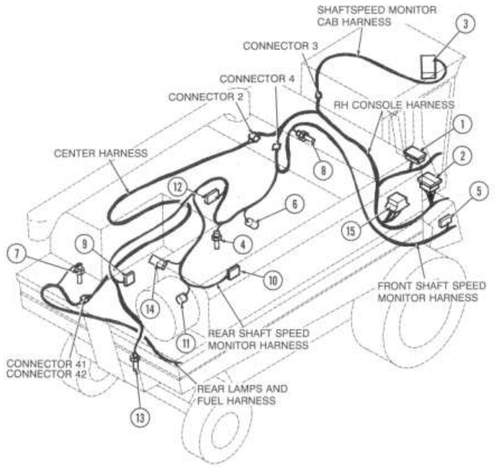
Rac 8-95860

Issued 8-90 Printed in U.S.A.

CONNECTOR 42
Rear lamps and fuel harness to center harness.

CONNECTOR 41
Rear lamps and fuel harness to center harness.

FUSE
Protects the electrical system from high output or a ground in the electrical system.

SPLICE
Connects one or more circuits that do the same function.

CHASSIS GROUND
Completes battery circuit.

SENSOR
Transmits an impluse to a command center.


CONNECTOR
Connects one harness to another harness.

FEEDBACK MODULE
A power source or a ground source for electronic components (Junction Block).

MODULE
A self contained electronic unit

## Digital Tachometer Wiring

## Shaft Speed Monitor Wiring

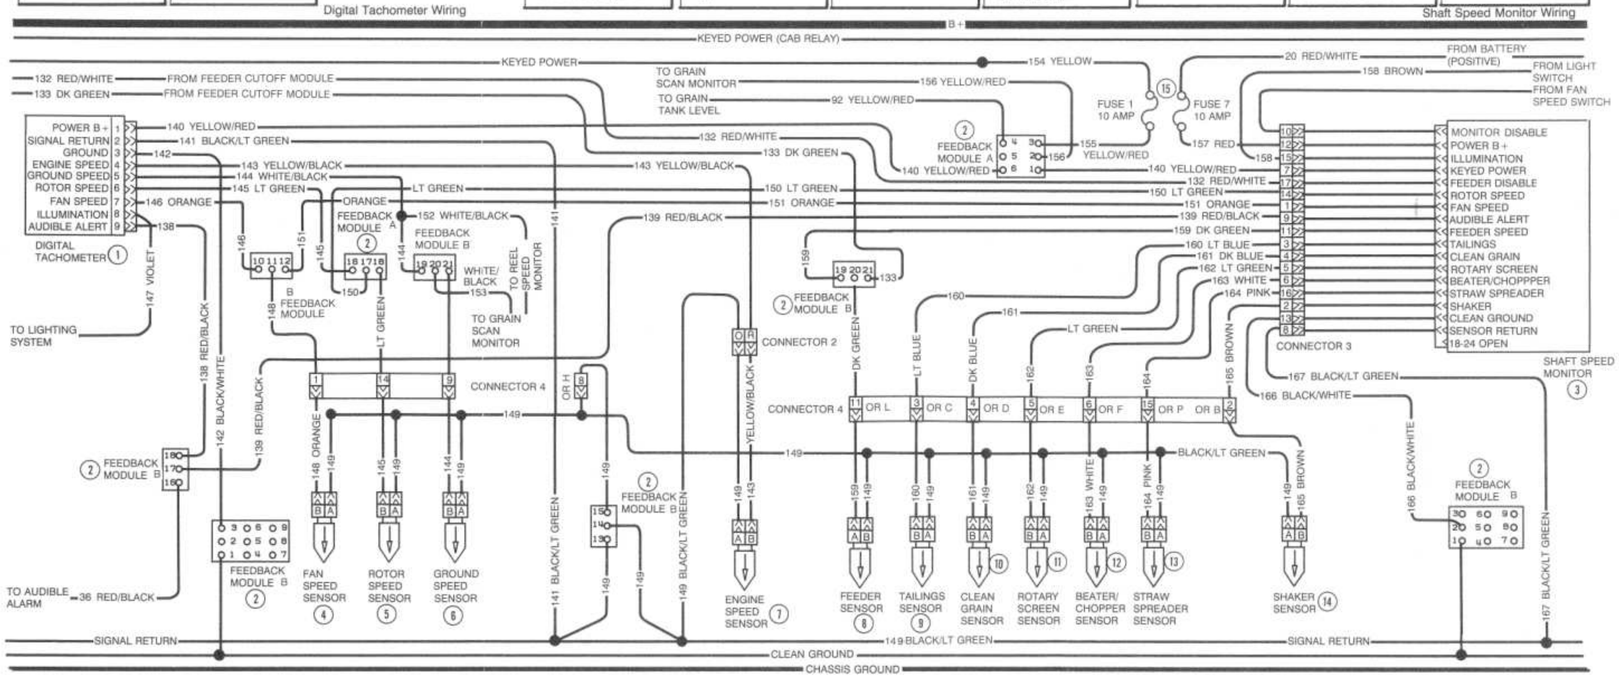




Order the manual at mid-west-tech.com >