1845B
Uni-Loader


Service Manual

8-41760 R1

CASE

MidWestTech | Case 1845B Uni Loader Service Manual | Publication 8-41760

Order the manual at mid-west-tech.com >

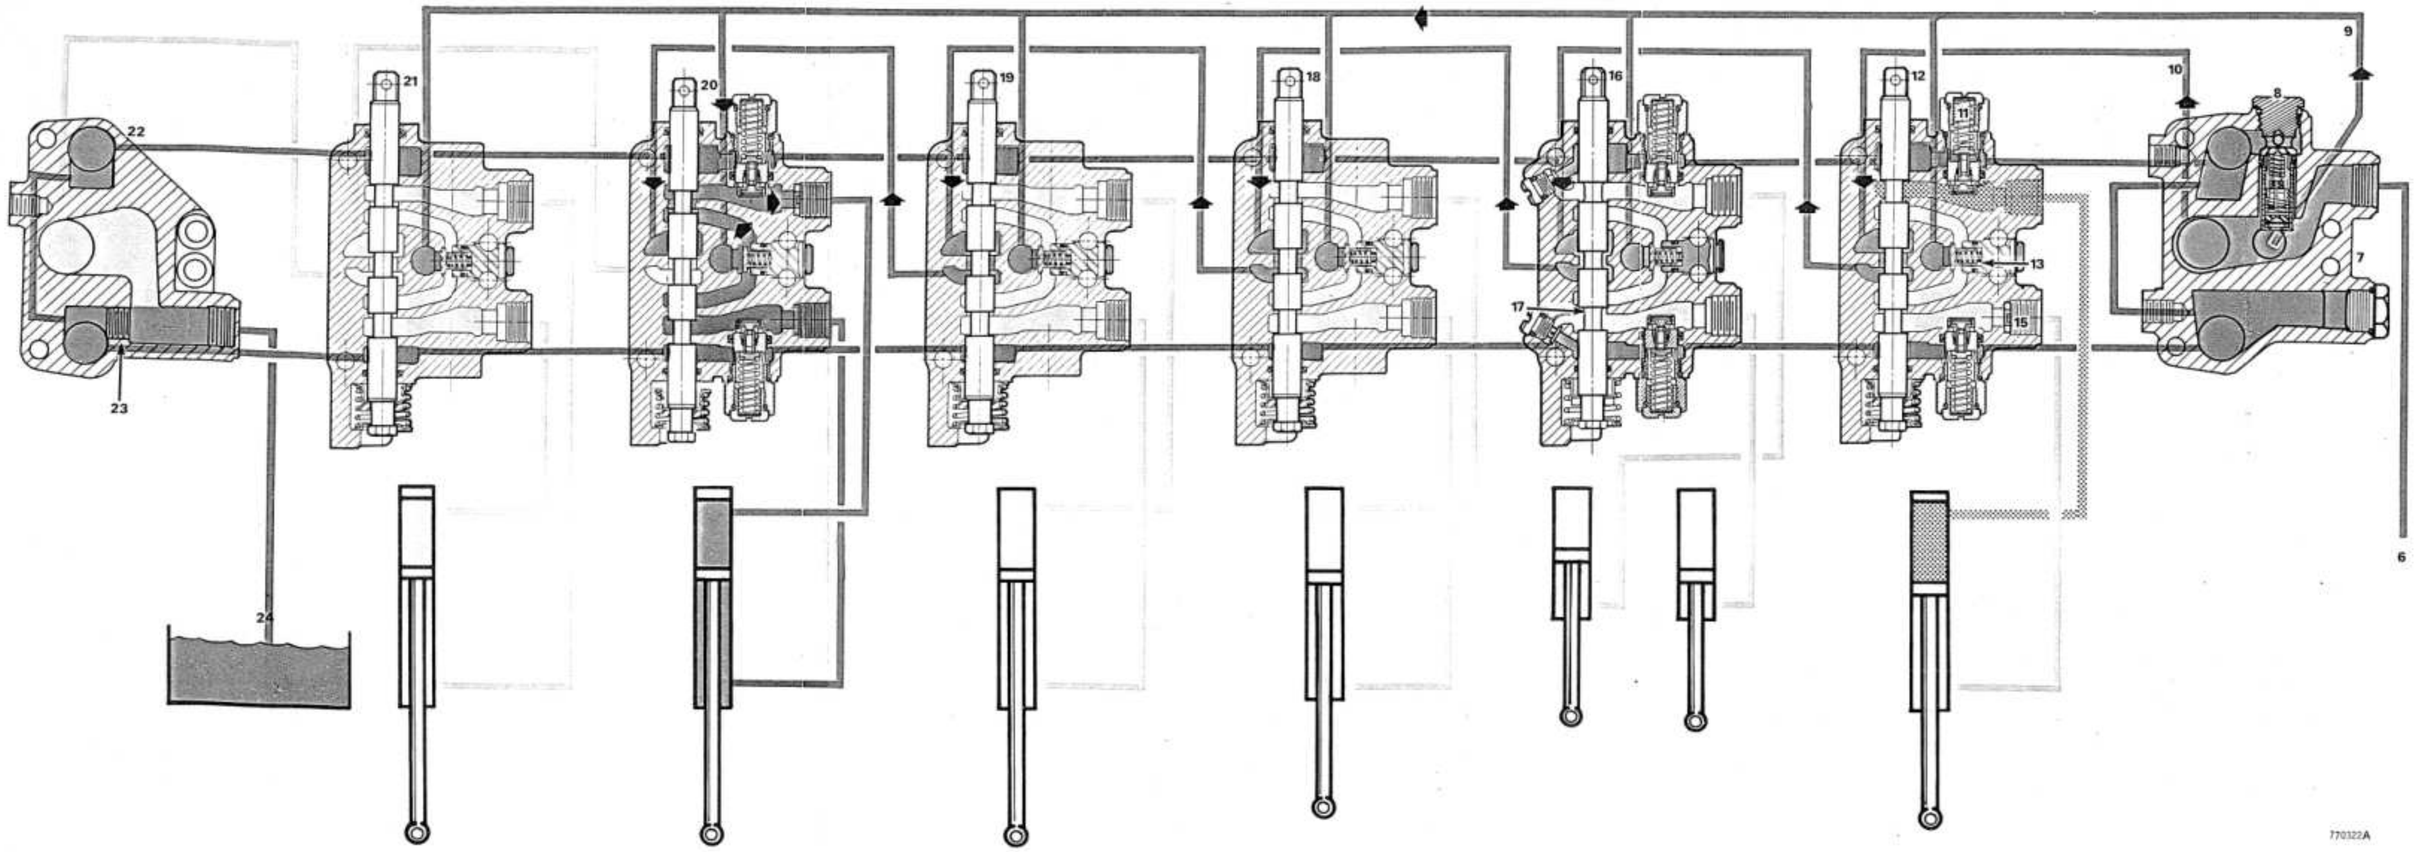

1. PUMP FLOW
2. RETURN OIL
3. STATIC OIL
4. OIL DISPLACED FROM BOOM CYLINDER
5. RESERVOIR
6. FROM PUMP
7. INLET/OUTLET
8. MAIN RELIEF VALVE
9. PARALLEL PASSAGE (INTERNAL)
10. OPEN CENTER PASSAGE (INTERNAL)
11. SECONDARY RELIEF VALVE
12. BOOM
13. LOAD CHECK VALVE
14. A PORT
15. B PORT
16. SWING
17. ANTICAVITATION VALVE
18. LEFT-HAND STABILIZER
19. RIGHT-HAND STABILIZER
20. DIPPER
21. BUCKET
22. OUTLET
23. PLUG
24. TO LOADER CONTROL VALVE INLET

Dipper Spool Actuated, Top Circuit Relief Valve in Boom Section Open

Order the manual at mid-west-tech.com >