W11B
Loader

Service Manual

8-41910-R3

MidWestTech | Case W11B Loader Service Manual | Publication 8-41913

Order the manual at mid-west-tech.com >

1001

SAFETY RULES
SERVICE MANUAL INTRODUCTION
AND
TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Safety Rules 1001-2

Service Manual Introduction 1001-4

Product Identification Number (PIN) and Serial Numbers 1001-5

Torque Specifications 1001-6

Grade 5 Bolts, Nuts, and Studs 1001-6

Grade 8 Bolts, Nuts, and Studs 1001-6

Steel Hydraulic Fittings 1001-7

Split Flange Mounting Bolts 1001-7

Written In *Clear And Simple English*

CASE CORPORATION

8-41910

Printed in U.S.A.
Issued May 1984

MidWestTech | Case W11B Loader Service Manual | Publication 8-41913 Order the manual at mid-west-tech.com >

SAFETY RULES

This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death. 1-1-C

NOTE: *To prevent injury on job, follow the Warning, Caution, and Danger notes in this section and other sections throughout this manual. Follow the instructions carefully.*

The procedures recomended and shown in this manual are good, effective service methods. However, all possible procedures and service hazards may not be covered. Therefore, if you use a tool or procedure not recommended, you must make sure that the method you select is a safe method.

Put the warning tag shown below on the key for the key switch when you are servicing or repairing this machine. One warning tag is on every new machine. You can buy additional warning tags, part number 331-4614, from Service Parts Supply.






WARNING: *Read operator's manual to familiarize yourself with control lever functions.* 46-27

WARNING: *Operate tractor and equipment controls from the seat position only. Any other method could result in serious injury.* 48-55

WARNING: *This is a one man machine, no riders allowed.* 35-8



WARNING: *If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.* 45-3-A

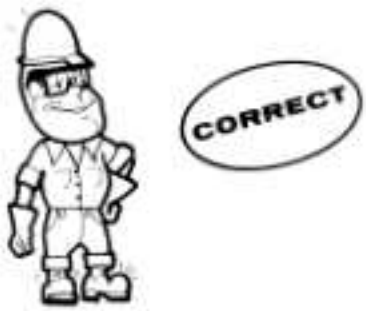

WARNING: *When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.* 35-4

Order the manual at mid-west-tech.com >

WARNING: *Whenever the bucket must be raised to aid in servicing, block the loader arms in place with lift cylinder support strut or a suitable safety stand.* 23-7-B



WARNING: *When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.* 47-44

WARNING: *When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.* 47-45

WARNING: *Locate the machine on level ground and block the wheels securely before working under the machine. Failure to follow the above procedure can result in personal injury.* 46-77



CAUTION: *Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. DO NOT use your hand to check for leaks; use a piece of cardboard or wood.* 40-6-A

WARNING: *Use insulated gloves or mittens when working with hot parts.* 47-41A

CAUTION: *When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.* 46-17

CAUTION: *When using a hammer to remove and install pivot pins or separate parts, using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).* 46-13

CAUTION: *When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times.* 40-8


CAUTION: *Use suitable floor (service) jacks or chain hoists to raise wheels or track off the floor. Always block machine in place with suitable safety stands.* 40-7-A

CAUTION: *Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this service manual.* 40-10

DANGER: *Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. If you do not have an exhaust pipe extension, open the doors and get outside air into the area.* 48-56



Order the manual at mid-west-tech.com >

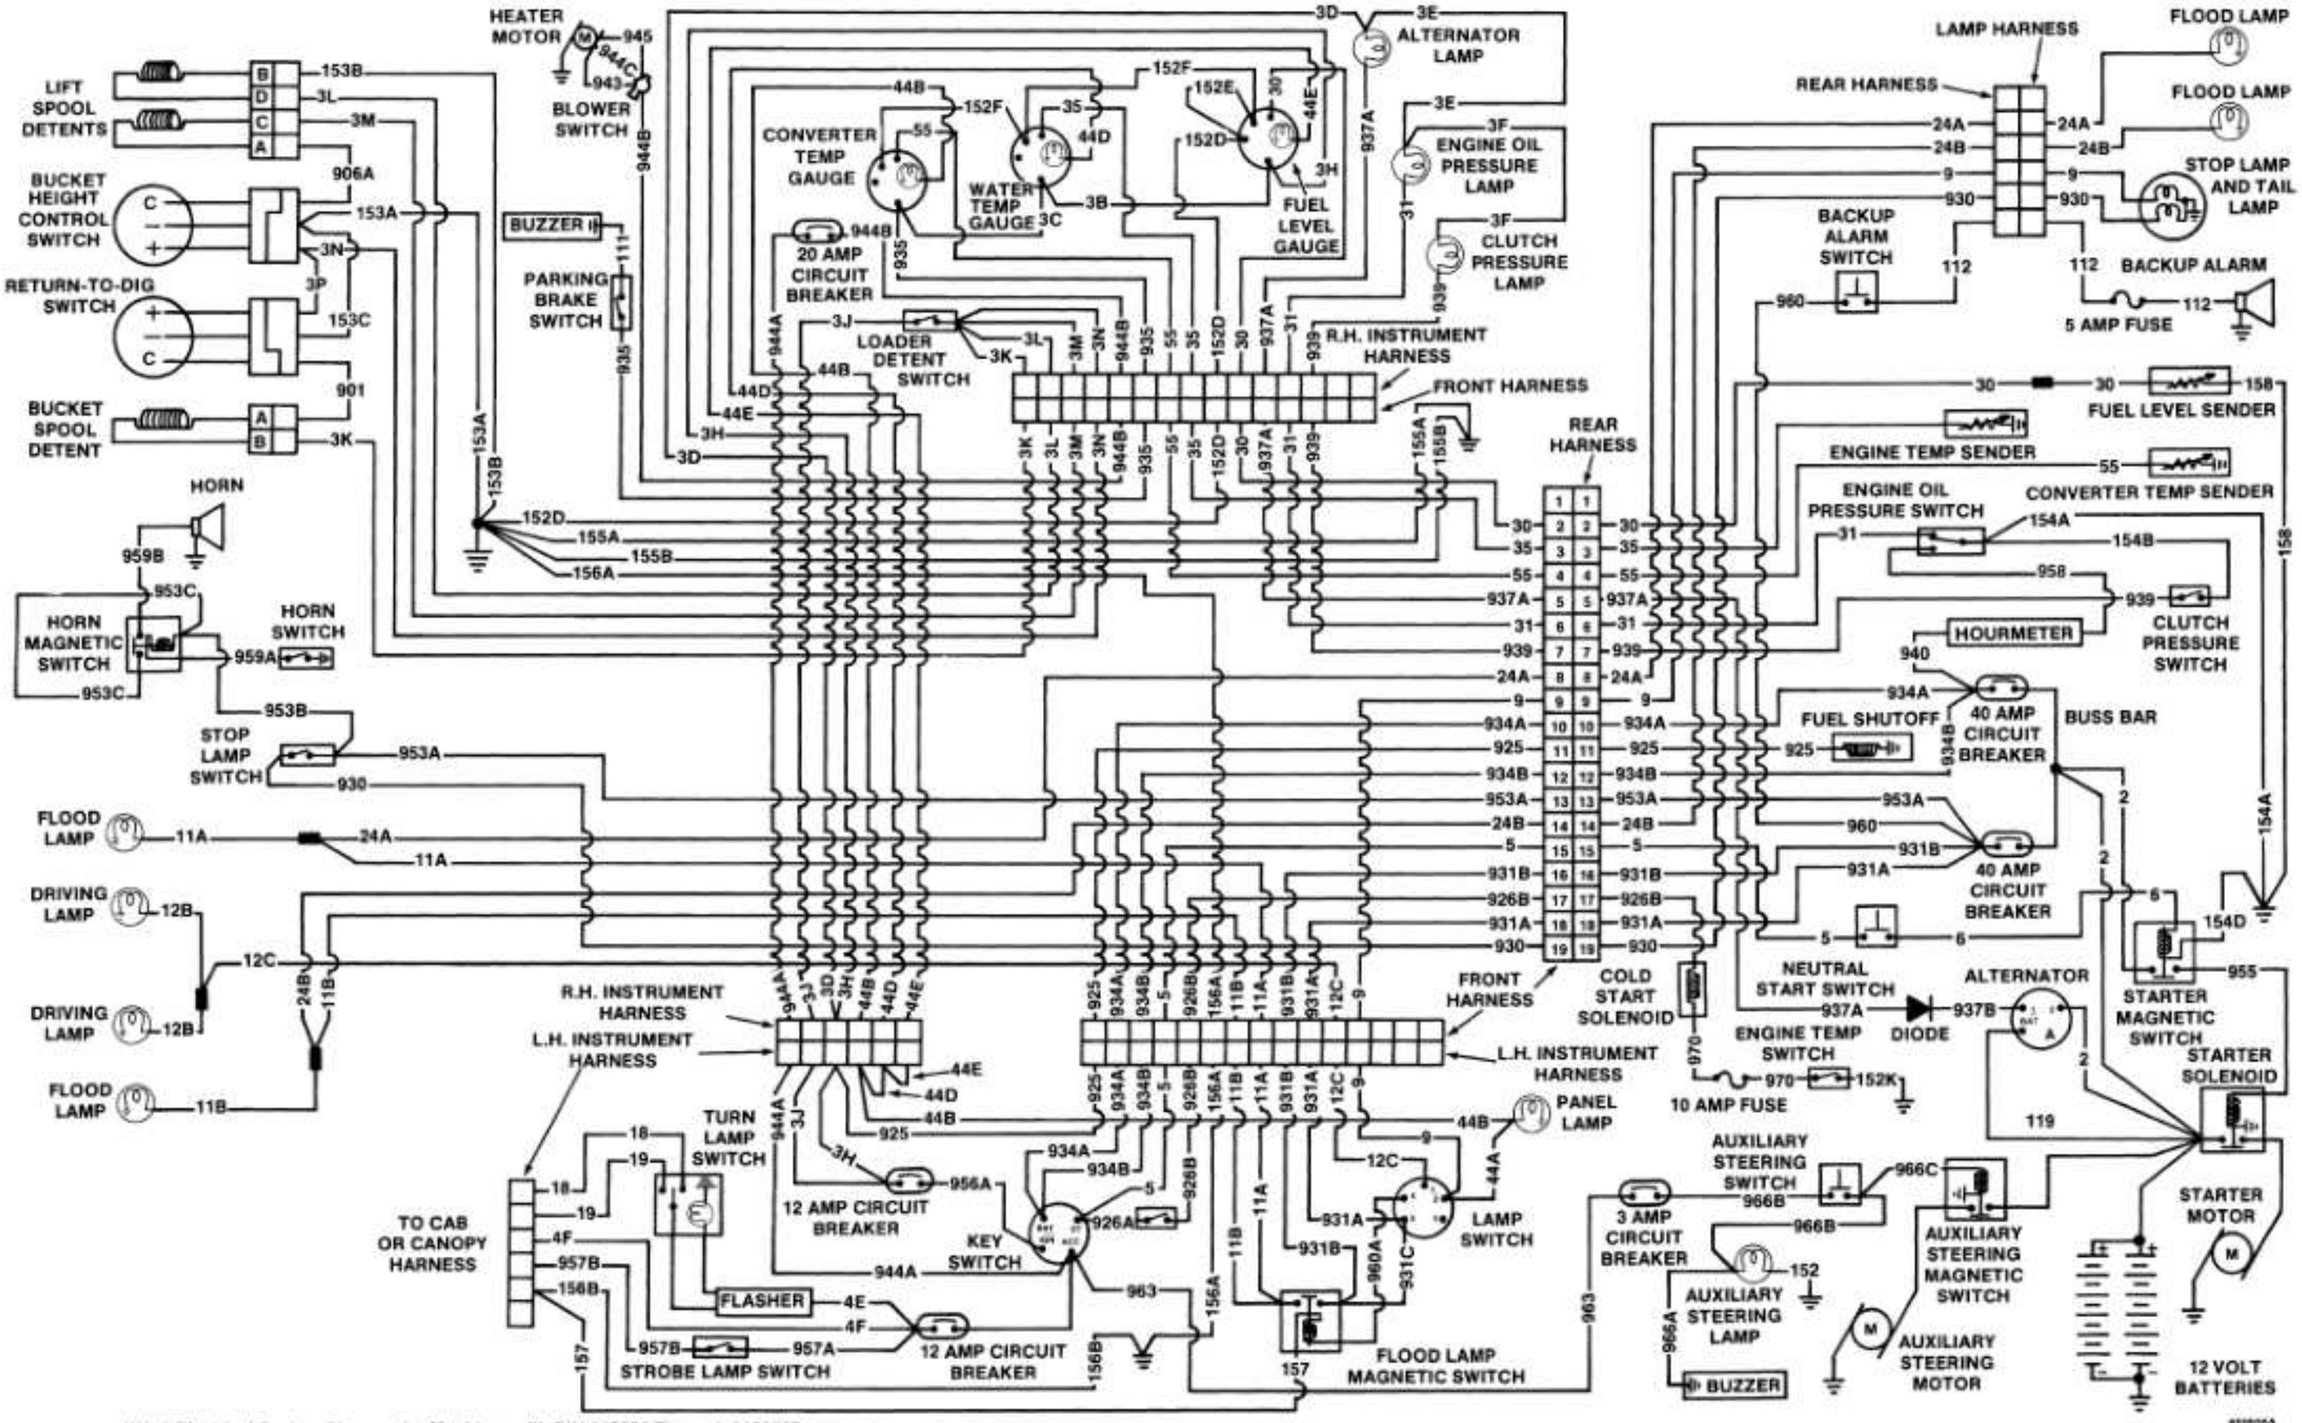

W11B Electrical System Diagram for Machines with PIN 915252 Through 9162787

Revised January 1988

8-71300

Order the manual at mid-west-tech.com >