480E/480E LL
LOADER LANDSCAPER

Service Manual

8-42870


MidWestTech | Case 480E, 480E LL Loader Landscaper Service Manual | Publication 8-42871

Order the manual at mid-west-tech.com >

DISASSEMBLY


1. Remove the clutch cutout solenoid from the power shuttle by rotating the clutch cutout solenoid counterclockwise.

2. Remove the control arm from the control valve.

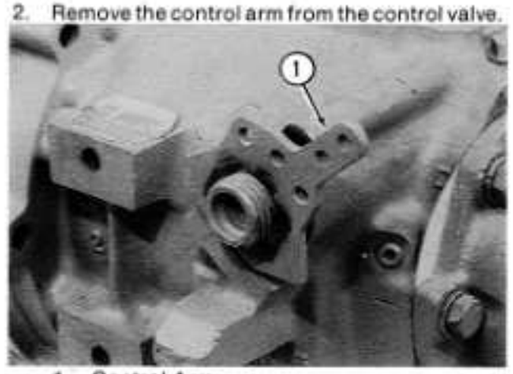


1. Control Arm 004706

3. Remove the snap ring from the control valve.

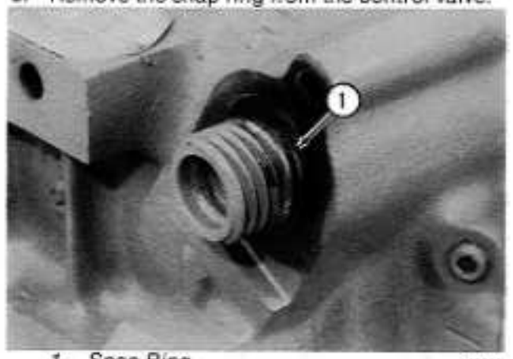

1. Snap Ring 003804

4. Loosen and remove the cap screws and lock washers that hold the cover.

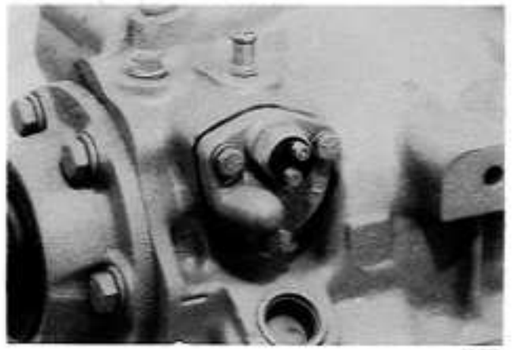


004707

5. Remove the cover, steel ball, and spring.



004844

6. Remove the detent plate.

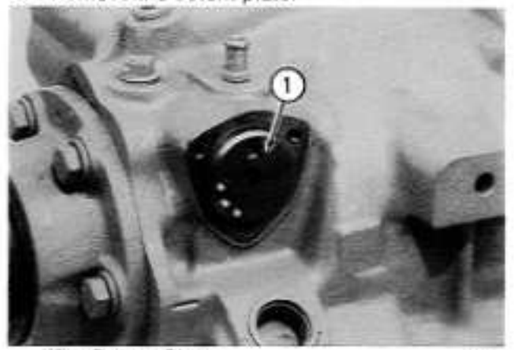

1. Detent Plate 004802

7. Remove the control valve from the housing.



003807

MidWestTech | Case 480E, 480E LL Loader Landscaper Service Manual | Publication 8-42871

Order the manual at mid-west-tech.com >