570MXT
Series 3
Loader Landscaper
Operator's Manual

Print No. 84287121
1st edition
English 01/10

CASE
CONSTRUCTION

MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

CHAPTER 1
GENERAL INFORMATION
RIGHT, LEFT, FRONT, AND REAR OF THE MACHINE 1-2
IDENTIFICATION NUMBERS 1-3
MACHINE COMPONENTS 1-5

CHAPTER 2
SAFETY, AND SAFETY DECALS
TABLE OF CONTENTS 2-1

CHAPTER 3
INSTRUMENTS AND CONTROLS
TABLE OF CONTENTS 3-1

CHAPTER 4
OPERATING INSTRUCTIONS
TABLE OF CONTENTS 4-1

CHAPTER 5
LUBRICATION, FILTERS, AND FLUIDS
TABLE OF CONTENTS 5-1

CHAPTER 6
MAINTENANCE AND ADJUSTMENTS
TABLE OF CONTENTS 6-1

CHAPTER 7
ELECTRICAL
TABLE OF CONTENTS 7-1

CHAPTER 8
SPECIFICATIONS
TABLE OF CONTENTS 8-1

CHAPTER 9
INDEX 9-1

MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >

Chapter 2

SAFETY, AND SAFETY DECALS

TABLE OF CONTENTS

GENERAL AND SPECIFIC SAFETY INFORMATION 2-3
UTILITY SAFETY 2-4
OPERATOR PRECAUTIONS 2-5
PERSONNEL PRECAUTIONS 2-5
OPERATOR - GENERAL 2-5
PROPER ENTRY AND EXIT 2-5
STARTING AND STOPPING PRECAUTIONS 2-6
OPERATING PRECAUTIONS 2-6
MAINTENANCE PRECAUTIONS 2-7
FUEL HANDLING PRECAUTIONS 2-8
BURN PREVENTION 2-8
HAZARDOUS CHEMICAL PRECAUTIONS 2-9
TRANSPORTING PRECAUTIONS 2-9
ROLL-OVER PROTECTIVE STRUCTURE 2-9
FIRE EXTINGUISHER 2-9
SEAT BELT PRECAUTIONS 2-9
SPECIFIC PRECAUTIONS TO THIS MACHINE 2-10
DECALS 2-11
HAND SIGNALS 2-19


MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >

Chapter 3
INSTRUMENTS AND CONTROLS

TABLE OF CONTENTS

OPERATOR'S COMPARTMENT CONTROLS 3-3
TRANSMISSION CONTROLS 3-5
PARKING BRAKE 3-7
LOADER CONTROLS 3-8
LIFT ARM AND BUCKET CONTROL 3-8
CLAM CONTROL AND LOCKOUT 3-9
LOADER CONTROL HANDLE SWITCHES 3-11
CONSOLE CONTROLS 3-12
INSTRUMENT CLUSTER 3-16
THREE-POINT HITCH CONTROL 3-19
FLOW CONTROL REGULATOR 3-24
WINDSHIELD AND CAB CONTROLS 3-25
STANDARD PEDESTAL SEAT 3-26
MECHANICAL SUSPENSION SEAT 3-27
CAB AND CANOPY OPTIONS 3-28

MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >

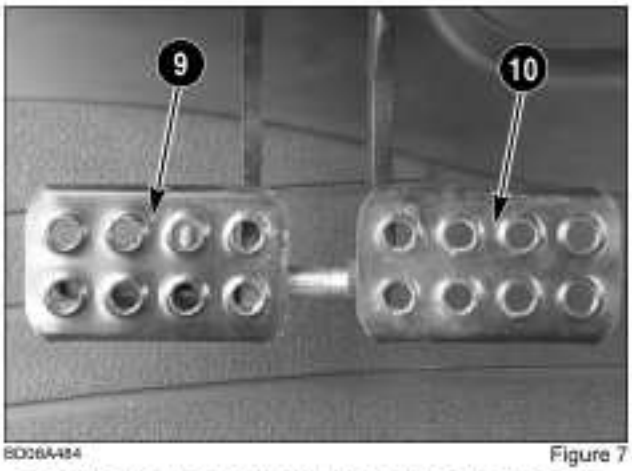

BD06A484 Figure 7

BRAKE PEDALS SHOWN WITH PEDAL LOCK ENGAGED

9. LEFT BRAKE PEDAL:


With this brake pedal lock *disengaged*, push the pedal to help turn the machine to the left.

10. RIGHT BRAKE PEDAL:

With this brake pedal lock *disengaged*, push the pedal to help turn the machine to the right.

WARNING: *Always lock the brake pedals together before you travel on roads or when you operate the machine in 3rd or 4th gear. See the instructions in this manual for brake pedals. Failure to comply could result in machine damage, injury or death.*

BRAKE PEDAL LOCK:

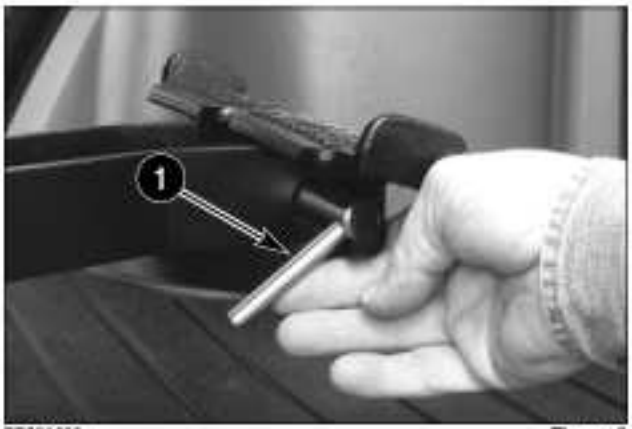

BD06A089 Figure 8

1. BRAKE PEDAL LOCK LEVER

Move the lever up and slide the locking pin all the way to the right into the lock ENGAGED position. In this position, both brake pedals will be locked together.



BD06A088 Figure 9

BRAKE PEDAL LOCK ENGAGED



BD06A090 Figure 10

BRAKE PEDAL LOCK DISENGAGED


Move the lever up and slide the locking pin all the way to the left into the lock DISENGAGED position. In this position, the pedals will function separately.

MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >

50 HOUR MAINTENANCE

FUEL FILTER (PRIMARY)

Check the primary fuel filter for water or sediment every 50 hours of operation.

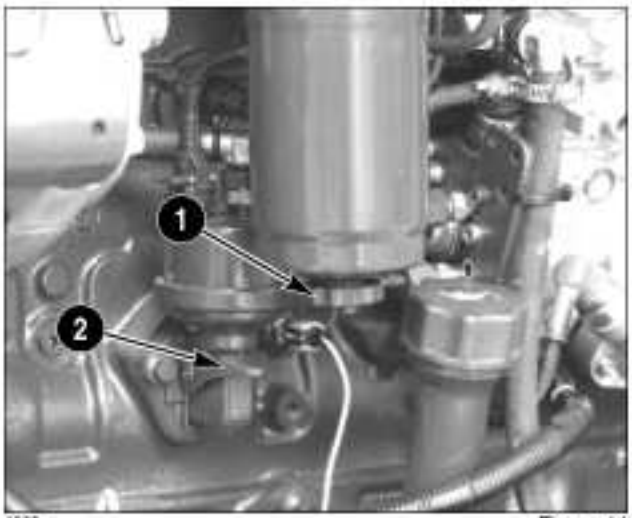

4632 Figure 44

1. FUEL FILTER DRAIN VALVE
2. HAND PRIMER

1. Hold a small glass container under the main filter and loosen the drain valve.
2. Use the hand primer to drain fuel from the filter.

NOTE: *If there is no fuel when you operate the hand primer rotate, the engine 1/3 turn and operate the hand primer again.*

3. Tighten the valve and check the container for water or sediment.
4. If water or sediment is found, the fuel tank should be checked, also.

MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >

1000 HOUR MAINTENANCE


4-WHEEL DRIVE FRONT AXLE OIL CHANGE

Service Specifications

Center bowl capacity . . . . . 5.8 qt (5.5 L)
Each wheel end . . . . . .0.75 qt (0.7 L)
Type . . . . . Hy-Tran® Ultra


Change the oil in the front drive axle after every 1000 hours of operation.

1. Keep all unauthorized personnel clear of the area. Park the machine on a firm, level surface, and place blocks behind and in front of the rear wheels.
2. Place the Direction Control and the Gear Shift Control Levers in NEUTRAL.
3. Use the loader and raise the front wheels about 1 inch (25mm) above the ground.

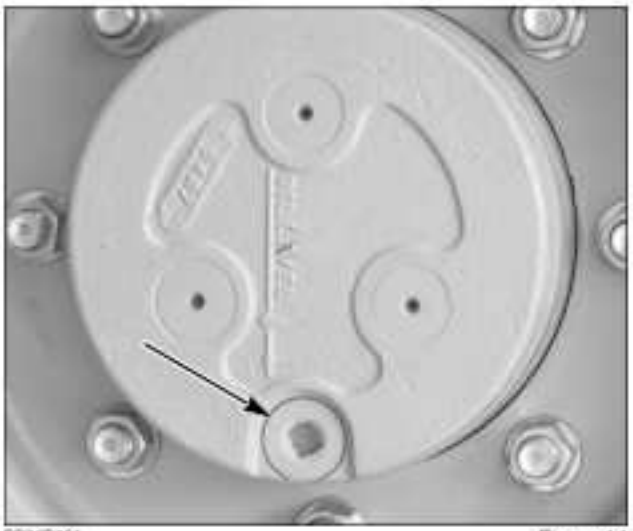

BD28D261 Figure 14

4. Rotate the wheel so that the oil level plug is in the correct position to drain the oil.
5. Place a suitable container under the plug, and remove the plug.
6. Replace the planetary plug and repeat the procedure for the other side.

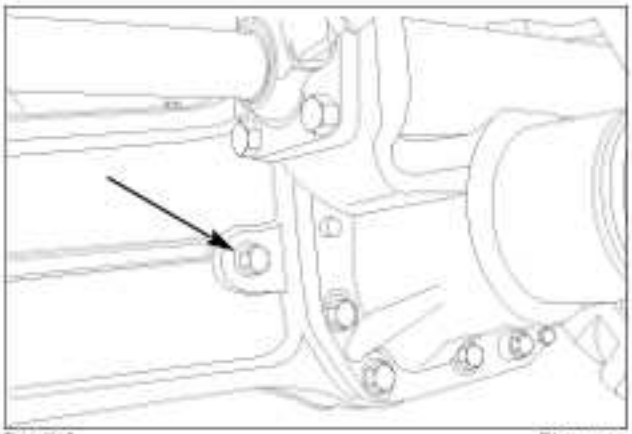

B101H127 Figure 15

7. Place a suitable container under the center bowl plug. Remove the plug for the center bowl and allow oil to drain.
8. Replace the plugs and fill both the axle ends and center both with the specified amount of oil.

MidWestTech | Case 570MXT Series 3 Loader Landscaper Operator's Manual | Publication... Order the manual at mid-west-tech.com >