
OPERATOR'S MANUAL

TD5010
TD5020
TD5030
TD5040
TD5050

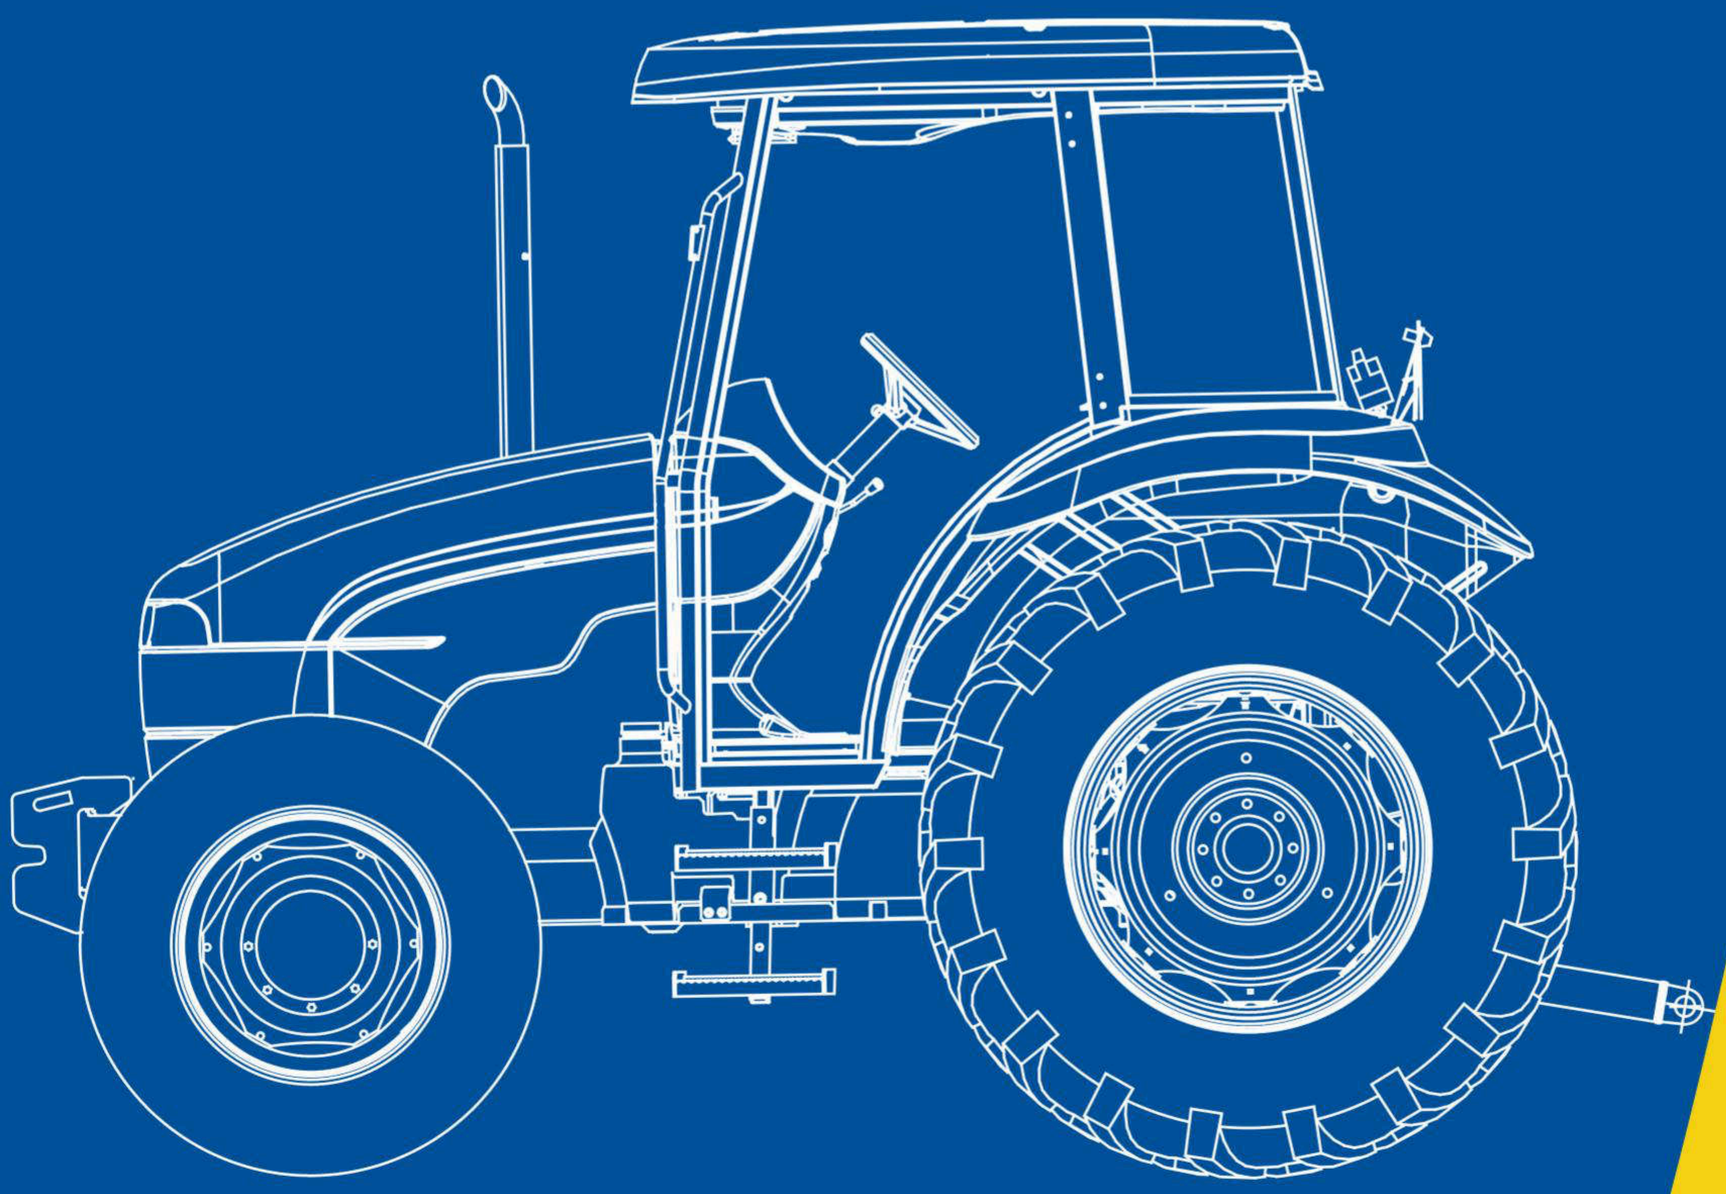

Print No. 84314489
Replaces Print No. 84145269
English 01/10

NEW HOLLAND
AGRICULTURE

Order the manual at mid-west-tech.com >

CONTENTS

Title	Page
Section 1 - Introduction and safety measures	
To the owner	1-1
Tractor identification	1-3
Ecology and the environment	1-6
Safety messages used in this manual	1-7
Working safely	1-8
Safety decals	1-24
International symbols	1-31
Section 2 - General information, controls and instruments	
Safety covers and guards	1-28
Controls and instruments	2-2
Instrument panel	2-3
Instrument console controls	2-9
Right-hand side operating controls	2-10
Left-hand side operating controls	2-11
Cab controls	2-13
Seats	2-14
Cab	2-17
Cab air conditioning system	2-26
Transmission with range gear and shuttle- 30 km/h (19 mph)	2-32
Transmission with creeper and shuttle- 30 km/h (19 mph)	2-35
Mechanically controlled four wheel drive	2-38
Mechanically controlled differential lock	2-40
Towing the tractor	2-44
Loading the tractor onto a transporter	2-44
Checks before using the tractor	2-45
Section 3 - Field Operations	
Starting and stopping	3-3
Power take-off	3-5
Hydraulic lift	3-9
Three-point linkage Cat. II	3-14
Remote control valves	3-23
Wheel track adjustment	3-25
Tires	3-32
Tire combinations	3-36
Ballasting	3-43
Static weight distribution	3-50

MidWestTech | New Holland TD5010, TD5020, TD5030, TD5040, TD5050 Tractor Operator'... Order the manual at mid-west-tech.com >

Section 4 - Lubrication and Maintenance
Access for inspection and maintenance 4-5
Lubrication and maintenance table 4-5
Flexible maintenance 4-8
When the warning light is on 4-10
10-hour / daily service 4-14
50-hour service 4-19
300-hour service 4-23
600-hour service 4-28
1200-hour service 4-32
1200-hour or every 2 years service 4-33
General maintenance 4-39
Electrical system 4-41
Recommendations for bodywork maintenance 4-48
Lubricant capacities and specifications 4-49
Section 5 - Troubleshooting
Introduction 5-1
Engine 5-2
Electrical system 5-5
Hydraulic system 5-6
Three-point linkage 5-7
Brakes 5-8
Cab 5-8
Section 6 - Vehicle Storage 6-1
Section 7 - Accessories
Beacon lamp 7-2
Drawbars and towing attachments 7-3
Hydralic trailer brake 7-9
Section 8 - Specifications and Data
General Dimensions 8-2
Weights 8-4
Engine specifications 8-5
Timing 8-6
Fuel system 8-6
Lubrication 8-7
Cooling system 8-7
Transmission 8-7
Power take-off 8-8
Hydraulic system 8-8
Three-point linkage 8-9
Front axle 8-9
Steering 8-10
4WD front axle 8-10
Brakes 8-11
Bodywork and driving position 8-11
Towing devices 8-11
Electrical system 8-12
Section 9 - Service Forms
Delivery report 9-1
First 50 hour service 9-5
Section 10 - Alphabetical Index 10-1

MidWestTech | New Holland TD5010, TD5020, TD5030, TD5040, TD5050 Tractor Operator'... Order the manual at mid-west-tech.com >