
OPERATOR'S MANUAL

CR9040
CR9060
CR9065
CR9070
CR9080
Combine

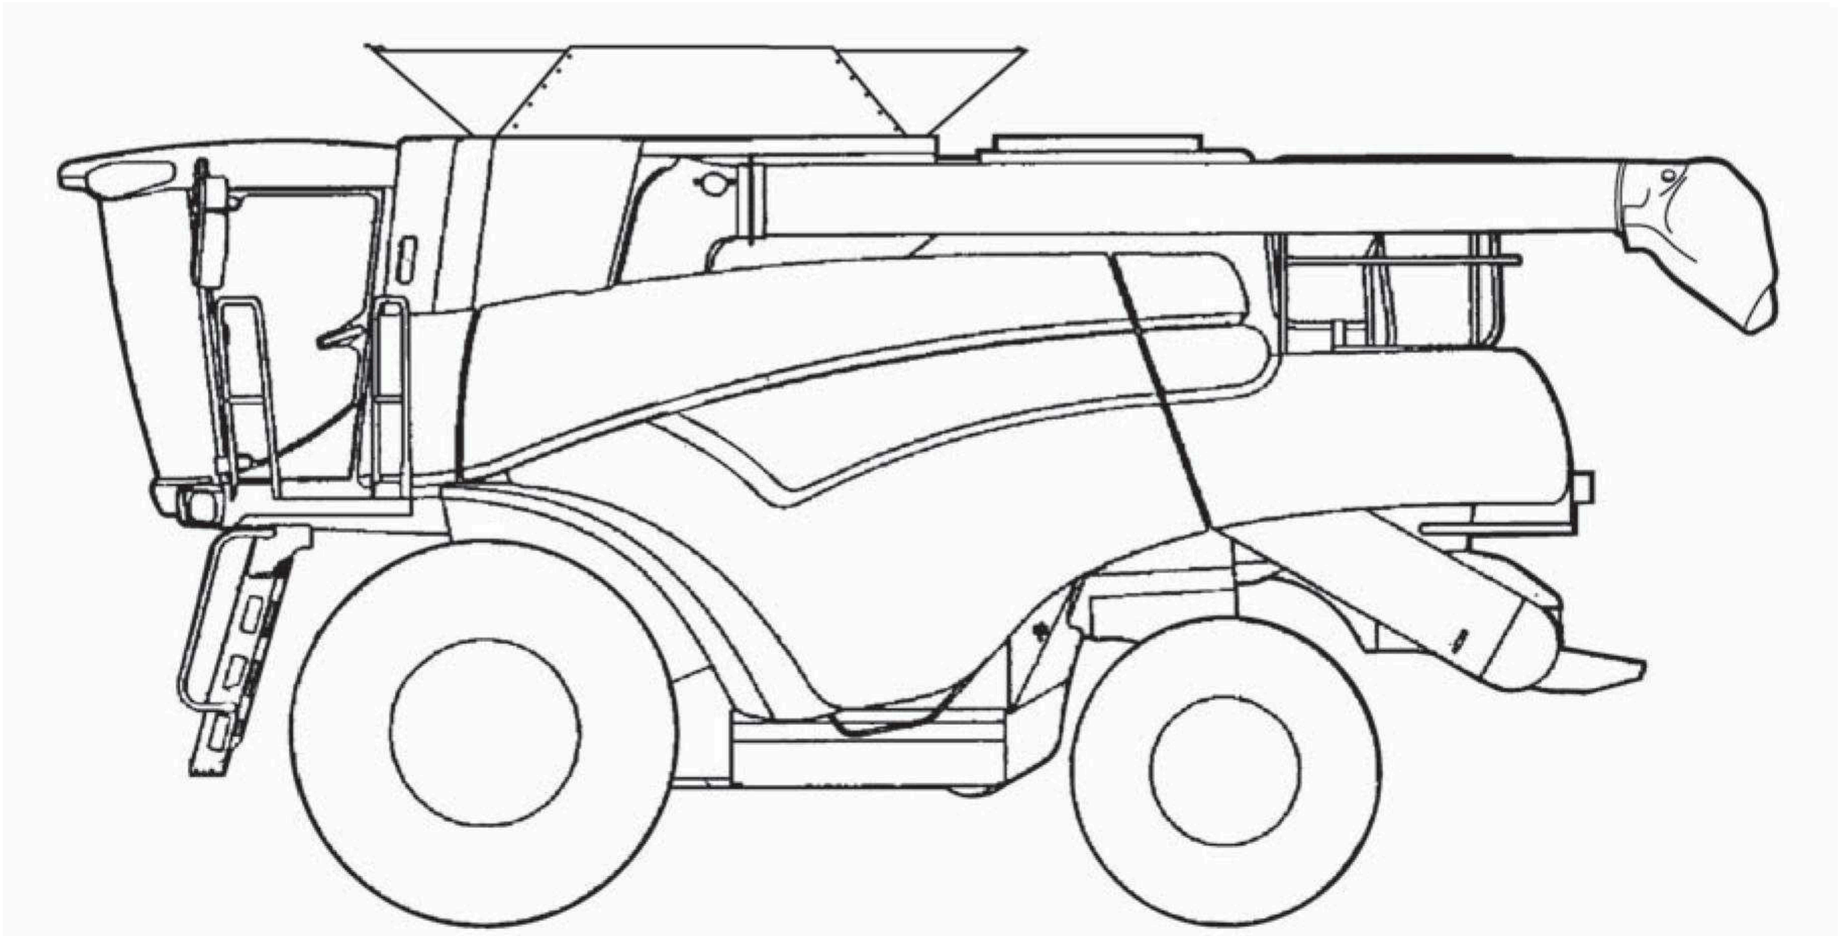

Part number 84358182
5th edition English
October 2010
Replaces part number 84226591

NEW HOLLAND AGRICULTURE

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine Operator's Manual | Publication 84358182
Order the manual at mid-west-tech.com >

Contents

1 GENERAL INFORMATION

Product identification 1-1
Note to the Owner 1-3
Intended use 1-4
Electro-Magnetic Compatibility (EMC) 1-5
Machine orientation 1-6
Biodiesel fuel - Biodiesel Fuels 1-7
Universal Symbols 1-8
International symbols 1-12

2 SAFETY INFORMATION

Safety alert symbol and signal word definition 2-1
Personal safety 2-2
Proposition 65 2-6
Safety signs 2-7
Personal safety 2-35
Protective devices 2-36
Fire extinguisher 2-38
Fire prevention 2-40
Battery safety 2-42
Maintenance Safety 2-43
Fuel storage 2-44
Wheels and tires 2-45

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Operator's platform 3-1
Emergency exit 3-3
Rear platform access 3-4
Engine access 3-5
Grain tank 3-6
Feeder 3-7
Shielding 3-8

OPERATOR'S SEAT

Operator's seat 3-11
Seat belt 3-14

INSTRUCTOR'S SEAT

Instructional seat 3-16
Seat belt 3-18

FORWARD CONTROLS

Steering column and control pedals 3-20

RIGHT-HAND SIDE CONTROLS

Multi-function handle 3-22
Right hand console 3-28
Start module 3-33
Monitor 3-34
Monitor - Overview 3-34

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >

IntelliView™ III monitor 3-36
Abbreviations used in the monitor 3-41
Home screen 3-43
Toolbox 3-45
Performance 3-59
Run screens 3-61
Automatic Crop Settings 3-63
Data management 3-70
Calibrations 3-72
Screen layout setup 3-79
Alarms 3-90

OVERHEAD CONTROLS
Cab roof controls 3-96
Automatic temperature control (ATC) 3-101

EXTERIOR CONTROLS
Lighting and Mirrors 3-105
Other components 3-109
Lift cylinder locks 3-112
Wheel Chocks 3-112
Buzzer 3-113

Lights
Dimmed lights 3-114
Side lights 3-115

4 OPERATING INSTRUCTIONS

STARTING THE UNIT
Before Driving the Combine 4-1
Starting the engine 4-2
Daily Start up Procedure 4-2

STOPPING THE UNIT
Stopping the engine 4-3

MOVING THE UNIT
Driving the vehicle 4-4
Gear shifting system 4-5
Differential lock system 4-6

PARKING THE UNIT
Parking brake 4-7

5 TRANSPORT OPERATIONS

SHIPPING TRANSPORT
Lifting the machine 5-1
Tie downs for shipping 5-2

RECOVERY TRANSPORT
Towing 5-3

6 WORKING OPERATIONS

Header
Attaching the header 6-1

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >

Detaching the header 6-4
Header Height Control 6-6
Reel to ground speed synchronisation 6-11

Introduction to Harvesting

Description of operation 6-12
Machine settings for different crops 6-17
Change from grain to maize configuration 6-19
Harvesting performance 6-21
SmartSteer™ system 6-26
Row guidance 6-29
IntelliCruise™ system 6-31

Feeding

Feeder drum - adjustment 6-37
Feeder Cradle adjustment 6-37
Straw elevator bottom plate 6-37
Limitation of the lateral float system 6-38
Reversing system 6-39
Stone ejection system 6-42
Stone door closing 6-44

Threshing

Rotor 6-45
Rotor unblock 6-46
Concaves 6-47
Concave - Remove 6-51
Concave - Adjust 6-55

Separating

Separator grate 6-59
Separator grate - Remove 6-60
Rotor covers with adjustable vanes 6-62
Discharge beater 6-63
Beater grate - adjustment 6-63
Beater grate cover 6-63

Cleaning

Cleaning shoe 6-64
Sieves 6-65
Sieves - removal 6-67
Sieves - installation 6-70
Sieve types 6-73
Cleaning fan 6-75
Returns system 6-76
Roto-threshers 6-78

Grain storage/unloading

Grain tank filling system 6-80
Grain sample access 6-84
Grain tank window 6-85
Grain tank with extensions 6-86
Grain tank with covers 6-87

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >

(8) Rotor speed switch:

- Push the switch to increase the rotor speed (as viewed from the operator's seat).
- Pull the switch to decrease the rotor speed (as viewed from the operator's seat).
- When touching this switch, the rotor speed is shown in a "pop-up" screen on the display monitor.

(9) Four wheel drive engagement switch (optional):



- Press up to turn ON
- Press down to turn OFF

NOTE: *If tracks are installed: four wheel drive is available in all the gears (if field or road mode selected)*


NOTE: *If tracks are not installed: four wheel drive is only available in first, second and third gear (if field mode selected)*

(10) Cleaning fan speed rocker switch:

- Push the switch to increase the fan speed (as viewed from the operator's seat).
- Pull to decrease the fan speed (as viewed from the operator's seat).

NOTE: *When touching this switch, the fan speed RPM is shown on a "pop-up" screen on the display monitor.*

(11) Powered Rear Axle dual speed switch (optional):

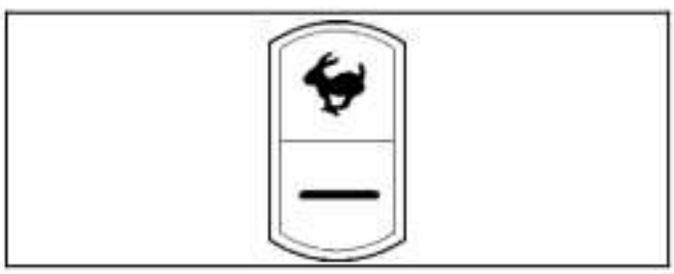

- Press the top for high speed
  (Only if four wheel drive tumbler switch is engaged)
  (Increasing of the speed by approximately **35 %**)
- Press the bottom for low speed

(12) Rotor concave clearance control rocker switch:

- Push the switch to increase the concave clearance (as viewed from the operator's seat).
- Pull the switch to decrease the concave clearance (as viewed from the operator's seat).


NOTE: *When touching this switch, the rotor concave clearance is shown in a "pop-up" screen on the display monitor.*

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >

Fuel filter - Cursor 9 CR9040/9060

The fuel filter **(1)** should be changed every 600 operating hours. Proceed as follows:


1. Wipe the top of the filter head clean.
2. Unscrew the fuel filter, using a filter wrench.
3. Apply a film of fuel to the seal of the new fuel filter.
4. Screw the new filter on by hand and tighten it securely (firmly against the head and then an additional 1/4 to 1/2 turn) DO NOT USE TOOLS.
5. Bleed the fuel system, refer to **7-27**.

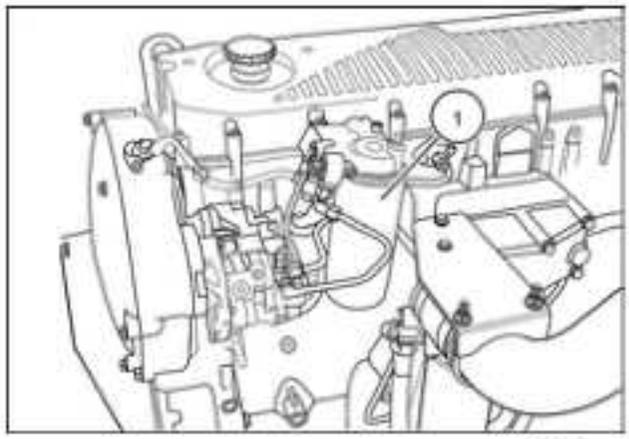

Fuel filter - Cursor 10/13 CR9065/9070/9080

The fuel filter **(1)** should be changed every 600 operating hours. Proceed as follows:

1. Wipe the top of the filter head clean.
2. Unscrew the fuel filter, using a filter wrench.
3. Apply a film of fuel to the seal of the new fuel filter.
4. Screw the new filter on by hand and tighten it securely (firmly against the head and then an additional 1/4 to 1/2 turn) DO NOT USE TOOLS.
5. Bleed the fuel system, refer to **7-27**.

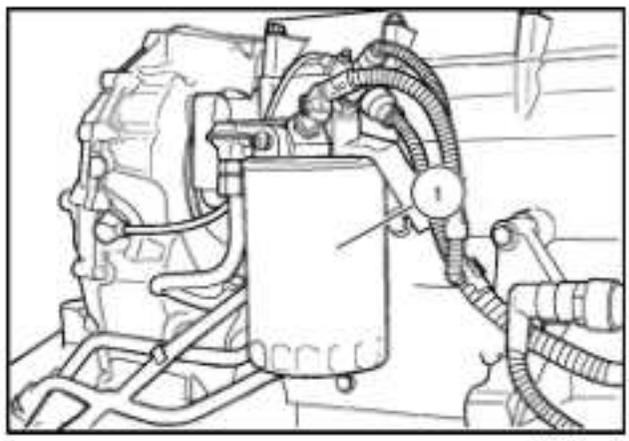


MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >

Counterweights

For some attachments, counterweights are a legal requirement to ensure a safe road transport.


Available counterweights (as accessory)

- Frame counterweights (to be attached to the rear frame): **35 kg** (**77.2 lb**)/element.

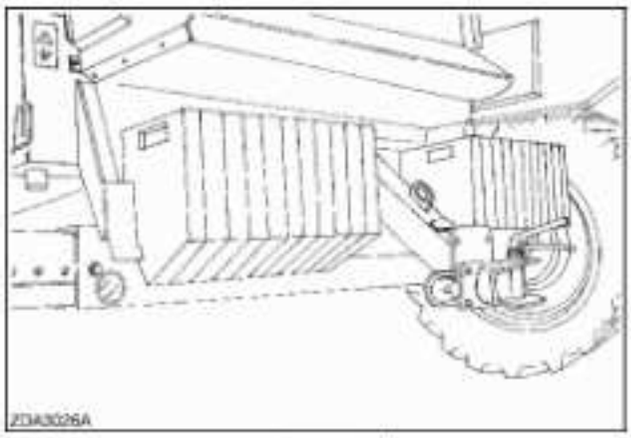

ZDA3026A-2 1

- Steering wheel counterweights (to be installed on the steering wheel rim): **20 kg** (**44.1 lb**)/element.

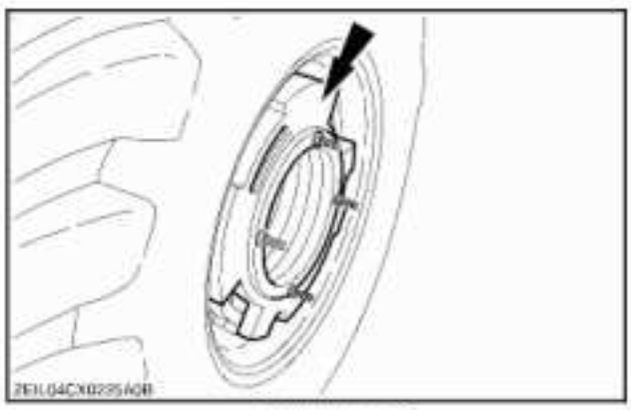

ZEIL04CX0225AGB

ZEIL04CX0225AGB-2 2

ATTENTION: *Do not use liquid weight (ballast) in wheels as this is not recommended and forbidden practice in some countries.*

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >


WARNING
Before starting engine or any function.
Warn bystanders.
Sound horn three times.
Failure to comply could result in death or serious injury.

Quantity: 1
English: 86640432
French: 86640433



86640432_B_HORN 41

(29) On the right hand side cab window.

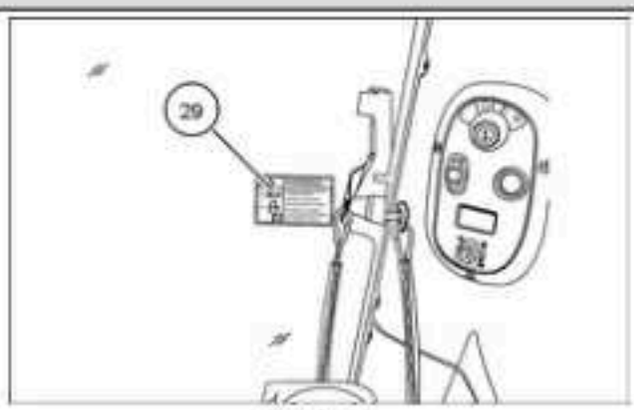

93168129 42


WARNING
Always fasten seatbelt during operation
Failure to comply could result in death or serious injury.

Quantity: 1
English: 86640447
French: 86640448



86640447_B 43

(30) On the right hand side of the cab windshield.

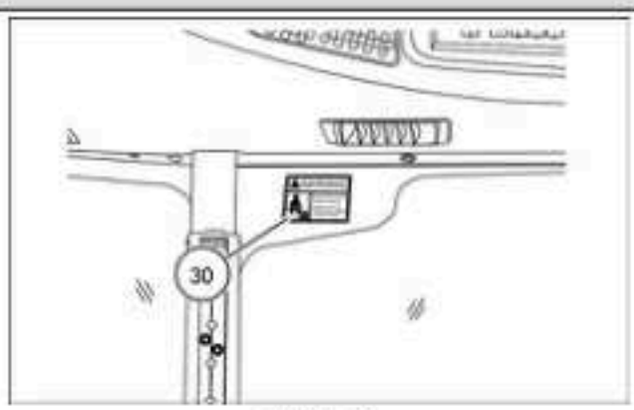

93168127 44

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >


Threshing hours - Displays the amount of hours the thresher has operated.


Time Road - Displays time in Road Mode.


Time Threshing - Displays and interactive window with the total time passed (counter) threshing. Allows the user to choose to reset the counter.

Vehicle Name - User entered.


Water in fuel


Weight Counter - Interactive counter that accumulates crop weight independent of the current active task values and allows user to reset the counter as required. Units are (lb) and (ton). Counter can be used for in-field data management activities. (truck / cart management, grain tank management, etc.).


Weight-D (Dry Weight) - Displays the total dry-basis weight recorded for the current active task (lb or ton).


Weight-W (Wet Weight) - Displays the total wet-basis weight recorded for the current active task (lb or ton).

Work Condition - Displays the current selected work condition. A work condition is a user defined field used to describe the field or crop conditions for Automatic Crop Settings. A work condition must be set to allow operation of the Automatic Crop Settings feature. Select window to select other work condition, edit existing condition or create new.


Working Width - Used with Yield Monitoring.

Working Width Reset Mode - Used with Yield Monitoring.


Work Rate Average - Used with Yield Monitoring.


Yield-A-D (Average Dry Yield) - Used with Yield Monitoring.


Yield-A-D (bushel) (Average Dry Yield) - Used with Yield Monitoring.


Yield-A-W - (Average Wet Yield) - Used with Yield Monitoring.


Yield-A-W (bushel) - (Average Wet Yield) - Used with Yield Monitoring.


Yield-I-D - Used with Yield Monitoring.


Yield-I-D (bushel) - Used with Yield Monitoring.


Yield-I-W - Used with Yield Monitoring.


Yield-I-W (bushel) - Used with Yield Monitoring.

MidWestTech | New Holland CR9040, CR9060, CR9065, CR9070, CR9080 Combine O... Order the manual at mid-west-tech.com >