A TEREX COMPANY

A TEREX BRAND

Service Manual

Serial Number Range
from TZ3403-001
to TZ3413-595

TZ™-34/20

Part No. 84382
Rev D
June 2013

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382

Order the manual at mid-west-tech.com >

Table of Contents

Introduction

Important Information ii
Revision History iii
Serial Number Legend v

Section 1 Safety Rules

General Safety Rules iv

Section 2 Specifications

Machine Specifications ..... 2 - 1
Performance Specifications ..... 2 - 2
Hydraulic Specifications ..... 2 - 2
Manifold Component Specifications ..... 2 - 3
Hydraulic Hose and Fitting Torque Specifications ..... 2 - 4
SAE and Metric Fastener Torque Chart ..... 2 - 6

Section 3 Scheduled Maintenance Procedures

Introduction ..... 3 - 1
Pre-delivery Preparation Report ..... 3 - 3
Maintenance Inspection Report ..... 3 - 5

Checklist A Procedures

A-1 Inspect the Manuals and Decals ..... 3 - 6
A-2 Perform Pre-operation Inspection ..... 3 - 7
A-3 Perform Function Tests ..... 3 - 7
A-4 Torque the Lug Bolts - ANSI/CSA/AS ..... 3 - 7
A-5 Torque the Lug Bolts - CE ..... 3 - 8

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures**, continued

A-6 Perform Hitch Maintenance - ANSI/CSA/AS ..... 3 - 8
A-7 Perform 30 Day Service ..... 3 - 9
A-8 Grease the Turntable Rotation Bearing and Rotate Gear ..... 3 - 9

Checklist B Procedures

B-1 Inspect the Batteries ..... 3 - 10
B-2 Inspect the Electrical Wiring ..... 3 - 11
B-3 Inspect the Electrical Contactor ..... 3 - 11
B-4 Test the Emergency Stop ..... 3 - 12
B-5 Test the Key Switch ..... 3 - 12
B-6 Test the Manual Override ..... 3 - 13
B-7 Test the Platform Rotation (if equipped) ..... 3 - 17
B-8 Perform Hydraulic Oil Analysis ..... 3 - 17
B-9 Perform Axle Maintenance - ANSI/CSA/AS ..... 3 - 18
B-10 Check the Wheel Bearings - CE ..... 3 - 18
B-11 Service the Hitch - CE ..... 3 - 19
B-12 Perform Axle Maintenance - CE ..... 3 - 19
B-13 Inspect the Parking Brake ..... 3 - 20
B-14 Service the Tongue Jack ..... 3 - 20

Checklist C Procedures

C-1 Grease the Platform Overload Mechanism (if equipped) ..... 3 - 21
C-2 Test the Platform Overload System (if equipped) ..... 3 - 21
C-3 Perform Axle Maintenance - ANSI/CSA/AS ..... 3 - 23

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Section 3 **Scheduled Maintenance Procedures**, continued

C-4 Replace the Hydraulic Tank Breather Cap Models with Optional Hydraulic Oil ..... 3 - 23

C-5 Grease the Axle Wheel Bearings - CE ..... 3 - 24

C-6 Adjust the Brakes - CE ..... 3 - 25

Checklist D Procedures

D-1 Perform Axle Maintenance - ANSI/CSA/AS ..... 3 - 26

D-2 Check the Boom Wear Pads ..... 3 - 26

D-3 Replace the Hydraulic Tank Return Filter ..... 3 - 27

D-4 Check the Turntable Rotation Bearing Bolts ..... 3 - 28

D-5 Inspect for Turntable Bearing Wear ..... 3 - 29

Checklist E Procedure

E-1 Test or Replace the Hydraulic Oil ..... 3 - 31

Section 4 **Repair**

Introduction ..... 4 - 1

Platform Components

1-1 Platform ..... 4 - 2

1-2 Platform Rotator (if equipped) ..... 4 - 2

Primary Boom Components

2-1 Cable Track ..... 4 - 7

2-2 Primary Boom ..... 4 - 9

2-3 Primary Boom Lift Cylinder ..... 4 - 13

2-4 Platform Leveling Cylinders ..... 4 - 14

Secondary Boom Components

3-1 Secondary Boom ..... 4 - 17

3-2 Secondary Boom Lift Cylinder ..... 4 - 19

Ground Controls

4-1 Level Sensor ..... 4 - 20

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

Specifications

Machine Specifications

Batteries	
Type	6V DC
Group	T-105
Quantity	4
Battery capacity	225AH
Reserve capacity @ 25A rate	447 minutes
Fluid capacities	
To TZ3407-483	
Hydraulic tank	2.2 gallons 8.4 liters
Hydraulic system (including tank)	3.9 gallons 14.8 liters
From TZ3407-484	
Hydraulic tank	2.8 gallons 10.6 liters
Hydraulic system (including tank)	4.5 gallons 17 liters

Tires and wheels - ANSI/CSA/AS	
Axle	
Tire size	ST205/75 R14
Load range	C
Lug nut torque, dry	100 ft-lbs 135 Nm
Tire pressure, maximum (cold)	50 psi 3.4 bar
Tongue jack	
Tire size	4.10 / 3.50-4
Tire pressure, maximum (cold)	50 psi 3.4 bar

Tires and wheels - CE	
Axle	
Tire size	185 R14C 104/102N
Lug bolt torque, dry	66 ft-lbs 90 Nm
Tire pressure, maximum (cold)	65 psi 4.5 bar
Tongue jack	
Tire size	8 x 2

For operational specifications, refer to the Operator's Manual.

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice.

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

Schematics

Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions in the appropriate Operator's Manual on your machine before attempting any maintenance or repair procedure.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.

About This Section

There are two groups of schematics in this section. An illustration legend precedes each group of drawings.


Electrical Schematics

⚠WARNING Electrocution hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

Hydraulic Schematics

⚠WARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.


General Repair Process

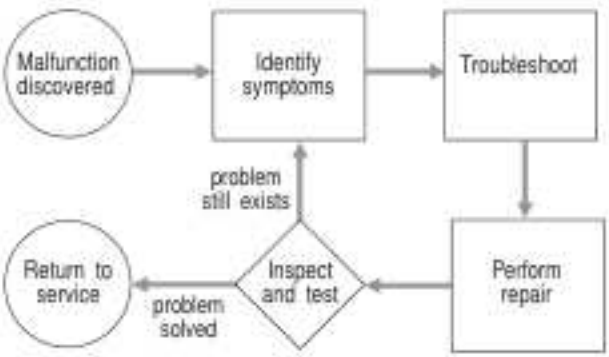

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

Platform Control Box Wiring Diagram - ANSI/CSA

(from serial number TZ3404-304 to TZ3406-204)

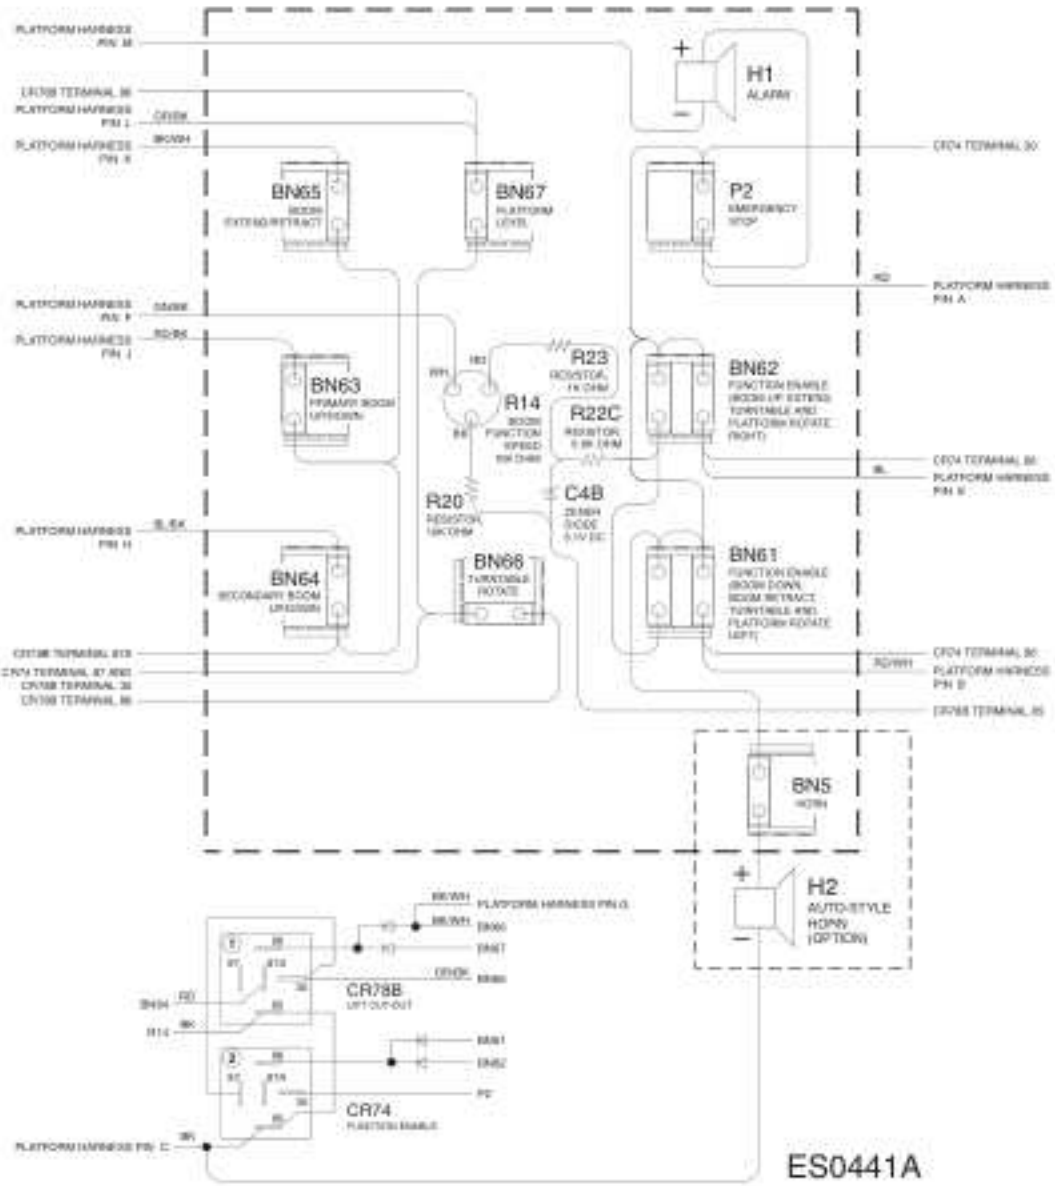

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

SPECIFICATIONS

SAE FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

SIZE	THREAD	Grade 5				Grade 8				A574 High Strength Black Oxide Bolts	
		LUBED		DRY		LUBED		DRY		LUBED	
		in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
1/4	20	80	9	100	11.3	110	12.4	140	15.8	130	14.7
	28	90	10.1	120	13.5	120	13.5	160	18	140	15.8
		LUBED		DRY		LUBED		DRY		LUBED	
		ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
5/16	18	13	17.6	17	23	18	24	25	33.9	21	28.4
	24	14	19	19	25.7	20	27.1	27	36.6	24	32.5
3/8	16	23	31.2	31	42	33	44.7	44	59.6	38	51.5
	24	26	35.2	35	47.4	37	50.1	49	66.4	43	58.3
7/16	14	37	50.1	49	66.4	50	67.8	70	94.7	61	82.7
	20	41	55.5	55	74.5	60	81.3	80	108.4	68	92.1
1/2	13	57	77.3	75	101.6	80	108.4	110	149	93	126
	20	64	86.7	85	115	90	122	120	162	105	142
9/16	12	80	108.4	110	149	120	162	150	203	130	176
	18	90	122	120	162	130	176	170	230	140	189
5/8	11	110	149	150	203	160	217	210	284	180	244
	18	130	176	170	230	180	244	240	325	200	271
3/4	10	200	271	270	366	280	379	380	515	320	433
	16	220	298	300	406	310	420	420	569	350	474
7/8	9	320	433	430	583	450	610	610	827	510	691
	14	350	474	470	637	500	678	670	908	560	759
1	8	480	650	640	867	680	922	910	1233	770	1044
	12	530	718	710	962	750	1016	990	1342	840	1139
1 1/8	7	590	800	790	1071	970	1315	1290	1749	1090	1477
	12	670	908	890	1206	1080	1464	1440	1952	1220	1654
1 1/4	7	840	1138	1120	1518	1360	1844	1820	2467	1530	2074
	12	930	1260	1240	1681	1510	2047	2010	2725	1700	2304
1 1/2	6	1460	1979	1950	2643	2370	3213	3160	4284	2670	3620
	12	1640	2223	2190	2969	2670	3620	3560	4826	3000	4067


METRIC FASTENER TORQUE CHART

• This chart is to be used as a guide only unless noted elsewhere in this manual •

Size	Class 4.6				Class 8.8				Class 10.9				Class 12.9			
(mm)	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
5	16	1.8	21	2.4	41	4.63	54	6.18	58	6.63	78	8.84	68	7.75	91	10.3
6	19	3.05	36	4.07	69	7.87	93	10.5	100	11.3	132	15	116	13.2	155	17.6
7	45	5.12	60	6.83	116	13.2	155	17.6	167	18.9	223	25.2	1.95	22.1	260	29.4
	LUBED		DRY		LUBED		DRY		LUBED		DRY		LUBED		DRY	
	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
8	5.4	7.41	7.2	9.88	14	19.1	18.8	25.5	20.1	27.3	26.9	36.5	23.6	32	31.4	42.6
10	10.8	14.7	14.4	19.6	27.9	37.8	37.2	50.5	39.9	54.1	53.2	72.2	46.7	63.3	62.3	84.4
12	18.9	25.6	25.1	34.1	48.6	66	64.9	88	69.7	94.5	92.2	125	81	110	108	147
14	30.1	40.8	40	54.3	77.4	105	103	140	110	150	147	200	129	175	172	234
16	46.9	63.6	62.5	84.8	125	170	166	226	173	235	230	313	202	274	269	365
18	64.5	87.5	86.2	117	171	233	229	311	238	323	317	430	278	377	371	503
20	91	124	121	165	243	330	325	441	337	458	450	610	394	535	525	713
22	124	169	166	225	331	450	442	600	458	622	612	830	536	727	715	970
24	157	214	210	285	420	570	562	762	583	791	778	1055	682	925	909	1233

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382 Order the manual at mid-west-tech.com >

Electrical Schematic - ANSI/CSA
(from serial number TZ3404-304 to TZ3405-189)

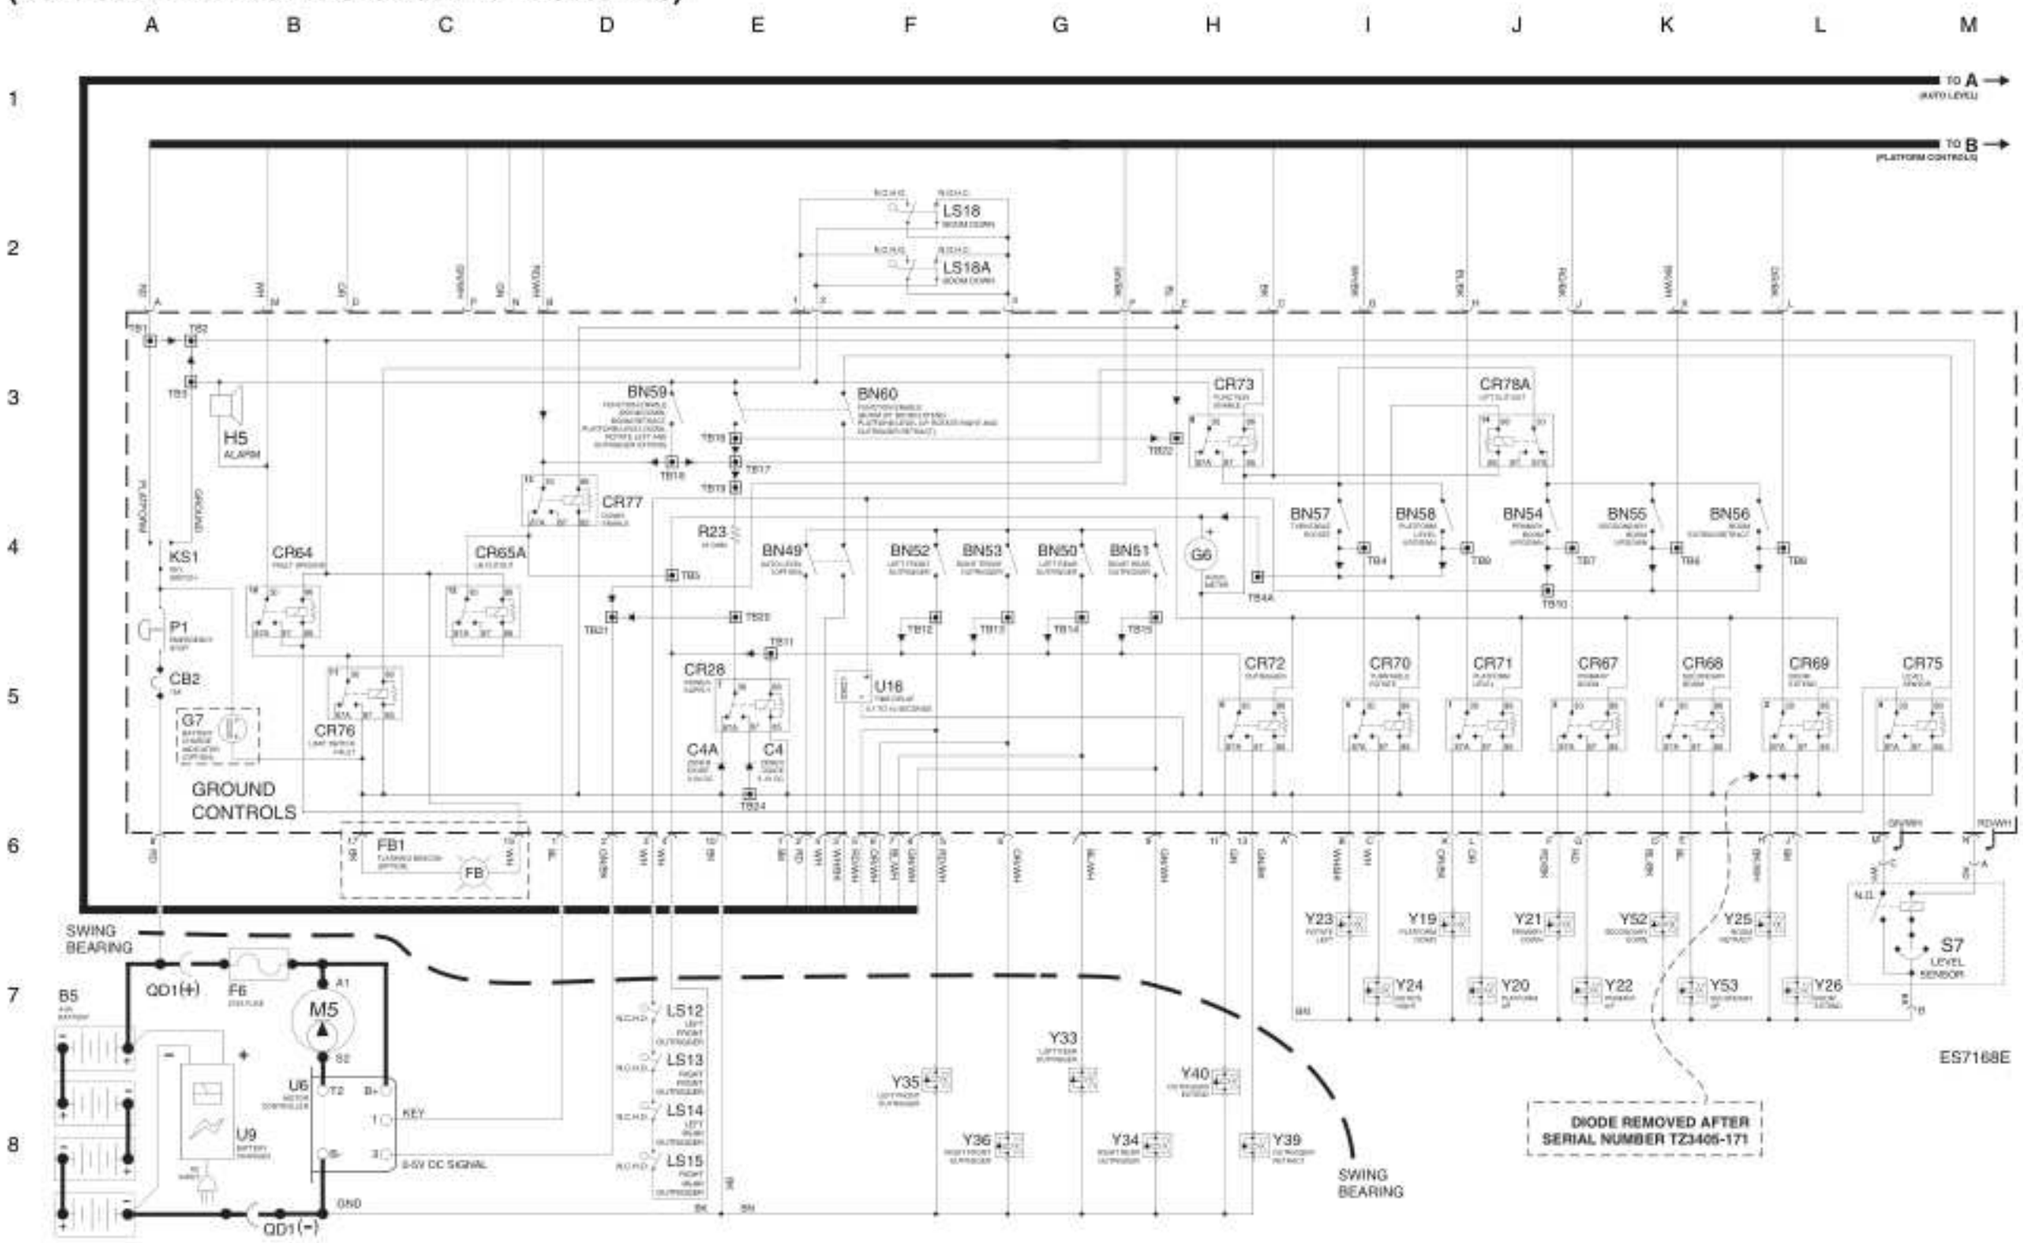

MidWestTech | Terex Genie TZ-34/20 Towable Boom Lift Service Manual | Publication 84382
Order the manual at mid-west-tech.com >