584E, 585E, 586E Forklift

Service Manual

8-73710


MidWestTech | Case 584E, 585E, 586E Forklift Service Manual | Publication 8-44811

Order the manual at mid-west-tech.com >

DISASSEMBLY


1. Remove the clutch cutout solenoid from the power shuttle by rotating the clutch cutout solenoid counterclockwise.

2. Remove the control arm from the control valve.

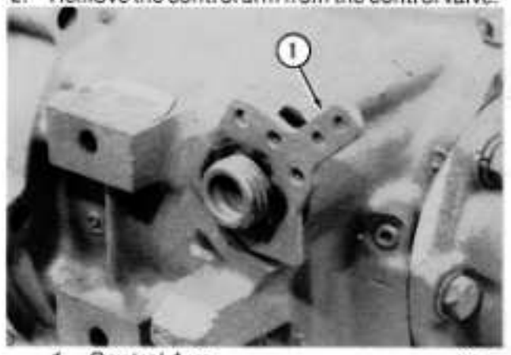


1. Control Arm 004728

3. Remove the snap ring from the control valve.

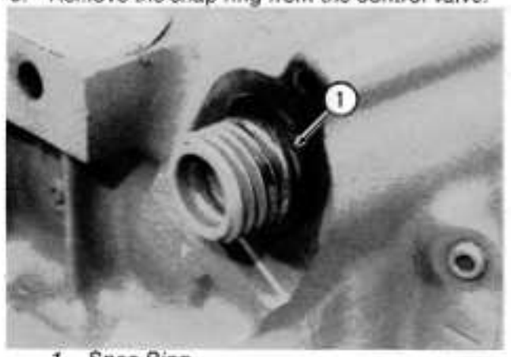

1. Snap Ring 003604

4. Loosen and remove the cap screws and lock washers that hold the cover.

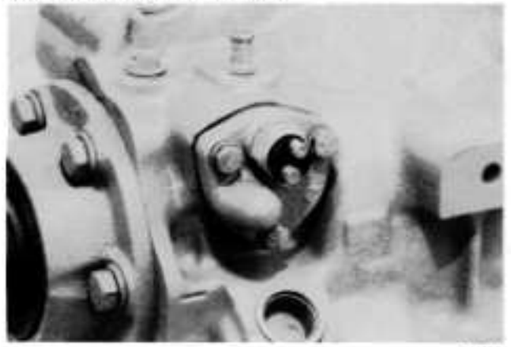


004707

5. Remove the cover, steel ball, and spring.




004844

6. Remove the detent plate.

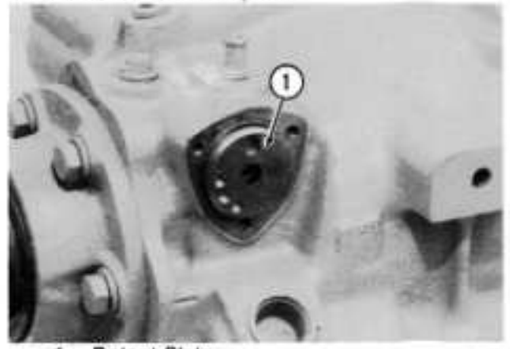

1. Detent Plate 004802

7. Remove the control valve from the housing.

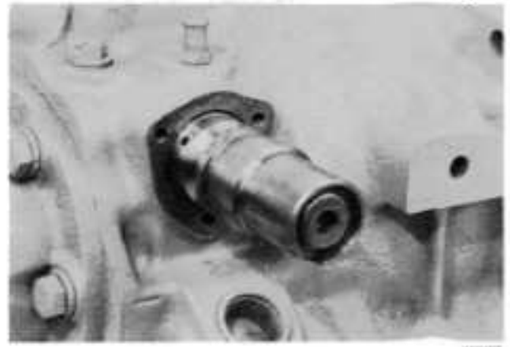

003607

MidWestTech | Case 584E, 585E, 586E Forklift Service Manual | Publication 8-44811

Order the manual at mid-west-tech.com >