821
Loader

Parts Catalog

8-5482

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >


PICTORIAL SECTION INDEX










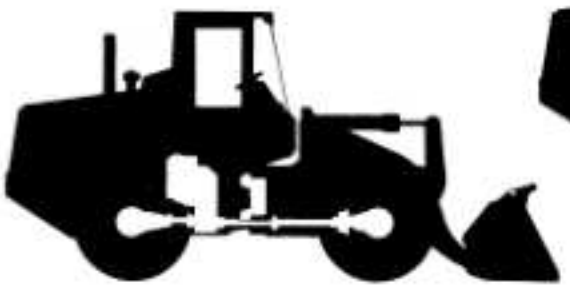





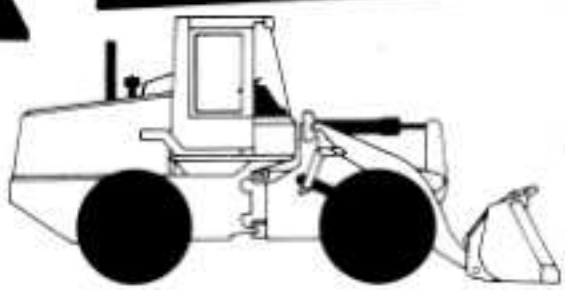

GENERAL 1

ENGINE 2

FUEL 3

ELECTRICAL 4

TRACK/ STEER. 5

POWER TRAIN 6

BRAKES 7

HYDRAULICS 8

CHASSIS/ MTD. EQUIP. 9

NUMERICAL INDEX 10

Bur 8-5482 Issued April, 1992 Printed in U.S.A.

MidWestTech | Case 821 Loader Parts Catalog | Publication 8-5482 Order the manual at mid-west-tech.com >

GENERAL INFORMATION

Indexes

Section 1 of this catalog contains a SN and P.I.N. location guide, alphabetical index, pictorial index of the sections included, and pictorial index(es) for quick location of hoses and tubes (and other system components in some catalogs). An alphabetical index also appears at the beginning of each section. Section 10 is the Numerical Index which lists all part numbers in alpha/numeric order with their page location and reference number.

Illustration and Text

The arrangement of this parts catalog is for easy identification of parts. All parts are illustrated in "exploded views" in proper relation to each other. Reference numbers used in the illustrations refer to those on the text pages. The text pages list reference number, part number, part description and the quantity required.

Abbreviations

P.I.N. "Product Identification Number"
SN "Serial Number"
NSS "Not Serviced Separately" in the part number column indicates this part is not available for service.
REF "Reference" in the part number column indicates this part has special service information. The page where this information can be found is given in the part description column.
UAR "Use As Required" in the quantity required column indicates the number of parts used is determined by service needs.

Right-Hand and Left-Hand Identification

The reference to right-hand and left-hand in this catalog is identified by the operator standing at the rear of the basic unit (without rear attachment), looking toward the front of the machine (in normal forward travel). For pages covering any machine attachments, right-hand and left-hand are defined by the operator sitting in the position for proper operation of the attachment.

Catalog Revisions and Supplements

Changes to the product may make it necessary to revise or add pages to this catalog. A cover sheet will list all pages released in a revision or supplement. Each new or revised page will have a new issue date. All revised and new pages must be put into the parts catalog as soon as they are received.

Parts Orders

Orders must specify product model, all necessary serial numbers, correct part number, complete description, quantity required, method of shipment, and shipping address.

Text Format Explanation

An assembly may contain many service items. The component parts of an assembly or subassembly are indented. The quantity required column lists the number of assemblies required for a complete machine, and the number of components required in a complete assembly or subassembly.

The example below illustrates the use of indents and other text page elements explained on this page.

REF.	PART NO.	DESCRIPTION	REQ'D.
1	D43567	FILTER ASSEMBLY - hydraulic oil, P.I.N. 7534840 and after	1
	D61903	HEAD ASSEMBLY - filter	1
2	NSS	HEAD - filter, order D61903 head assembly	1
3	D58199	VALVE - bypass	1
	D43800	KIT - filter element, replaces D35700 kit	1
4	NSS	ELEMENT - filter, order D43800 element kit	1
5	A27994	O-RING - filter	1
6	D61948	HOUSING - filter	1
7	REF	CANOPY - ROPS, machinery item, order from Machinery Price List	1
8	843065C1	HOSE - 132 inch long, reservoir to pump	1
9	113-323	BOLT - hex, 7/16 NC x 1-3/4 inch	2
10	814-8030	BOLT - hex, 8 - 1.25 x 30 mm	4

MidWestTech | Case 821 Loader Parts Catalog | Publication 8-5482 Order the manual at mid-west-tech.com >

ALPHABETICAL INDEX

A

Accelerator and Linkage 3-3
Accumulator 8-81
Air
  Cleaner - engine 2-13
  Compressor 7-33,7-35
  Compressor Governor - brakes 7-37
  Compressor System - brakes ..... 7-15 - 7-19
  Conditioning - cab ..... 9-101 - 9-111
  Dryer 7-39,7-41
  Dryer System 7-21
  Intake System 2-11
  Pressure Protection Valve 7-45
  Reservoir - brake 7-17,7-19
Alternator
  Assembly 4-3,4-5
  Mounting 4-61,4-63
Auxiliary Steering ..... 5-15 - 5-27
Axles - Front and Rear
  Assembly ..... 6-69 - 6-77
  Carrier 6-75
  Differential 6-75,6-77
  Gear and Pinion 6-75
  Housing 6-71
  Mounting 6-69
  Pinion Shaft Cage 6-75
  Planetary 6-71,6-73
  Yoke - flange 6-75

B

Backup Alarm 4-69
Batteries and Cables 4-59
Battery Cover 9-41
Beacon - rotating 4-75
Belts
  Alternator 2-7
  Compressor - air conditioning 9-109
  Drive - rotating beacon 4-75
  Fan 2-7
  Seat 9-47,9-49
Block - engine cylinder ..... 2-39 - 2-49
Blower - cab 4-81
Boot
  Alternator Cable 4-51
  Accelerator Rod 3-3
  Brake Actuator 7-49
  Fuel Solenoid Plunger 3-13
  Loader Remote Control ..... 8-71 - 8-79
  Rear Harness - operators compartment 4-49
  Starter Plunger 4-9,4-59
  Steering Pump Cable 4-55
  Steering Wheel 5-3,5-5

B

Boot-Cont.
  Suspension Seat 9-57
  Thermostat - air dryer 7-39,7-41
  Transmission Speed Selector 4-65
Box - operators compartment 9-65,9-67,9-113
Brake
  Actuator 7-49
  Actuator - parking brake 7-5,7-9
  Air Compressor 7-33,7-35
  Caliper 7-51,7-53
  Fluid Reservoir 7-27
  Governor - air compressor 7-37
  Master Cylinder 7-49
  Parking ..... 7-3 - 7-9
  Pedals 7-11
  Pressure Protection Valve 7-45
  Pressure Reducing Valve 7-45
  Reservoir - brake fluid 7-27
  Switches 7-11
  Valve 7-43
Brake System
  Air Compressor and Mounting 7-13
  Air Compressor to Reservoir 7-17,7-19
  Air Dryer 7-21
  Air Reservoir to Hydraulic Tank 7-25
  Brake Actuator to Brake Calipers 7-29,7-31
  Brake Fluid Reservoir to Actuators 7-27
  Engine to Air Compressor 7-15
  Upper Reservoir to Actuators 7-23
  Upper Reservoir to Brake Valve 7-23
Buckets
  Auxiliary 9-15,9-17
  Clam 9-15,9-17
  Loader ..... 9-9 - 9-13
  Teeth ..... 9-9 - 9-13,9-17

C

Cab - operators
  Air Conditioner and Heater ..... 9-95 - 9-111
  Blower 4-81
  Console Covers 9-69
  Doors and Windows ..... 9-79 - 9-93
  Electrical and Lighting ..... 4-25 - 4-37
  Exterior Covers 9-61
  Filters, Vents, and Louvers 9-75,9-77
  Glass ..... 9-59,9-79,9-81,9-87 - 9-91
  Handrail 9-59
  Interior Covers ..... 9-65 - 9-77
  Mirror - outer 9-63
  Mounting Parts 9-59
  Pedestal Covers 9-71,9-73
  Rotary Window Lock 9-93

MidWestTech | Case 821 Loader Parts Catalog | Publication 8-5482 Order the manual at mid-west-tech.com >