
# NEW HOLLAND

# TN55
# TN65
# TN70
# TN75

OPERATOR'S MANUAL

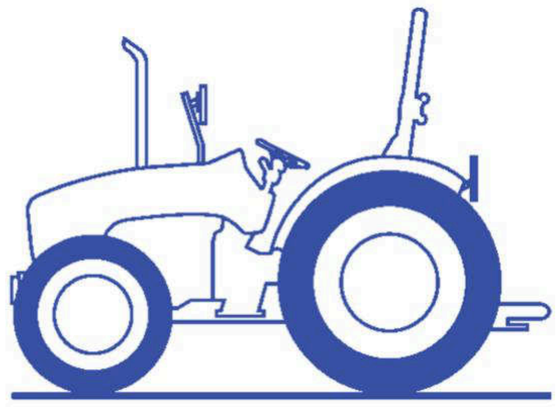

**86584836** 10/99
603.64.481.10

NEW HOLLAND

MidWestTech | New Holland TN55, TN65, TN70, TN75 Tractor Operator's Manual | Publication 86584836

Order the manual at mid-west-tech.com >

# CONTENTS

**Sect.** - Page


**GENERAL INFORMATION**

To the user ..... iii
To the user ..... iii
Tractor identification ..... iv
Important ecological considerations ..... v
Always work safely ..... vi
Working safely ..... vii
Safety decals ..... xiii
Standardised symbols ..... xvii

**SECTION 1 - GENERAL INFOREMATION CONTROLS AND INSTRUMENTS**

Safety covers and guards ..... 1-2
Controls and instruments ..... 1-4

**SECTION 2 - OPERATION**

Before using the tractor ..... 2-2
Analogue instrument panel ..... 2-6
Analogue instrument panel (not available on all markets) ..... 2-9
Transmission with range gear and mechanical shuttle
30km/h (8FWD+8REV) (not available on all markets) ..... 2-11
Transmission with range gear and synchronised mechanica shuttle
30 km/h (8FWD+8REV) (not available on all markets) ..... 2-13
Transmission with range gear and electro-hydraulic shuttle
30km/h (8FWD+8REV) (not available on all markets) ..... 2-15
Transmission with range gear and electro-hydraulic shuttle
30/40 km/h (16FWD+16REV) (not available on all markets) ..... 2-18
Transmission with range gear and mechanical shuttle
30 km/h (12FWD+12REV) ..... 2-24
Transmission with range gear and synchronised mechanical shuttle
30/40 km/h (16FWD+16REV) ..... 2-28
Transmission with creeper and mechanical shuttle
30/40 km/h (28FWD+16REV) ..... 2-32
Fast mechanical transmissions 40 km/h (4WD models) ..... 2-35




MidWestTech | New Holland TN55, TN65, TN70, TN75 Tractor Operator's Manual | Publica... Order the manual at mid-west-tech.com >

Mechanically controlled 4WD ..... 2-40
Electro-hydraulic controlled 4WD ..... 2-41
Differential lock ..... 2-42
Power take-off ..... 2-43
Mechanically controlled hydraulic lift ..... 2-47
Three-point linkage ..... 2-50
Towing equipment ..... 2-55
Remote control valves ..... 2-61
Wheel track adjustment ..... 2-66
Tyres ..... 2-74
Metal ballasting ..... 2-84
Liquid ballasting ..... 2-85
Seat adjustment ..... 2-89

**SECTION 3 - LUBRICATION AND MAINTENANCE**

Introduction ..... 3-1
Tractor refuelling ..... 3-2
Access for inspection and maintenance ..... 3-4
Lubrication and maintenance table ..... 3-5
Flexible maintenance ..... 3-7
Instrument panel indicator lights ..... 3-9
Every 10 hours of work ..... 3-11
Every 50 hours of work ..... 3-12
Every 300 hours of work ..... 3-15
Every 900 hours of work ..... 3-19
Every 1200 hours of work or every year ..... 3-20
Every 1200 hours of work or every two years ..... 3-21
General maintenance ..... 3-24

**SECTION 4 - Troubleshooting**

**SECTION 5 - Specifications and data**

**SECTION 6 - Alphabetic index**



MidWestTech | New Holland TN55, TN65, TN70, TN75 Tractor Operator's Manual | Publica... Order the manual at mid-west-tech.com >