1818 Uni-Loader

Service Manual

8-69350

MidWestTech | Case 1818 Uni Loader Service Manual | Publication 8-66102

Order the manual at mid-west-tech.com >

1818 Uni-Loader Service Manual
8-66102
Table of Contents

Description	Section No.	Form No.
Battery	4005	8-44360
Starter and Solenoid for Onan P218 2 Cylinder Gasoline Engine	4006	8-57860
Starter Motor for Kubota D850 3 Cylinder Diesel Engine	4006	8-57790
Alternator and Rectifier / Regulator Unit for Onan P218 2 Cylinder Gasoline Engine	4007	8-57870
Alternator and Regulator for Kubota D850 3 Cylinder Diesel Engine	4007	8-57800
Power Train	**Tab 6**	
Removal and Installation of Power Train Components	6000	8-68230
Maintenance	6001	8-68240
Hydrostatic System Troubleshooting	6002	8-17820
Piston Pump	6004	8-68260
Motor	6005	8-68270
Sprocket, Chains, and Axles	6007	8-68290
Drive Belts	6010	8-68300
Wheels and Tires	6011	8-68310
Hydraulics	**Tab 8**	
Removal and Installation of Hydraulic Components	8000	8-68330
Maintenance	8001	8-68340
Hydraulic Schematics, Specifications and Troubleshooting	8002	8-17830
Cleaning the Hydraulic System and Hydrostatic System	8003	8-68360
Hydraulic pump	8004	8-68370
Loader Control Valve	8005	8-68380
Auxiliary Control Valve	8006	8-68390
Cylinders	8090	8-68400
Mounted Equipment	**Tab 9**	
Pedals and Levers	9000	8-17840
Loader	9001	8-68410
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9003	8-68420
Auxiliary Hydraulic Installation	9004	8-68430
Rear Pocket	**In Rear Pocket**	
Electrical Schematic, Gasoline Engine		B87793
Electrical Schematic, Diesel Engine		B87794
Hydraulic Schematic		B87969
Electrical Schematic Foldout Gasoline and Diesel Engines		8-41550

Bur 8-69052 Revised 01-01 Printed in U.S.A.

MidWestTech | Case 1818 Uni Loader Service Manual | Publication 8-66102 Order the manual at mid-west-tech.com >

1001

SAFETY RULES
SERVICE MANUAL INTRODUCTION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Safety Rules 1001-2

Service Manual Introduction 1001-5

Torque Specifications 1001-6

Grade 5 Bolts, Nuts, and Studs 1001-6

Grade 8 Bolts, Nuts, and Studs 1001-6

Grade 8.8 Bolts, Nuts, and Studs 1001-7

Grade 10.9 Bolts, Nuts, and Studs 1001-7

Grade 12.9 Bolts, Nuts, and Studs 1001-7

Steel Hydraulic Fittings 1001-8

Split Flange Mounting Bolts 1001-8


CASE CORPORATION

Bur 8-68110

Printed in U.S.A.
Issued July 1987

MidWestTech | Case 1818 Uni Loader Service Manual | Publication 8-66102

Order the manual at mid-west-tech.com >

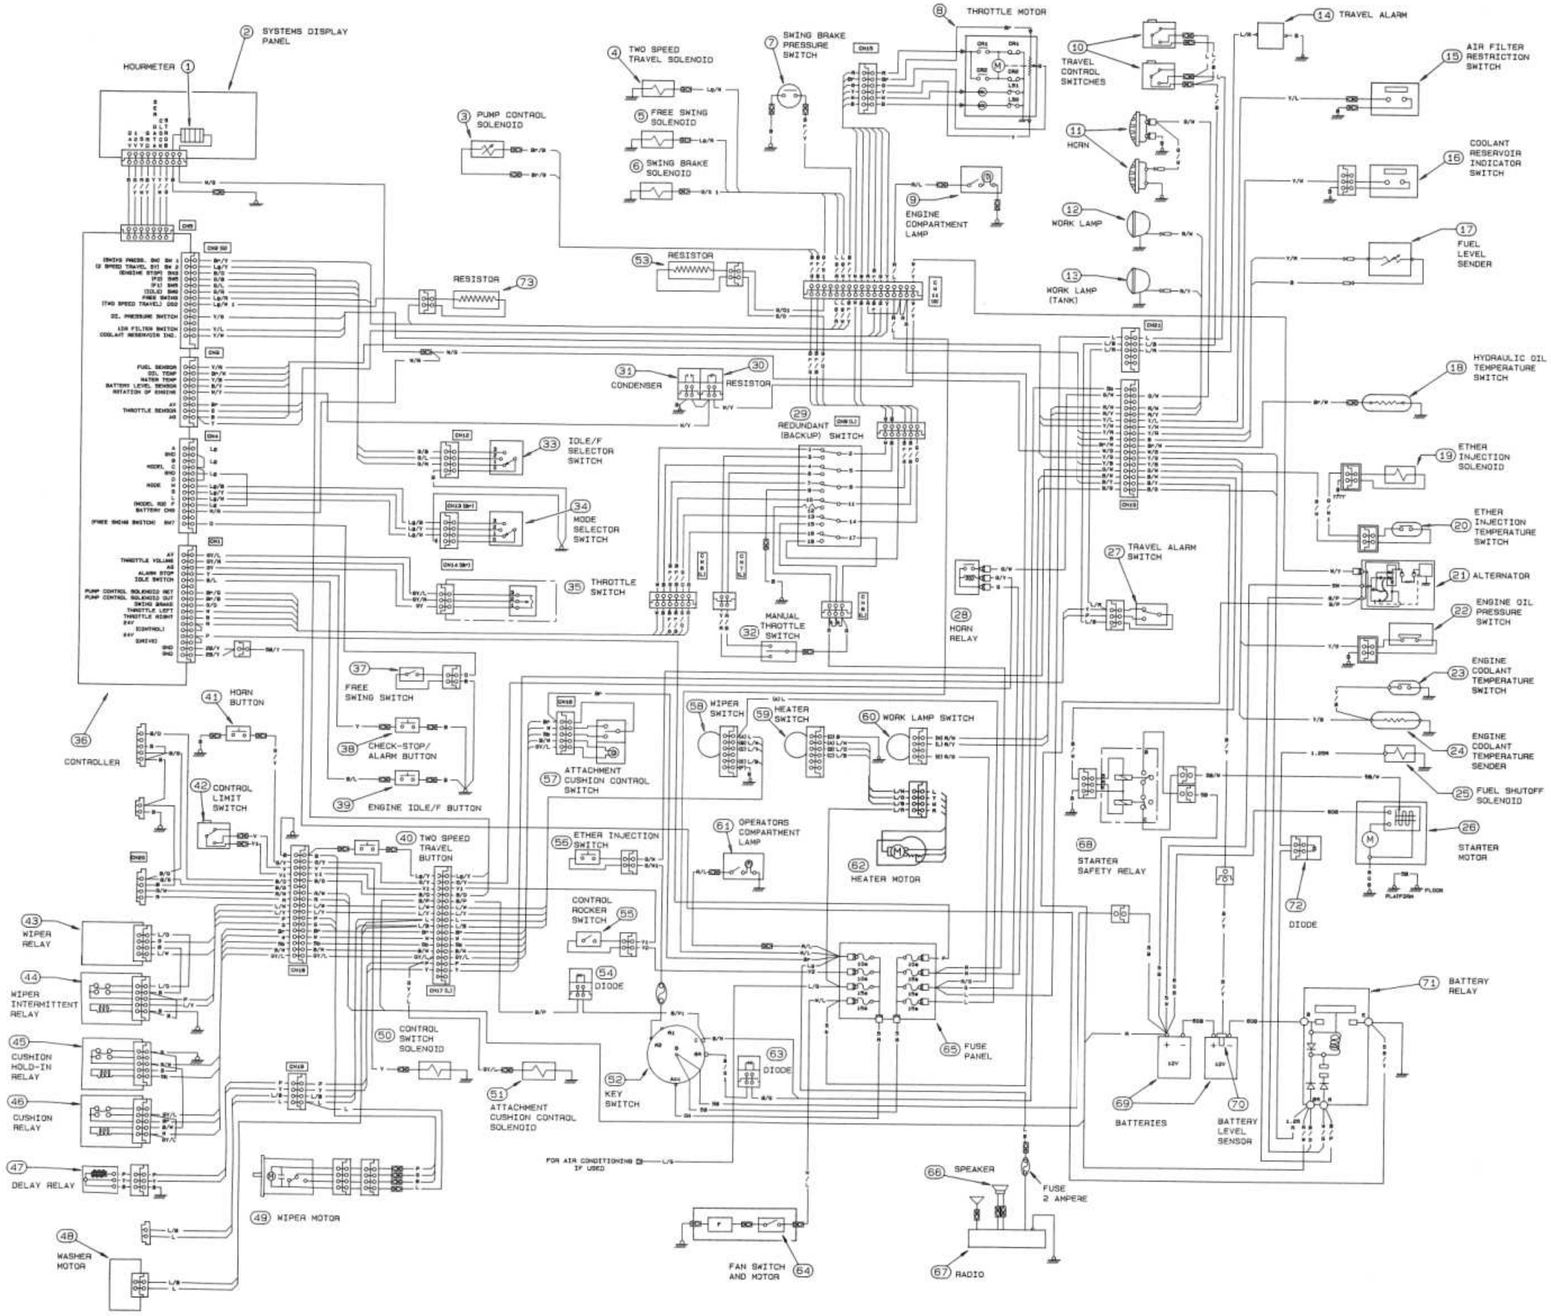

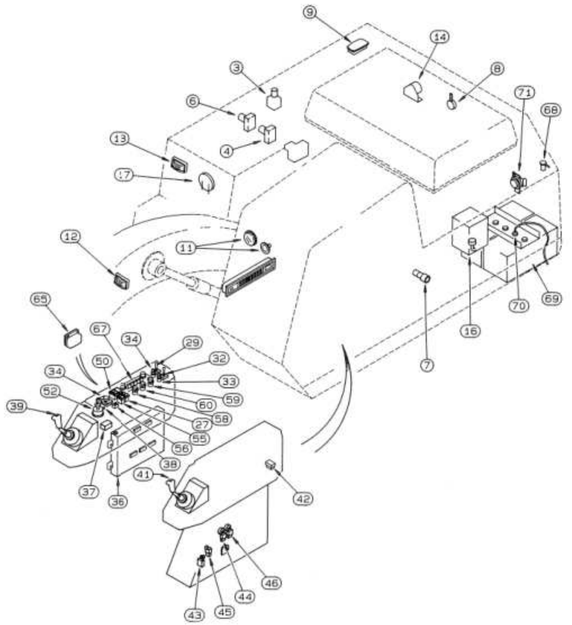


TABLE OF COLOR SYMBOLS			
SYMBOL	COLOR	SYMBOL	COLOR
B	BLACK	R	RED
W	WHITE	Y	YELLOW
Br	BROWN	Lg	LIGHT GREEN
P	PINK	Sb	SKY BLUE
V	VIOLET	L	BLUE
G	GREEN	Gy	GRAY
O	ORANGE		

NOTES:

1.




2.




3.




52 KEY SWITCH




59 HEATER SWITCH



58 WIPER SWITCH



60 WORK LAMP SWITCH



9020 HYDRAULIC AND ELECTRICAL SCHEMATIC

Additional copies of this hydraulic and electrical schematic can be ordered through Technical Publications Distribution System. The part number is 7-45970.

Order the manual at mid-west-tech.com >