

NEW HOLLAND

1441
1442

REPAIR MANUAL

NEW HOLLAND

SERVICE

86614447 1/02

MidWestTech | New Holland 1441, 1442 Disc Mower Conditioner Service Manual | Publication 86614447

Order the manual at mid-west-tech.com >

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Special Tools	2
	Specifications (Model 1441)	2
	Specifications (Model 1442)	4
	Lubrication	6
	Recommended Lubricants and Coolants	6
	Minimum Hardware Tightening Torques	7
	Installation of Adjustable Fittings	9
	Standard Torque Data for Hydraulic Tubes and Fittings	9
	Pipe Thread Fitting Torque	10
	Installation of ORFS (O-ring Flat Faced) Fittings	10

SECTION 31 - IMPLEMENT POWER TAKE OFF (PTO)

Chapter 1 - Drive Lines (Standard Tongue)

CONTENTS

Section	Description	Page
	Driveline (Standard Tongue)	2
	Introduction	2
	Primary PTO	3
	Intermediate PTO	4
	Jackshaft	7
	Secondary PTO	10
	Slide Lock	13
	Auto-lok Slide Lock	16
	Standard Driveline Guards	20
	U-joints: Swivel Hitch Units	21
	Labor Guide	26

MidWestTech | New Holland 1441, 1442 Disc Mower Conditioner Service Manual | Publicat... Order the manual at mid-west-tech.com >

SECTION 31 - IMPLEMENT POWER TAKE OFF (PTO)

Chapter 2 - Slip Clutch

CONTENTS

Section	Description	Page
	Introduction	2
	Slip Clutch	2
	Overrunning Clutch	8
	Labor Guide	12

SECTION 31 - IMPLEMENT POWER TAKE OFF (PTO)

Chapter 3 - Gearbox (Swivel Hitch)

CONTENTS

Section	Description	Page
	Introduction	2
	Special Tools	2
	Swivel Hitch Gearboxes	5
	Upper Gear Box	21
	Upper Gearbox and Neck Assembly	24
	Lower Gear Box	36
	Lower Gearbox and Neck Assembly	39
	Lower Gearbox, Neck Assembly, and Upper Gearbox	51
	Labor Guide	55

MidWestTech | New Holland 1441, 1442 Disc Mower Conditioner Service Manual | Publicat... Order the manual at mid-west-tech.com >

SECTION 35 - HYDRAULIC SYSTEM


Chapter 1 - Cylinders

CONTENTS

Section	Description	Page
	Introduction	2
	Hydraulic Diagram	4
	Bleeding Air from the Lift Cylinders	5
	Lift Cylinder Removal	6
	Master Cylinder - Disassembly	7
	Master Cylinder - Inspection	8
	Master Cylinder - Assembly	8
	Slave Cylinder - Disassembly	9
	Slave Cylinder - Inspection	10
	Slave Cylinder - Assembly	10
	Header Tilt Cylinder Removal	11
	Header Tilt Cylinder Disassembly	12
	Header Tilt Cylinder Assembly	14
	Header Tilt Cylinder Installation	17
	Tongue Swing Cylinder Removal	19
	Tongue Swing Cylinder Disassembly	20
	Tongue Swing Cylinder Assembly	21
	Tongue Swing Cylinder - Installation	24
	Labor Guide	26

MidWestTech | New Holland 1441, 1442 Disc Mower Conditioner Service Manual | Publicat... Order the manual at mid-west-tech.com >


7. Turn over the neck assembly and remove the bearing race, 1, from the outer neck assembly.

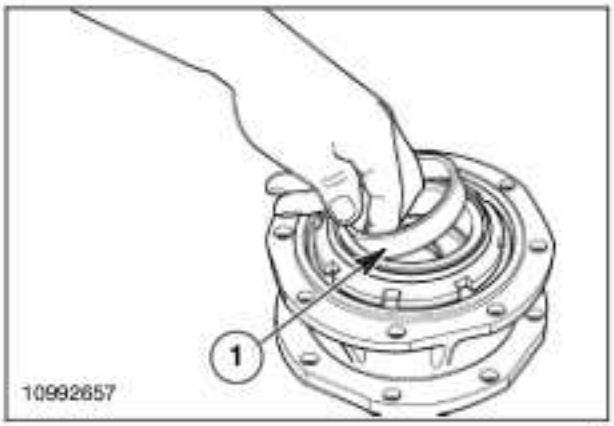

26

8. Remove the seal from the outer neck assembly.


NOTE: *Removing the seal will damage it. Replace all seals that are removed from the gearbox.*

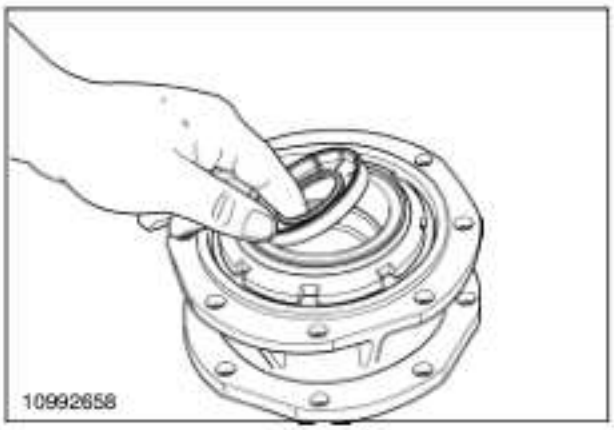

27

9. Remove the lock nut, 1, from the outer neck assembly. Use the special lock nut tool (local manufacture) shown in Figure 4. Leave two or more of the eight neck bolts and nuts assembled to hold the inner neck in place during lock nut removal.

NOTE: *The lock nut is assembled with Loctite. Use heat if necessary to loosen the lock nut.*

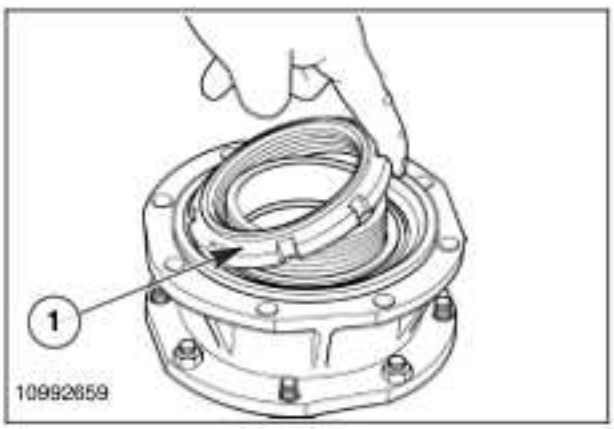


28

MidWestTech | New Holland 1441, 1442 Disc Mower Conditioner Service Manual | Publicat... Order the manual at mid-west-tech.com >


INTRODUCTION

The 1441/1442 pivot-tongue disc mower- conditioner is equipped with flashing amber lights, and red tail/brake lights to improve machine visibility and to warn operators of other vehicles.

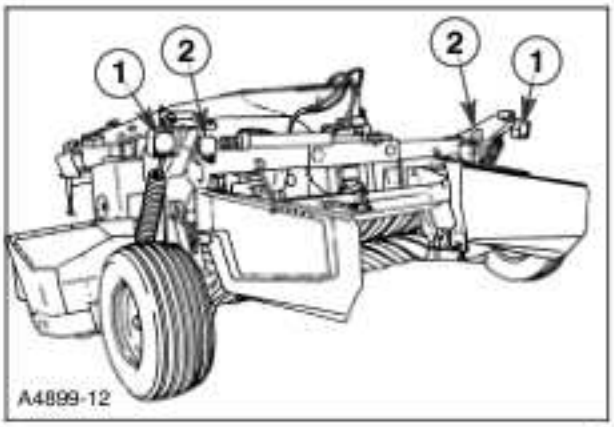

1

The wire harness uses a 7-pin trailer connector, 1, which conforms to SAE J560 standard. A storage mount, 2, for the trailer connector is provided on the top of the tongue; press the connector into the mount and rotate the connector 1/4 turn to latch it in the mount.

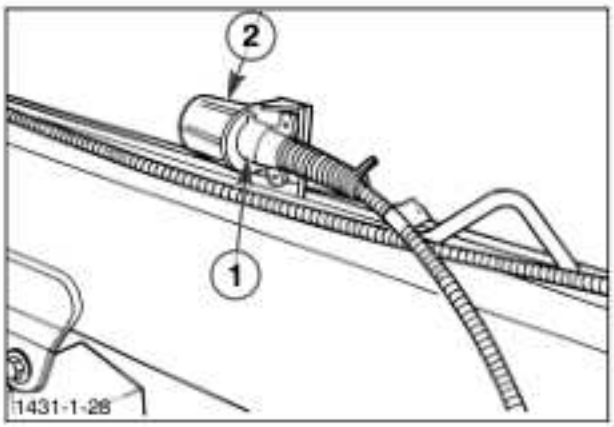

2

MidWestTech | New Holland 1441, 1442 Disc Mower Conditioner Service Manual | Publicat... Order the manual at mid-west-tech.com >